

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Women's Eco-Drive Dress Classic Crystal Watch EW1908-59A User Manual

Citizen EW1908-59A

Citizen Women's Eco-Drive Dress Classic Crystal Watch User Manual

Model: EW1908-59A

INTRODUCTION

This manual provides detailed instructions for the proper use, setup, maintenance, and troubleshooting of your new Citizen Women's Eco-Drive Dress Classic Crystal Watch, Model EW1908-59A. Your watch features Citizen's innovative Eco-Drive technology, which powers the watch using any light source, eliminating the need for battery replacement. It is crafted with 48 crystals on the two-tone stainless steel case and bracelet, featuring a silver dial and a date display. For optimal performance and longevity, please read this manual thoroughly before using your watch.

PRODUCT OVERVIEW



Front view of the Citizen Eco-Drive Dress Classic Crystal Watch, Model EW1908-59A, showcasing the silver dial, gold-tone accents, and crystal-set bezel.



Side profile of the watch, highlighting the slim case design and the two-tone stainless steel bracelet.



Rear view of the watch, showing the stainless steel case back and the clasp mechanism of the bracelet.

Initial Charge

Your Citizen Eco-Drive watch is powered by light. Before first use, or if the watch has stopped, ensure it is fully charged.

1. Place the watch in direct sunlight or under a bright artificial light source.
2. For a full charge, expose the watch to direct sunlight for approximately 8-10 hours. For indoor light, it may take significantly longer (e.g., 40-50 hours under a fluorescent lamp).
3. The second hand will move normally once sufficient charge is accumulated. If the second hand moves in 2-second intervals, it indicates a low power warning and requires charging.

Setting Time and Date

1. Pull the crown out to the first click for date adjustment, or to the second click for time adjustment.
2. To set the date: Pull the crown out to the first click. Turn the crown clockwise or counter-clockwise until the desired date appears. *Avoid setting the date between 9:00 PM and 1:00 AM, as this may damage the date mechanism.*
3. To set the time: Pull the crown out to the second click. Turn the crown to move the hour and minute hands to the correct time. Push the crown back in to the normal position to start the watch.

Adjusting the Bracelet

The stainless steel bracelet can be adjusted by adding or removing links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch repair professional to avoid damage.

OPERATING THE WATCH

Basic Timekeeping

Once set and charged, your Eco-Drive watch will continuously keep accurate time. The second hand moves in 1-second intervals when fully charged.

Date Display

The watch features a date display window. The date automatically advances at midnight. If the watch stops due to insufficient charge, the date may need to be reset once the watch is recharged and running.

Water Resistance

This watch is rated for 100 meters (330 feet) water resistance. This makes it suitable for swimming and showering, but not for diving. *Do not operate the crown or push buttons when the watch is wet or submerged.*

MAINTENANCE

Cleaning

- Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and perspiration.
- For water-resistant models, you can use a slightly damp cloth. Ensure the crown is pushed in completely before wiping.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Charging Guidelines

To maintain optimal performance, expose your Eco-Drive watch to light regularly. Avoid storing the watch in dark places for extended periods, as this can lead to a complete discharge and require a longer recharge time.

Storage

When storing the watch for a long period, ensure it is exposed to light periodically to prevent complete discharge. Store it in a place where it can receive ambient light.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or second hand moves in 2-second intervals.	Insufficient charge.	Expose the watch to bright light (direct sunlight is best) for several hours until the second hand moves normally.
Time is incorrect.	Time needs to be reset after a full discharge or accidental adjustment.	Refer to the "Setting Time and Date" section to reset the time.
Date is incorrect.	Date needs to be reset (e.g., after months with fewer than 31 days) or after a full discharge.	Refer to the "Setting Time and Date" section to reset the date.
Condensation inside the crystal.	Sudden temperature change or water resistance compromise.	If condensation persists, take the watch to an authorized Citizen service center immediately.

SPECIFICATIONS

- **Model:** EW1908-59A
- **Movement:** Eco-Drive (Light-powered)
- **Case Material:** Two-tone Stainless Steel
- **Bracelet Material:** Two-tone Stainless Steel
- **Dial:** Silver
- **Crystal:** Mineral Crystal
- **Bezel:** Decorated with 48 Crystals
- **Water Resistance:** 100 Meters (330 Feet)
- **Functions:** 3-Hand, Date
- **Case Diameter:** 28mm
- **Weight:** 2.82 ounces
- **Country of Origin:** Japan

OFFICIAL PRODUCT VIDEOS

Your browser does not support the video tag.

This video provides an overview of Citizen's Eco-Drive technology, explaining how the watch is powered by light and never requires a battery.

Your browser does not support the video tag.

A detailed look at the Citizen Women's Eco-Drive Silhouette Crystal watch, Model EW1908-59A, showcasing its design and features.

Your browser does not support the video tag.

This video demonstrates general functionality and how the watch works.

WARRANTY AND SUPPORT

Limited Warranty

Your Citizen Eco-Drive watch comes with a **5 Year Limited Warranty**. This warranty covers manufacturing defects under normal use. Please refer to the official Citizen warranty documentation for full terms and conditions.

Customer Support

For further assistance, service, or warranty claims, please visit the official Citizen website or contact their customer support.

[Visit the Official Citizen Store on Amazon](#)

© 2024 Citizen Watch Company. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question