

[Manuals.plus](#) /

› [Beetel](#) /

› Beetel M60 Corded Phone User Manual

Beetel M-60

Beetel M60 Corded Phone User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Beetel M60 Corded Phone. Please read this manual carefully to ensure proper use and to maximize the functionality of your device. Keep this manual for future reference.

PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- One Base Unit of Landline Phone
- One Coil Cord
- One Handset
- One Main Line Cord (P&T Lead)

PRODUCT OVERVIEW

The Beetel M60 is a corded landline phone designed for reliable communication. It features a clear LCD display, speakerphone functionality, and memory for frequently dialed numbers.



Image: The Beetel M60 Corded Phone, showcasing its design and key components.



Image: The Beetel M60 Corded Phone highlighting its 10 two-touch memory feature for quick dialing.



Image: The Beetel M60 Corded Phone displaying its 16-digit LCD screen for caller ID and number display.



Image: The Beetel M60 Corded Phone illustrating its multiple flash options for call management.



Image: The Beetel M60 Corded Phone highlighting its 8 one-touch memory buttons for quick access to stored numbers.

SETUP INSTRUCTIONS

1. **Connect the Handset:** Plug one end of the coiled cord into the handset and the other end into the handset jack on the side of the phone base unit.
2. **Connect to Telephone Line:** Plug one end of the main line cord into the LINE jack on the back of the phone base unit and the other end into your telephone wall jack.
3. **Power Connection:** The phone is powered by the telephone line. No external power adapter is typically required for basic operation. However, for optimal performance of features like LCD backlight and speakerphone, ensure batteries (not included) are inserted if the model supports them.
4. **Initial Check:** Lift the handset and listen for a dial tone. If no dial tone is heard, recheck all connections.

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset or press the **SPEAKER** button.
2. Dial the desired phone number.
3. Wait for the call to connect.

Receiving a Call

1. When the phone rings, lift the handset or press the **SPEAKER** button to answer.
2. To end the call, place the handset back on the cradle or press the **SPEAKER** button again if in speakerphone mode.

Using the Speakerphone

- During a call, press the **SPEAKER** button to activate the speakerphone.
- Adjust the speaker volume using the dedicated volume control buttons.
- To switch back to the handset, simply lift the handset.

Phonebook and Memory Dialing

- The phone supports a phonebook of up to 50 numbers with names. Refer to the on-screen menu for adding and managing entries.
- Utilize the one-touch and two-touch memory buttons for quick dialing of frequently used numbers. Consult the phone's display and buttons for programming these memories.

Caller ID

- The 16-digit two-line LCD display shows incoming caller information (number and name, if available and subscribed to caller ID service).
- Review the 99 incoming call memory to see a list of recent calls.

Baby Call Function

- The Baby Call function allows a pre-programmed number to be dialed automatically when any key is pressed. This feature is useful for young children or emergencies. Refer to the phone's settings menu to enable and configure this function.

FEATURES OVERVIEW

- **FSK/DTMF Compatible Caller-ID:** Supports both FSK and DTMF caller ID systems, ensuring compatibility with most telephone networks.
- **LED Indication for Speaker:** An LED light indicates when the speakerphone is active.
- **Two-Way Speakerphone with Volume Control:** Allows hands-free communication with adjustable volume.
- **Baby Call Function:** Automatically dials a pre-set number when any button is pressed.
- **16-Digit Two-Line LCD Display:** Provides clear visibility for names, numbers, and menu options.
- **Language Selection:** Offers multiple language options for the display menu.
- **99 Incoming Calls Memory:** Stores details of the last 99 incoming calls for review.
- **10 Outgoing Calls Memory:** Stores details of the last 10 outgoing calls.
- **LCD with Blue Backlight:** Enhances readability in various lighting conditions.
- **Phonebook (50 Numbers with Name):** Stores up to 50 contact entries with both name and number.
- **Software Controlled Dialing Lock:** Provides security by preventing unauthorized outgoing calls.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the phone's surface. Avoid abrasive cleaners or solvents.
- **Environment:** Keep the phone away from direct sunlight, heat sources, and excessive moisture.
- **Cord Care:** Ensure telephone and handset cords are not tangled or stretched excessively to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Loose line cord connection; faulty telephone line.	Check all cable connections. Test with another phone if available. Contact your service provider.
Cannot hear caller / Low sound	Volume too low; faulty handset/speaker; line interference.	Adjust volume. Ensure handset is properly connected. If using speakerphone, ensure sufficient power (batteries).

Problem	Possible Cause	Solution
Caller ID not displayed	Caller ID service not subscribed; FSK/DTMF incompatibility; phone settings.	Contact your telephone service provider to ensure Caller ID service is active. Check phone settings for Caller ID display options.
Buttons not responding	Software lock enabled; physical damage.	Check if the dialing lock feature is active and disable it if necessary. If problem persists, contact support.

SPECIFICATIONS

Feature	Detail
Brand	Beetel
Model Number	M-60
Telephone Type	Corded
Color	Black
Power Source	Corded Electric
Dialer Type	Single Keypad
Answering System Type	Digital
Conference Call Capability	2 way
Multiline Operation	Multi-Line Operation
Caller ID	Yes
Item Weight	1.66 Pounds
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

This product comes with a manufacturer's warranty for 1 year from the date of purchase. Please retain your purchase receipt as proof of warranty.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Beetel customer support. Refer to the product packaging or the official Beetel website for the most current contact information.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question