

[Manuals.plus](#) /

> [VidPro](#) /

> Sony DCR-HC26 Camcorder Handheld Video Stabilizer - for Digital Cameras, Camcorders and Smartphones - Go Pro & Smartphone Adapters Included

VidPro DCR-HC26-SB-8

User Manual

VidPro Handheld Video Stabilizer

Model: DCR-HC26-SB-8

1. INTRODUCTION

Thank you for choosing the VidPro Handheld Video Stabilizer. This device is designed to provide exceptional stability and significantly reduce camera vibration, ensuring smooth, professional-looking footage. It is compatible with a wide range of digital cameras, camcorders, and smartphones, making it an essential tool for any videographer. This manual will guide you through the setup, operation, and maintenance of your new stabilizer.

2. SAFETY INFORMATION

- Always ensure your camera or device is securely mounted to prevent accidental drops.
- Do not overtighten screws, as this may damage the stabilizer or your device.
- Keep the stabilizer away from extreme temperatures and moisture.
- Store in a clean, dry place when not in use.
- This product is not a toy. Keep out of reach of children.

3. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- VidPro Handheld Video Stabilizer Unit
- GoPro Adapter
- Smartphone Adapter
- Counterweights

4. PRODUCT OVERVIEW

The VidPro Handheld Video Stabilizer features a robust design for optimal performance. Key components include a

comfortable foam-covered hand grip, a freely rotating handle for dynamic shots, a rubberized, non-slip mounting surface for secure device attachment, and a built-in bubble level for precise balancing.





Figure 4.1: The VidPro Handheld Video Stabilizer, showcasing its ergonomic design, mounting plate, and included adapters for smartphones and GoPro cameras. The main body is black with red accents, and a foam grip is visible.

5. SETUP

5.1. Assembly

Your VidPro stabilizer typically comes pre-assembled. If any components require attachment, ensure they are securely fastened according to the diagram in Section 4.

5.2. Attaching Your Device

1. Identify the appropriate adapter for your device (smartphone or GoPro).
2. Attach the adapter to your camera or smartphone.
3. Carefully place your device (with adapter) onto the rubberized, non-slip mounting surface of the stabilizer.
4. Secure your device using the mounting screw. Ensure it is tight enough to hold the device firmly but do not overtighten.

6. OPERATING THE STABILIZER

6.1. Balancing the Stabilizer

Proper balancing is crucial for effective stabilization.

1. With your device mounted, hold the stabilizer by the foam-covered hand grip.
2. Observe the built-in bubble level. The bubble should be centered to indicate a balanced setup.
3. Adjust the position of your device on the mounting plate or adjust the counterweights (if applicable) until the bubble is centered. This may require slight forward/backward or left/right adjustments.
4. A perfectly balanced stabilizer will remain level when held still.

6.2. Holding and Movement

Hold the stabilizer firmly by the comfortable foam-covered hand grip. The freely rotating handle allows for smooth panning and tilting motions without transferring your hand's movements directly to the camera. Practice walking and moving with the stabilizer to achieve fluid, cinematic shots.

7. MAINTENANCE

- Clean the stabilizer with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure all moving parts are free of dust and debris.
- Store the stabilizer in a protective case or bag to prevent scratches and damage.
- Periodically check all screws and connections to ensure they are secure.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Footage is shaky/unstable.	Improper balancing.	Re-balance the stabilizer using the built-in bubble level (refer to Section 6.1).
Device not securely mounted.	Mounting screw is loose.	Ensure the mounting screw is tightened securely (do not overtighten).
Difficulty achieving smooth movements.	Lack of practice or incorrect grip.	Practice holding and moving with the stabilizer. Utilize the freely rotating handle for smoother pans.

9. SPECIFICATIONS

Feature	Detail
Brand	VidPro
Model Number	DCR-HC26-SB-8
Item Weight	2.12 pounds
Compatibility	Digital Cameras, Camcorders, Smartphones (GoPro & Smartphone Adapters Included)
Key Features	Rubberized, non-slip mounting surface; Built-in Bubble Level; Comfortable foam-covered hand grip; Freely Rotating Handle

10. WARRANTY AND SUPPORT

VidPro products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official VidPro website.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact VidPro customer service through their official channels.

Online Support: [Visit the VidPro Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question