

[Manuals.plus](#) /

> [VidPro](#) /

> VidPro ZR300 Handheld Video Stabilizer User Manual

VidPro ZR300-SB-8

VidPro ZR300 Handheld Video Stabilizer User Manual

Model: ZR300-SB-8

INTRODUCTION

The VidPro ZR300 Handheld Video Stabilizer is designed to provide excellent stability and reduce camera vibration when recording. It is compatible with digital cameras, camcorders, and smartphones, ensuring smooth, professional-looking footage.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not overtighten screws, as this may damage the device.
- Keep the stabilizer away from extreme temperatures and moisture.
- Store in a clean, dry place when not in use.

PACKAGE CONTENTS

- VidPro ZR300 Handheld Video Stabilizer
- GoPro Adapter
- Smartphone Adapter
- Counterweights

SETUP

Follow these steps to set up your VidPro ZR300 stabilizer:

1. Attach Your Device:

For cameras/camcorders, screw the device onto the mounting plate's 1/4"-20 screw. For smartphones, attach the smartphone adapter to the mounting plate first, then secure your phone within the adapter. For GoPro cameras, use the provided GoPro adapter.





Image: The VidPro ZR300 Handheld Video Stabilizer showing its main body, handle, and the included smartphone and GoPro

adapters. The stabilizer features a curved arm, a foam-covered hand grip, and a mounting plate at the top.

2. **Balance the Stabilizer:**

The key to smooth footage is proper balancing. Adjust the position of your camera/device on the mounting plate and the counterweights at the bottom until the stabilizer remains level when held freely. Use the built-in bubble level for precise balancing.

3. **Adjust the Handle:**

The handle is freely rotating. Ensure it moves smoothly without obstruction, allowing for fluid camera movements.

OPERATING

Once balanced, the ZR300 is ready for use. Hold the foam-covered hand grip firmly but comfortably. Practice walking and moving smoothly to achieve the desired cinematic effect. The freely rotating handle allows the camera to remain stable even as your hand moves.

- **Walking Technique:** Bend your knees slightly and walk with a smooth, gliding motion to minimize vertical camera shake.
- **Panning and Tilting:** Use your wrist to gently pan (horizontal movement) or tilt (vertical movement) the stabilizer for controlled shots.
- **Low Angle Shots:** The design allows for easy low-angle shooting by simply lowering your arm.

MAINTENANCE

- **Cleaning:** Wipe the stabilizer with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the stabilizer in a cool, dry place, away from direct sunlight and dust.
- **Inspection:** Periodically check all screws and connections to ensure they are secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unstable footage	Improper balancing	Re-balance the stabilizer using the bubble level and adjusting device position/counterweights.
Handle not rotating smoothly	Debris or damage	Check for any obstructions. If damaged, contact support.
Device feels loose	Mounting screw not tight	Ensure the camera/adapter mounting screw is securely tightened.

SPECIFICATIONS

- Brand:** VidPro
- Model Number:** ZR300-SB-8
- Item Weight:** 2.12 pounds
- Manufacturer:** Vidpro
- First Available:** May 16, 2014
- Compatibility:** Digital Cameras, Camcorders, Smartphones (GoPro & Smartphone Adapters Included)
- Features:** Rubberized, non-slip mounting surface; Built-in Bubble Level; Comfortable foam-covered hand grip; Freely

Rotating Handle.

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or visit the official VidPro website. For technical support or inquiries, please contact VidPro customer service through their official channels. You can find more information and contact details on the [VidPro Store on Amazon](#).

© 2024 VidPro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question