

GLASSLOCK RP604

GLASSLOCK Rectangular Handy Tempered Glass Food Container 3700ml User Manual

Model: RP604

1. IMPORTANT SAFETY INFORMATION

- **DO NOT** use in a conventional oven, broiler, or on a stovetop. This container is **not oven safe**.
- Always handle glass with care. Tempered glass is durable but can break if subjected to sudden temperature changes or impact.
- Avoid extreme temperature changes. Do not place hot food directly into a cold container, or a cold container into a hot microwave.
- Ensure the lid is properly sealed to maintain airtight and leak-proof properties.
- Keep out of reach of children when not in use, especially if containing hot liquids.

2. PRODUCT OVERVIEW

The GLASSLOCK Rectangular Handy Tempered Glass Food Container (Model RP604) is designed for convenient and safe food storage. Made from all-natural tempered glass, it offers excellent durability and is free from harmful environmental hormones. The container features an airtight and leak-proof silicone seal, making it ideal for storing various types of food, including liquids, while preserving freshness.



Figure 1: GLASSLOCK Rectangular Handy Tempered Glass Food Container (Model RP604)

This image shows the clear tempered glass container with its translucent white lid, featuring a green and black handle mechanism. The container has a rectangular shape, and a label on the front indicates "Glasslock Handy Tempered Glass Food Container" and "Made in Korea 3700ml".

Key Features:

- All-Natural Tempered Glass Vessel
- Airtight and Leak-Proof Silicone Seal
- Built-in Handle on Lid for easy carrying
- Capacity: 3700ml (approximately 10.5 cups)
- Safe for Microwave Cooking (without lid for heating)
- Stain-proof and Odor-resistant

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the container and lid from its packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash the container and lid thoroughly with warm soapy water. Rinse completely and allow to air dry or dry with a clean cloth.
3. **Lid Assembly:** Ensure the silicone seal is properly seated within the lid's groove to ensure an airtight fit.

4. OPERATING INSTRUCTIONS

4.1. Storing Food

1. Place food into the clean glass container. Do not overfill; leave some space at the top for the lid.
2. Align the lid with the container and press down firmly on all four sides until the latches click into place. The built-in handle on the lid can be used for secure carrying once sealed.
3. To open, lift the latches on each side of the lid and then gently lift the lid off.

4.2. Microwave Use

- The glass container is safe for microwave cooking.

- **Always remove the lid before placing the container in the microwave.** The lid is not designed for microwave use.
- Use caution when removing the container from the microwave as it may be hot.

5. CARE AND MAINTENANCE

5.1. Cleaning

- **Hand Washing:** Wash the glass container and lid with warm soapy water. Use a soft sponge or cloth to avoid scratching the glass. Rinse thoroughly.
- **Dishwasher:** The product specifications state "Is Dishwasher Safe: No". Therefore, **this container is NOT dishwasher safe**. Hand washing is recommended.
- For stubborn food residues, soak the container in warm soapy water before cleaning.
- The silicone seal can be removed from the lid for thorough cleaning to prevent mold or odor buildup. Ensure it is completely dry before reinserting.

5.2. Storage

- Store containers with lids loosely placed on top or separately to allow air circulation and prevent odors.
- Stacking multiple containers should be done carefully to avoid chipping or breaking the glass.

6. TROUBLESHOOTING

Problem: Lid does not seal properly.

- **Solution:** Check if the silicone seal is correctly seated in the lid's groove. Ensure no food particles are obstructing the seal or the rim of the container.
- **Solution:** Verify that the container is not overfilled.

Problem: Odor retention in container or lid.

- **Solution:** Remove the silicone seal from the lid and wash both the lid and seal thoroughly. Allow them to air dry completely before reassembling.
- **Solution:** For persistent odors, a mixture of baking soda and water can be used to soak the container and seal.

Problem: Glass appears cloudy or stained.

- **Solution:** Ensure thorough rinsing after washing. Hard water deposits can sometimes cause cloudiness. A vinegar rinse can help.
- **Solution:** For food stains, soak the container in warm soapy water or a mild bleach solution (if safe for glass, check product guidelines) before scrubbing.

7. SPECIFICATIONS

Feature	Detail
Brand	GLASSLOCK

Feature	Detail
Model	RP604
Material	Tempered Glass, Silicone (Seal)
Capacity	3700 Milliliters (approx. 10.5 cups)
Container Shape	Rectangular
Product Dimensions	9 x 8 x 6 inches
Item Weight	4.49 pounds
Microwave Safe	Yes (container only, without lid)
Dishwasher Safe	No
Oven Safe	No
Special Features	Airtight, Leak Resistant, Built-in Handle
Recommended Uses	Cold food, Hot food, Meals
Manufacturer	EverydaySpecial.com
UPC	731642539442

8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact the manufacturer directly.

Manufacturer: EverydaySpecial.com

Note: Specific warranty terms may vary by region and retailer. Please retain your proof of purchase.

© 2024 GLASSLOCK. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question