

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Playmates](#) /

› [Playmates Electronic Sport Fishing Game Model 19081 Instruction Manual](#)

## Playmates 19081

# Playmates Electronic Sport Fishing Game Instruction Manual

Model: 19081

## INTRODUCTION

---

Welcome to the world of virtual angling with the Playmates Electronic Sport Fishing Game. This manual provides essential information for setting up, operating, and maintaining your game, ensuring an enjoyable and realistic fishing experience.

## PRODUCT FEATURES

---



Image: Overview of the Playmates Electronic Sport Fishing Game, highlighting its components and functions.

- **Virtual Rod & Reel:** Experience electronic sport fishing with a realistic virtual rod and reel.
- **Flexible Fishing Rod:** The rod bends to simulate a catch, providing tactile feedback.
- **Portable Design:** Allows for fishing simulation anywhere, anytime.
- **Realistic Fishing Sounds:** Audio cues enhance the immersive experience.
- **LED Read-out:** Displays information for casting distance and scoring.
- **Ratcheting Reel Crank Handle:** Provides a realistic reeling action.
- **On/Off Switch:** For power control.
- **Up & Down Line Drag Control:** Adjusts the virtual line tension.

- **Cast Button:** Initiates the casting action.
- **Multiple Levels:** Challenge yourself to catch 8 fish across 8 distinct levels.

## SETUP INSTRUCTIONS

---

### Battery Installation

The Electronic Sport Fishing Game requires one "AA" battery and one "AAA" battery (not included) for operation.

1. Locate the battery compartment on the device.
2. Open the battery compartment cover.
3. Insert one "AA" battery and one "AAA" battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

**Note:** Always use fresh batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the device will not be used for an extended period.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- To turn the game on, slide the **On/Off Switch** to the "On" position.
- To turn the game off, slide the **On/Off Switch** to the "Off" position.

### Casting

1. Hold the fishing game firmly.
2. Press the **Cast Button**.
3. Perform a flicking motion with your wrist, similar to casting a real fishing line.
4. Observe the **LED Read-out** to gauge the distance of your virtual cast.

### Reeling and Catching Fish

1. After casting, wait for a virtual bite. The flexible fishing rod will bend, indicating a fish has taken the bait.
2. Listen to the realistic fishing sounds, which provide cues on how to reel.
3. Use the **Ratcheting Reel Crank Handle** to reel in your catch.
4. Adjust the virtual line tension using the **Up & Down Line Drag Control** as needed, based on the sounds and rod feedback. Reel in faster or slower as indicated by the game.
5. The **LEDs and sounds** will confirm if you have successfully caught a "Big One" or a "minnow."

### Game Levels

The game features 8 levels. Your objective is to catch 8 fish in each level to progress and test your angling skills.

## MAINTENANCE

---

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the game in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** Remove batteries if the game is not used for extended periods to prevent leakage.

## TROUBLESHOOTING

---

- **Game not turning on:**
  - Ensure the On/Off switch is in the "On" position.
  - Check if batteries are correctly installed with proper polarity.
  - Replace old or depleted batteries with new ones.
- **No sounds or display:**
  - Verify battery installation and charge.
  - Ensure the device is powered on.

## SPECIFICATIONS

---

<b>Model Number:</b>	19081
<b>Brand:</b>	Playmates
<b>Material:</b>	Plastic
<b>Color:</b>	Black
<b>Batteries Required:</b>	Yes (1x AA, 1x AAA - not included)
<b>Assembly Required:</b>	No
<b>Manufacturer Recommended Age:</b>	6 years and up
<b>Package Dimensions:</b>	31.12 x 13.97 x 10.16 cm

## SAFETY INFORMATION

---

- This product is recommended for ages 6 years and up.
- Adult supervision is recommended for younger children.
- Do not attempt to modify or disassemble the product.
- Keep batteries out of reach of small children. If swallowed, seek immediate medical attention.
- Dispose of batteries responsibly according to local regulations.

## WARRANTY AND SUPPORT

---

For information regarding warranty, returns, or customer support, please refer to the retailer's policy or visit the official Playmates website. Contact details are typically available on the product packaging or the brand's official online presence.

*Note: Specific warranty details are not provided in this manual.*

