

[Manuals.plus](#) /

› [Kendal](#) /

› Kendal Cuckoo Clock MX239 Instruction Manual

Kendal MX239

Kendal Cuckoo Clock MX239 Instruction Manual

Model: MX239 | Brand: Kendal

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Kendal MX239 Cuckoo Clock. Please read these instructions carefully before use to ensure proper function and longevity of your clock.

PRODUCT COMPONENTS

Familiarize yourself with the main parts and features of your cuckoo clock.

Kendal Cuckoo Clock · MX239



AUTOMATIC
NIGHT MODE



PERFECT
TIMEKEEPING



ADJUSTABLE
SOUND



Clock Face and Cuckoo Door: This image highlights the quartz movement for accurate timekeeping, the cuckoo bird's door, and the light sensor for night mode. The clock's decorations are carved from natural basswood, while the bird, clock dial, and hands are plastic.



Image: Clock dimensions for mounting reference.

5. Setting the Time:

Rotate the minute hand (the longer hand) clockwise to set the current time. The hour hand will adjust automatically. Do not move the hour hand directly.



Image: Clock face with Roman numerals.

6. Setting the Cuckoo Sound:

After setting the time, wait for the cuckoo to chime. If the number of cuckoo calls does not match the hour displayed, press the "PUSH" button located near the volume switch repeatedly until the cuckoo calls match the current hour. For example, if the clock shows 3:00 but cuckoos once, press the "PUSH" button two more times.



Image: Volume switch with HI, LOW, OFF settings and PUSH button.

7. **Volume Adjustment:** Use the HI/LOW/OFF switch to adjust the cuckoo volume or silence it completely.

OPERATING INSTRUCTIONS

- **Timekeeping:** The clock utilizes a quartz movement for accurate timekeeping.
- **Hourly Cuckoo:** The cuckoo bird will emerge from its door and sing every hour, accompanied by wing flapping.
- **Automatic Nighttime Shutdown:** The built-in light sensor automatically silences the cuckoo calls when the room is dark, ensuring undisturbed sleep. The cuckoo will resume calls when light is detected.

- **Decorative Elements:** The pendulum swings continuously, and the weights and chains are for aesthetic purposes only; they do not contribute to the clock's mechanical operation.



Video: Demonstration of the Kendal Cuckoo Clock's hourly cuckoo feature and overall appearance.

MAINTENANCE

- **Battery Replacement:** Replace the D-size batteries annually or when the clock's timekeeping becomes inaccurate or the cuckoo function weakens. Always replace both batteries at the same time.
- **Cleaning:** Wipe the clock's exterior with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which may damage the wood finish.
- **Handling:** Handle the clock gently, especially the decorative elements and the cuckoo mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or low batteries.	Replace both D-size batteries with new ones. Ensure correct polarity.
Cuckoo calls do not match the hour.	Cuckoo mechanism out of sync with time.	After setting the correct time, press the "PUSH" button repeatedly until the number of cuckoo calls matches the hour displayed on the clock face.
Cuckoo not sounding at night.	Automatic night sensor activated or volume set to OFF.	Ensure the room has sufficient light for the sensor to detect daytime. Check the volume switch and set it to "HI" or "LOW".
Cuckoo not sounding at all.	Volume set to OFF, low batteries, or obstruction.	Check the volume switch. Replace batteries. Ensure no obstructions are blocking the cuckoo door.

SPECIFICATIONS

Brand	Kendal
Model Number	MX239
Product Dimensions	16.14"W x 19.69"H (41cm W x 50cm H)
Material	Basswood (decorations), Plastic (bird, dial, hands)
Power Source	Battery Powered (2 D batteries required, not included)
Display Type	Analog
Special Features	Adjustable Volume, Automatic Nighttime Shutdown (light sensor)
Mounting Type	Wall Mount
Item Weight	9.38 pounds (4.26 Kilograms)
UPC	855914008785

WARRANTY AND SUPPORT

Kendal offers a satisfaction guarantee for this product. If you have any questions, concerns, or require assistance with your MX239 Cuckoo Clock, please contact Kendal customer support. Refer to your purchase documentation or the retailer's website for specific contact information.

For warranty details, please retain your proof of purchase. Specific warranty terms may vary by region and retailer.

© 2026 Kendal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question