

tectake 400927

tectake® Wooden Desk Instruction Manual

Model: 400927

1. INTRODUCTION

Thank you for choosing the tectake® Wooden Desk. This desk is designed to provide a functional and adaptable workspace, particularly suitable for children and young adults. Its key features include adjustable height, a tilting tabletop, and an integrated storage drawer, promoting ergonomic use and organization. Please read this manual carefully before assembly and use to ensure proper setup and safe operation.

Safety Information

- The desk features rounded edges to minimize injury risk, especially for children.
- Ensure all components are securely fastened during assembly to maintain structural stability.
- Do not exceed the maximum recommended weight capacity of 15 kg on the tabletop.
- Always supervise children when adjusting the desk's height or tilt mechanism.

2. PRODUCT FEATURES

The tectake® Wooden Desk offers several features designed for versatility and user comfort:

- **Adjustable Height:** The desk height can be set in 7 different positions, ranging from approximately 63 cm to 94 cm, to accommodate various user heights and growth stages.
- **Tilting Tabletop:** The main work surface can be inclined to multiple angles, providing an ergonomic position for writing, drawing, or reading.
- **Integrated Drawer:** A convenient drawer is included for storing stationery, notebooks, and other small items, helping to keep the workspace tidy.
- **Work Material Stops:** Two bars are located at the bottom edge of the tabletop to prevent materials from sliding off when the surface is tilted.
- **Durable Construction:** Made from lacquered MDF wood, ensuring a stable and robust structure for long-term use.
- **Easy Maintenance:** The lacquered surface allows for simple cleaning with a damp cloth.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Desk components (MDF wood, lacquered)
- Integrated drawer
- Two tabletop stops
- Assembly hardware (screws, pins, etc.)
- Assembly instructions manual

4. SPECIFICATIONS

Brand	tectake
Model Number	400927
Overall Dimensions (D x W x H)	55 cm x 109 cm x 63-94 cm (adjustable height)
Work Surface Dimensions	109 cm x 55 cm
Adjustable Height Range	63 cm to 94 cm (7 positions)
Drawer Interior Dimensions (H x W x D)	6 cm x 27 cm x 22 cm (approx.)
Weight	Approx. 17 kg
Material	MDF Wood (lacquered)
Color	Blue
Maximum Recommended Load Capacity	15 kg
Assembly Required	Yes
Recommended Persons for Assembly	2
Assembly Tools Included	Yes

5. SETUP AND ASSEMBLY

Assembly of the tectake® Wooden Desk requires careful attention to the provided instructions. It is recommended that two people perform the assembly to ensure stability and ease of construction. All necessary tools are included.

General Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Follow the step-by-step diagrams in the included assembly manual.
3. Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the wood.
4. Pay close attention to the orientation of parts, especially the side frames and tabletop supports.

Adjusting Desk Height:

The desk height can be adjusted to 7 different positions. To adjust:

1. Locate the adjustment pins on the side frames of the desk.
2. With assistance, carefully lift the tabletop assembly.
3. Remove the pins from both sides simultaneously.
4. Adjust the tabletop to the desired height, aligning the holes in the frame with the corresponding height setting.
5. Reinsert the pins firmly into both sides to lock the height in place. Ensure both pins are fully engaged before use.



Image: Detailed view illustrating the 7-level height adjustment and the tabletop tilt mechanism.

Adjusting Tabletop Tilt:

The tabletop can be tilted to various angles for comfortable working positions:

1. Locate the two foldable, lockable bars underneath the tabletop.
2. Lift the tabletop slightly to disengage the bars from their current position.
3. Adjust the tabletop to the desired angle.
4. Engage the support bars into the appropriate notches to secure the tilt angle.

5. Ensure the two tabletop stops are in place at the bottom edge of the tilted surface to prevent items from sliding off.



Image: The desk with its tabletop tilted, highlighting the drawer and the two material stops.

6. OPERATING INSTRUCTIONS

Using the Drawer:

The integrated drawer slides out smoothly for access to stored items. Simply pull the drawer handle to open and push to close. Avoid placing excessively heavy items in the drawer to ensure smooth operation and prevent damage.

Utilizing Tabletop Stops:

When the tabletop is tilted, the two white stops at the lower edge are crucial for keeping books, papers, and other materials from sliding down. Always ensure these stops are correctly positioned when working on an inclined surface.

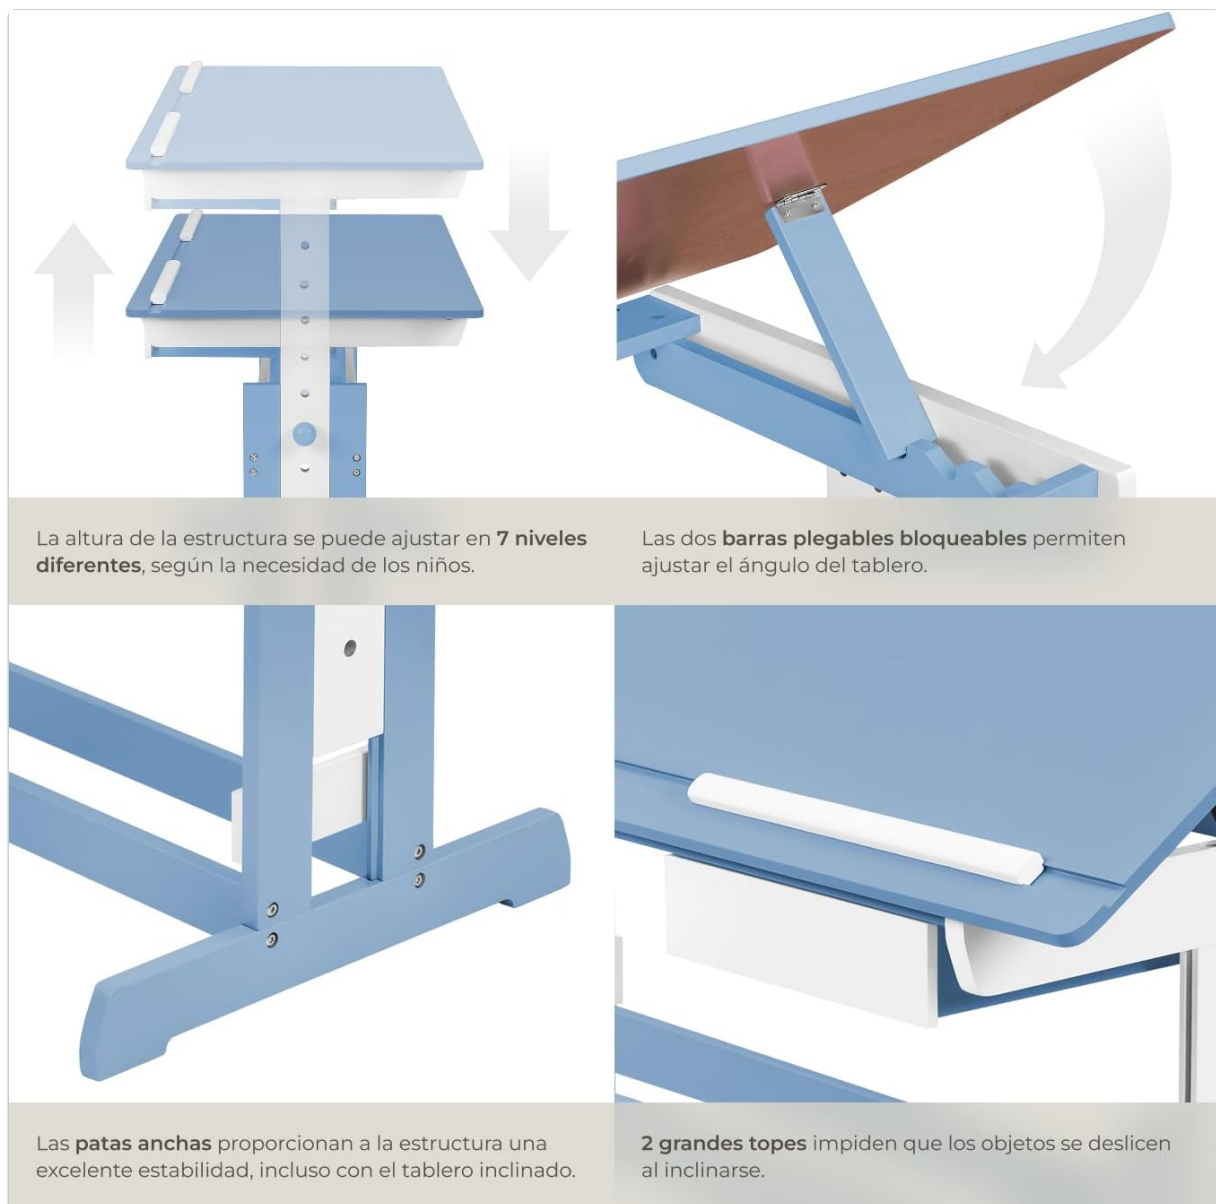


Image: Close-up of the desk showing the pull-out drawer and the two material stops on the tabletop.

7. MAINTENANCE

To ensure the longevity and appearance of your tectake® Wooden Desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive water, as these can damage the lacquered finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Environment:** Avoid placing the desk in direct sunlight or near heat sources, which can cause fading or warping.

8. TROUBLESHOOTING

If you encounter any issues with your tectake® Wooden Desk, please refer to the following common problems and solutions:

- **Difficulty during Assembly:**

Issue: Parts do not align easily, or assembly seems complex.

Solution: Review the assembly instructions carefully, paying close attention to diagrams and part orientation. Ensure you have sufficient space and consider having a second person assist. Patience is key during assembly.

- **Missing or Damaged Parts:**

Issue: A component is missing from the package or arrived damaged.

Solution: Immediately contact tectake customer support with details of the missing or damaged part. Provide your purchase information and model number for prompt assistance.

- **Desk Instability:**

Issue: The desk wobbles or feels unstable after assembly.

Solution: Double-check that all screws and fasteners are fully tightened. Ensure the desk is placed on a flat, even surface. If the issue persists, disassemble and reassemble, ensuring all parts are correctly aligned.

- **Unpleasant Odor:**

Issue: The desk emits a strong smell upon unpacking.

Solution: This is typically due to the lacquered finish and will dissipate over time. Place the desk in a well-ventilated area for several days to allow the odor to fade.

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the documentation included with your purchase or visit the official tectake website. Our customer service team is available to assist you with any questions or concerns you may have.

Please retain your proof of purchase for any warranty claims.