

[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach Stack & Snap Food Processor and Vegetable Chopper, 12 Cup, Model 70725A Instruction Manual

Hamilton Beach 70725A

Hamilton Beach Stack & Snap Food Processor and Vegetable Chopper

Model: 70725A | 12 Cup Capacity

Brand: Hamilton Beach

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Hamilton Beach Stack & Snap Food Processor. Please read all instructions carefully before use and retain for future reference.



Figure 1: Hamilton Beach Stack & Snap Food Processor (Model 70725A)

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or

damaged in any manner.

- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils away from moving blades while processing food to prevent the possibility of severe personal injury and/or damage to the food processor. A scraper may be used but only when the food processor is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutting blade or disc on base without first putting bowl properly in place.
- Ensure lid is securely locked in place before operating appliance.
- Do not attempt to defeat the lid interlock mechanism.

3. PARTS AND FEATURES

Your food processor includes several components designed for ease of use and versatility.

- **450 Watt Motor Base:** Provides powerful processing.
- **12 Cup Bowl:** Large capacity for various tasks.
- **Lid with Big Mouth Chute:** Designed for easy food insertion.
- **Large Food Pusher with Small Chute:** For guiding food into the chute.
- **Small Food Pusher:** For smaller items or liquids.
- **Chopping/Pureeing Blade:** For chopping, mixing, and pureeing.
- **Reversible Stainless Steel Slicing/Shredding Disc:** For slicing and shredding.

Key Features:

Stack & Snap Technology

Stack & snap™ technology for easy assembly

Requires no difficult twist-locking



Easy assembly without twisting or locking, simplifying setup.

12 Cup Sealed Bowl

12 cup sealed bowl

Fits large volumes of food and prevents leaks



Accommodates large volumes of food and features a sealed center to prevent leaks.

Big Mouth Chute

Big Mouth® chute

Easily fits larger foods and reduces pre-cutting



Allows larger foods to be processed without extensive pre-cutting.

Versatile Attachments



Slice, shred, chop, mix and puree

With 2 versatile attachments



Chopping/
pureeing blade



Reversible stainless steel
slicing/shredding disc

Includes a chopping/pureeing blade and a reversible slicing/shredding disc for diverse food preparation.

450 Watt Motor



Quickly powers through tough ingredients

With 450 watt motor

Efficiently processes tough ingredients with two speeds and a pulse function.

Easy to Clean



Easy to clean

All removable parts are dishwasher safe

All removable parts are dishwasher safe for convenient cleanup.

4. ASSEMBLY AND SETUP

The Stack & Snap design ensures straightforward assembly. Follow these steps to set up your food processor:

1. Place the motor base on a clean, dry, and stable surface.
2. Align the 12-cup bowl onto the motor base.
3. Insert the desired blade (chopping/pureeing) or disc (slicing/shredding) onto the center post in the bowl.
4. Place the lid onto the bowl, ensuring the pour spout on the lid aligns with the pour spout on the bowl.
5. Insert the large food pusher into the Big Mouth chute. For smaller items, use the small food pusher.
6. Ensure all components are securely stacked and snapped into place before plugging in the appliance.

Assembly Demonstration:

Video 1: This video demonstrates the assembly process of the Hamilton Beach Stack & Snap Food Processor, highlighting its ease of use and secure component fitting.

Video 2: This video provides an overview of the Hamilton Beach food processor, including its stack-and-snap assembly and various features.

5. OPERATING INSTRUCTIONS

Once assembled, plug in the food processor. Use the function guide on the base to select the appropriate setting for your task.



Figure 2: Simple Function Guide and Control Buttons

Food Processing Guidelines:

Food Type	Maximum Amount
Dry ingredients (crackers, nuts)	12 cups (2.8 L)
Vegetables or fruits	3 pounds (1.4 kg)
Cheese (Parmesan, Cheddar)	40 ounces (1.2 L)
Thick sauces or dips	8 cups (1.9 L)
Liquids (marinades, soups)	7 cups (1.7 L)

Operation Demonstration:

Video 3: This video demonstrates the food processor's capability to grind meat, showcasing its powerful chopping function.

Video 4: This video illustrates the food processor's long-term performance and its effectiveness in various kitchen tasks, including chopping and pureeing.

6. CARE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your food processor.

- Unplug the appliance before cleaning.
- All removable parts (bowl, lid, pushers, blades, discs) are dishwasher safe.
- For best results, wash removable parts on the top rack of the dishwasher.
- The motor base should be wiped clean with a damp cloth. Do not immerse the motor base in water.
- Handle blades and discs with extreme care as they are very sharp.

7. TROUBLESHOOTING

If your food processor is not operating as expected, refer to the following common issues and solutions:

- **Unit does not operate on any speed or Pulse:**

- Is the unit plugged in?
- Does the outlet work?
- Is the lid latched in place? Ensure the pour spout on the lid aligns with the pour spout on the bowl.
- Is the large food pusher in the chute? The large food pusher must be in place to operate.
- Is the food chute overfilled? Do not add food above the MAX fill line.

- **Food is not sliced or shredded uniformly:**

- Packing too much food in the food chute or pushing too hard on the food pusher may cause irregularly sliced or shredded food.
- Refer to the Food Processing Guidelines for recommended sizes and quantities.

- **Unit has a burning smell:**

- A slight odor during initial use may be due to residue from the manufacturing process. This will dissipate over time.
- If a strong odor or any visible smoke appears, unplug the unit IMMEDIATELY and contact customer service.

8. SPECIFICATIONS

- **Brand:** Hamilton Beach
- **Model:** 70725A
- **Special Features:** Interchangeable Blade, Removable Parts, Reversible Blade, Safety Lock
- **Product Dimensions:** 8.5"D x 9.1"W x 16.1"H
- **Color:** Black
- **Bowl Capacity:** 12 Cups
- **Recommended Uses:** Chop, Grate, Mince, Shred, Slice, Puree, Mix, Knead
- **Number of Speeds:** 2 (plus Pulse)
- **Product Care Instructions:** Dishwasher Safe (removable parts)
- **Included Components:** Full Size Feed Tube, Lid, S Blade, Shredding Disc, Slicing Disc
- **Blade Material:** Stainless Steel
- **Power Source:** AC/DC
- **Item Weight:** 6.57 pounds

Hamilton Beach®



Stack & Snap™ Food Processor 12 cup capacity

Figure 3: Product Dimensions

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the contact details provided with your product packaging or visit the official Hamilton Beach website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00KHLN7K2>

More documents and user manuals: **<https://manuals.plus/>**