

## Bosch MSM87160

# Bosch MSM87160 Immersion Blender 750W User Manual

Model: MSM87160

## INTRODUCTION

Thank you for choosing the Bosch MSM87160 Immersion Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions carefully before first use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Blades are sharp. Handle with care when cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

## PRODUCT OVERVIEW

The Bosch MSM87160 Immersion Blender is a versatile kitchen tool designed for blending, pureeing, and chopping. It features a powerful 750W motor and durable stainless steel components.

### Main Components:

- **Motor Unit:** The main body containing the motor and control buttons.
- **Blender Foot:** Detachable stainless steel shaft with blending blades.
- **Speed Selector:** Dial for adjusting blending speed.
- **Turbo Button:** For maximum power.



*Image: The main motor unit of the Bosch MSM87160 Immersion Blender, showcasing its ergonomic design and control buttons.*

## SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section.
3. **Assemble Blender Foot:** Align the blender foot with the motor unit and twist until it locks securely into place. Ensure it is firmly attached before use.



*Image: Hands demonstrating the attachment of the blender foot to the motor unit, showing the secure locking mechanism.*

## **OPERATING INSTRUCTIONS**

1. **Prepare Ingredients:** Cut larger ingredients into smaller pieces for easier blending.
2. **Immerse Blender:** Place the blender foot into the ingredients before plugging in the appliance. Ensure the blades are fully submerged to prevent splashing.
3. **Select Speed:** Use the speed selector dial on the top of the motor unit to choose your desired blending speed. The appliance offers 12 speed settings.
4. **Start Blending:** Press and hold the power button to start blending. For maximum power, press the Turbo button.
5. **Blend:** Move the blender gently up and down and in circles to ensure even blending.
6. **Stop Blending:** Release the power button to stop the appliance.
7. **Unplug:** Always unplug the appliance from the power outlet immediately after use.



Image: A hand gripping the ergonomic handle of the Bosch MSM87160 Immersion Blender, demonstrating comfortable use.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Bosch Immersion Blender.

1. **Disconnect Power:** Always unplug the appliance before cleaning.
2. **Disassemble:** Detach the blender foot from the motor unit.
3. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or other liquids.
4. **Clean Blender Foot:** The stainless steel blender foot is dishwasher safe. Alternatively, rinse it under running water immediately after use. For stubborn food residue, soak in warm soapy water before cleaning. Handle blades with extreme care.
5. **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not correctly attached to blender foot.	Check power connection; try another outlet; ensure blender foot is securely locked.
Blades are not blending effectively.	Too much food; ingredients too large; insufficient liquid.	Reduce quantity; cut ingredients smaller; add more liquid.
Appliance stops during operation.	Overheating protection activated.	Unplug and let cool down for at least 30 minutes before resuming use.

## SPECIFICATIONS

**Brand:** Bosch

**Model:** MSM87160

**Power:** 750 Watts

**Voltage:** 230 Volts

**Material:** Stainless Steel (Blades, Blender Foot)

**Weight:** 1.6 Kilograms

**Dishwasher Safe Parts:** Yes (Blender Foot)

**ASIN:** B00KIKPRDW

## WARRANTY AND CUSTOMER SUPPORT

---

For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Bosch website. For technical assistance, spare parts, or service inquiries, please contact Bosch customer support.

**Official Bosch Website:** [www.bosch-home.com](http://www.bosch-home.com)