



Manuals.plus /

- › **Picture Keeper** /
- › Picture Keeper 32GB USB Backup Drive for Mac & PC - Instruction Manual

Picture Keeper 32GBPKBX

Picture Keeper 32GB USB Backup Drive for Mac & PC

Instruction Manual

INTRODUCTION

The Picture Keeper 32GB USB Backup Drive is designed to simplify the process of backing up your precious photos, videos, and contacts from your Mac or PC computer. This device offers a straightforward, plug-and-play solution without the need for complex software installations or monthly fees. It automatically identifies and saves new files, skipping duplicates to optimize storage space.

Simple and Easy Backup

For Windows and Mac Computers



Easily copy, store, and protect, videos, and contacts with our USB flash drive, compatible with laptops, MacBooks, and desktop PC devices.

Image: The Picture Keeper 32GB USB Backup Drive, a compact silver flash drive, shown alongside its packaging, highlighting its ease of use for backing up digital memories.

SETUP GUIDE

Setting up your Picture Keeper is a simple three-step process:

1. **Connect the Device:** Plug the Picture Keeper 32GB USB drive into an available USB port on your Mac or PC computer.
2. **Launch the Application:** The Picture Keeper application should launch automatically. If it does not, navigate to 'This PC' or 'Finder' on your computer, locate the Picture Keeper drive, and double-click the 'PictureKeeper' application icon.
3. **Start Backup:** Once the application is open, click the 'Start Backup' button. The device will begin scanning your computer for photos, videos, and contacts.



Image: A visual representation of the three easy steps: 1. Plug In, 2. Open the App, 3. Start Backup, demonstrating the simplicity of using the Picture Keeper.

Compatibility

- **Operating Systems:** Supports Windows 10, Windows 8, Windows 7, Vista, XP (SP3); Mac OS 10.7 (and newer) computers.
- **Device Type:** Designed for use with laptops, desktop computers, and MacBooks.
- **Note:** This specific model is not compatible with iPhone/iPad or Android phone/tablet devices.

OPERATING INSTRUCTIONS

Performing a Backup

The Picture Keeper automatically scans your computer for photos, videos, and contacts. During subsequent backups, it intelligently identifies and skips any files that have already been saved, ensuring that only new or modified files are added. This feature maximizes storage efficiency and reduces backup time.



Image: An infographic detailing the features of Picture Keeper, including smart duplicate skipping, compact design, and customizable backup configuration.

Restoring Files

To restore your backed-up files to a new computer or device:

1. Plug the Picture Keeper into the new computer.
2. Launch the Picture Keeper application.
3. Select the 'Restore' option within the application. Follow the on-screen prompts to transfer your files.

Storage Capacity

The 32GB Picture Keeper drive can store approximately 8,000 photos or 500 videos, depending on individual file sizes. The device is designed to manage your media efficiently.



Image: A close-up of the Picture Keeper USB drive with a graphic indicating '32 GB' and 'up to 8,000 photos', illustrating its storage capacity.

MAINTENANCE

To ensure the longevity and optimal performance of your Picture Keeper 32GB USB Backup Drive, follow these simple maintenance guidelines:

- **Physical Care:** Keep the device in a clean, dry environment. Avoid exposing it to extreme temperatures, moisture, or direct sunlight.
- **Safe Removal:** Always safely eject the Picture Keeper from your computer before physically removing it. This prevents data corruption and ensures the device remains functional.
- **Storage:** When not in use, store the Picture Keeper in a protective case or a secure location to prevent physical damage.

TROUBLESHOOTING

If you encounter any issues with your Picture Keeper, refer to the following common solutions:

- **Device Not Recognized:**

- Try plugging the Picture Keeper into a different USB port on your computer.
- Restart your computer and try again.
- Ensure your operating system is up to date.

- **Application Not Launching:**

- Manually navigate to the Picture Keeper drive in 'This PC' (Windows) or 'Finder' (Mac) and double-click the application icon.
- Check for any security software or antivirus programs that might be blocking the application.

- **Backup Stops or Fails:**

- Ensure there is sufficient free space on the Picture Keeper drive.
- Temporarily disable any antivirus software that might interfere with the backup process.
- Check your computer's power settings to prevent it from going to sleep during backup.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	32GBPKBX
Memory Storage Capacity	32 GB
Connectivity Technology	USB
Hardware Interface	USB Type A
Compatible Operating Systems	Windows 10, Windows 8, Windows 7, Vista, XP (SP3); Mac OS 10.7 (and newer)
Product Dimensions	6 x 4 x 0.5 inches
Item Weight	1.44 ounces
Write Speed	40 MB/s
Special Feature	Portable, Automatic Duplicate Skipping

OFFICIAL PRODUCT VIDEOS

Picture Keeper 32GB Portable Flash USB Photo Backup and Storage Device for PC and MAC Computers

Your browser does not support the video tag.

Video: This official product video from Simplified IT Products, LLC demonstrates the features and benefits of the Picture Keeper 32GB USB drive, including its ease of use for backing up photos and videos on PC and Mac computers.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official Picture Keeper website. You may also contact the manufacturer, Simplified IT Products, LLC, directly for assistance.