

NICOLAS HOLIDAY GE90435

NICOLAS HOLIDAY GE90435 100-Light Multicolor Staybright LED Light Set

INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for choosing the NICOLAS HOLIDAY GE90435 100-Light Multicolor Staybright LED Light Set. This manual provides important information regarding the safe installation, operation, and maintenance of your new light set. Please read these instructions thoroughly before use and retain them for future reference.

This light set is designed to brightly illuminate your outdoor spaces for the holidays with its vibrant multicolor LED diodes and durable green cord.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire and electric shock, observe the following safety precautions:

- Always unplug the light set from the power source before installation, maintenance, or when not in use.
- Do not install or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- This product is intended for outdoor use. Ensure all connections are secure and protected from moisture.
- Do not immerse the light set in water.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the fuse blows, unplug the product from the outlet.
- Do not exceed the maximum wattage for the fuse. Refer to the product label for specific ratings.
- Always inspect the light set for damage before each use. Do not use if wires are frayed or insulation

is damaged.

3. PACKAGE CONTENTS

Your NICOLAS HOLIDAY GE90435 light set package should contain the following:

- 1 x NICOLAS HOLIDAY GE90435 100-Light Multicolor Staybright LED Light Set (25.25 ft total length)
- Fused plug
- Spare fuse (typically located in the plug)



Image: The NICOLAS HOLIDAY GE90435 light set, showing multiple bundles of the multicolor LED string lights with their green cords and plugs.

4. SETUP INSTRUCTIONS

1. **Unpack the Light Set:** Carefully remove the light set from its packaging. Gently uncoil the string, ensuring not to tangle or pull excessively on the wires.
2. **Inspect for Damage:** Before plugging in, thoroughly inspect the entire light set, including the cord, plug, and individual LED diodes, for any signs of damage, cuts, or frayed wires. Do not use if damaged.
3. **Choose a Location:** Select a suitable outdoor location for your lights. Ensure the surface is stable and that the lights will not be a tripping hazard. Avoid placing lights where they could be submerged in water or exposed to extreme weather conditions beyond their outdoor rating.
4. **Secure the Lights:** Use appropriate clips or ties (not included) to secure the light string to your desired surface (e.g., eaves, railings, trees). Ensure the lights are firmly attached and not swaying freely in the wind. Do not use metal fasteners that could damage the wiring.
5. **Connect to Power:** Once the lights are securely in place, plug the fused plug into a standard 120V AC outdoor-rated electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI) for outdoor use.
6. **Connecting Multiple Sets (if applicable):** This set features an end connector. If connecting multiple sets, ensure the total wattage of all connected sets does not exceed the maximum wattage rating specified on the product label or the capacity of your electrical circuit. Always refer to the product label for specific instructions on connecting multiple sets.

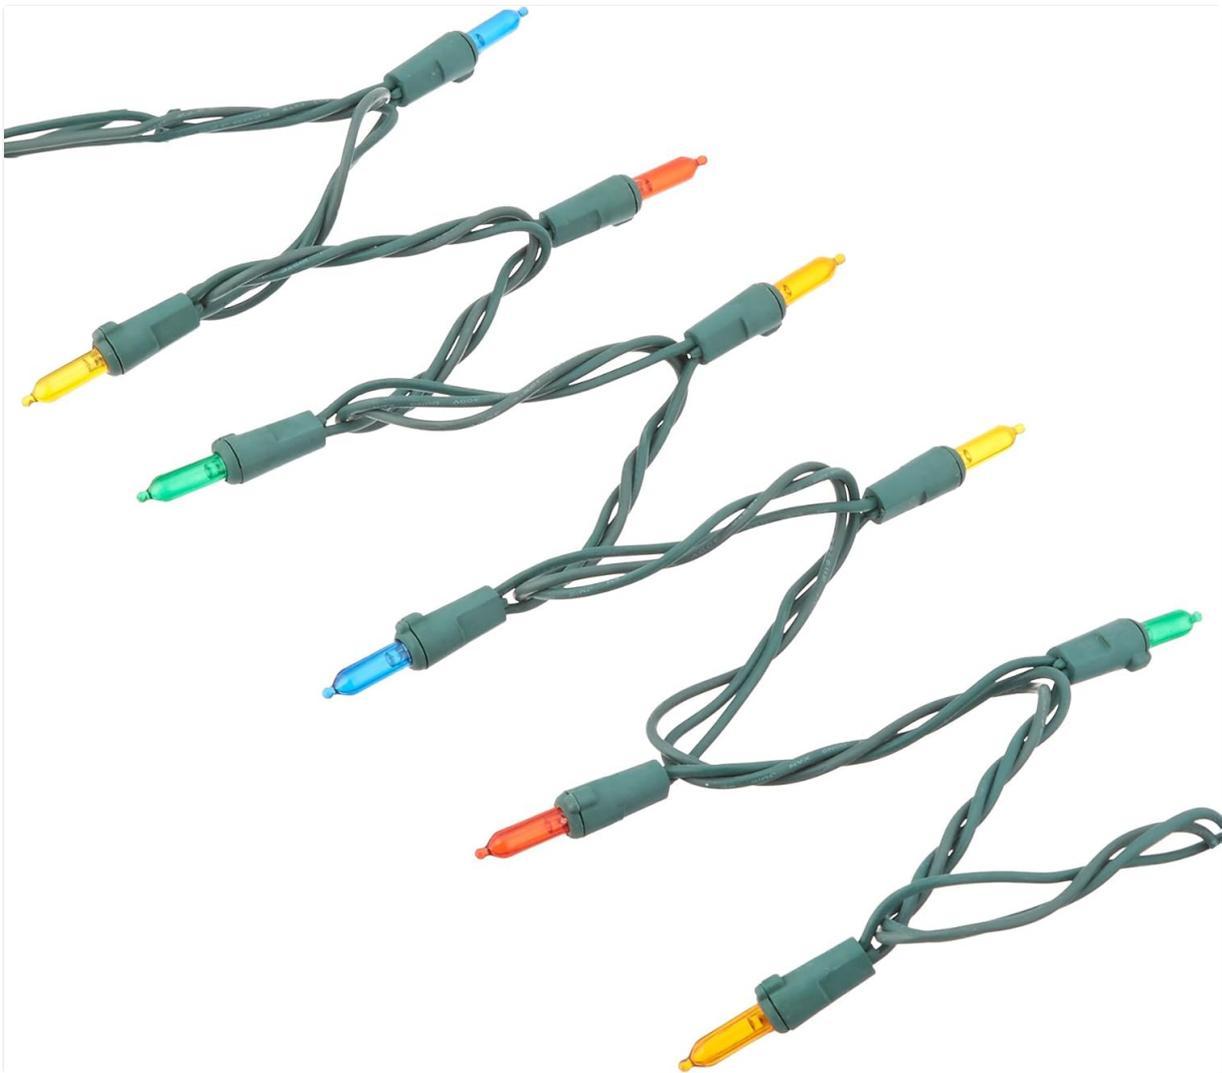


Image: A detailed view of the multicolor LED diodes and the green cord, illustrating the construction of the light set.

5. OPERATING INSTRUCTIONS

Operating your NICOLAS HOLIDAY GE90435 light set is straightforward:

- **To Turn On:** Plug the light set into a live electrical outlet. The lights will illuminate.
- **To Turn Off:** Unplug the light set from the electrical outlet.
- For convenience, you may use an outdoor-rated timer (sold separately) to automate the on/off cycles of your lights.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the light set before cleaning.
- Wipe the lights and cord with a soft, dry, or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the lights are completely dry before plugging them back in.

6.2 Storage

- Before storing, carefully inspect the light set for any damage.
- Gently coil the light string to prevent tangling and damage to the wires.

- Store the light set in a cool, dry place, away from direct sunlight and extreme temperatures.

6.3 Fuse Replacement

This light set is equipped with a replaceable fuse located in the plug. If the entire string fails to light, the fuse may need replacement.

1. **Unplug the Light Set:** Always unplug the light set from the electrical outlet before attempting to replace the fuse.
2. **Open Fuse Cover:** Slide open the fuse access cover on the side of the plug (towards the blades).
3. **Remove Old Fuse:** Carefully pry out the old fuse.
4. **Insert New Fuse:** Insert a new fuse of the same type and rating (e.g., 3 Amp, 125 Volt) into the fuse holder. Spare fuses are often included with the product or can be purchased separately.
5. **Close Cover:** Close the fuse access cover.
6. **Test:** Plug the light set back into the outlet to test. If the lights still do not work, or if the new fuse blows immediately, discontinue use and consult a qualified electrician or contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Entire light set does not illuminate.	No power to the outlet, blown fuse in the plug, or damaged cord/plug.	Check the power outlet with another device. Replace the fuse as per Section 6.3. Inspect the cord and plug for damage; if damaged, discontinue use.
Only a section of the lights is out.	Individual LED diode failure or loose connection within that section.	LED diodes are generally integrated and not user-replaceable. Due to the "Staybright" feature, the rest of the string should remain lit even if one LED fails. If a whole section is out, inspect for visible damage to the wiring in that section. If damage is found, discontinue use.
Lights flicker or dim.	Loose connection, power fluctuation, or nearing end of product life.	Ensure the plug is fully inserted into the outlet. Try a different outlet. If the problem persists, discontinue use.

8. SPECIFICATIONS

Feature	Detail
Model Number	GE90435
Brand	NICOLAS HOLIDAY
Light Source Type	LED
Number of Lights	100

Feature	Detail
Light Color	Multicolor
Total Set Length	25.25 feet
Lighted Length	24.75 feet
Lamp Spacing	3 inches
Lead Wire	3 inches
End Connector	3 inches
Power Source	Corded Electric
Wattage	5 watts
Indoor/Outdoor Usage	Outdoor
Product Dimensions (L x W x H)	2.1 x 6.8 x 6.8 inches
Item Weight	1 pound
UPC	803993908359


9. WARRANTY AND SUPPORT

NICOLAS HOLIDAY products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, most products come with a limited warranty against manufacturing defects. Please retain your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or information regarding warranty claims, please refer to the contact information provided on the product packaging or visit the official NICOLAS HOLIDAY website. When contacting support, please have your model number (GE90435) and purchase date available.

We are committed to ensuring your satisfaction with our products.

Related Documents - GE90435

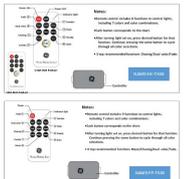	<p>Nicolas Holiday RGB Remote Control User Information and Compliance</p> <p>Comprehensive information on Nicolas Holiday RGB remote controls, including model HC-TX40 and FP-TX40. Details product functions, operation, and important FCC and ISCED regulatory compliance statements.</p>
	<p>GE StayBright LED 288 Lights (Model 81902LO) - Indoor/Outdoor Use and Safety Instructions</p> <p>Comprehensive safety, usage, and care instructions for the GE StayBright LED 288 Lights (Model 81902LO), suitable for indoor and outdoor use. Includes FCC compliance information and contact details.</p>



[iTwinkle 75 LED G35 Pre-Lit Smart Christmas Tree User Manual](#)

Comprehensive guide for the iTwinkle 75 LED G35 Pre-Lit Smart Christmas Tree (Model 00680), covering assembly, safety, smart app control, features, and troubleshooting.



[StayBright 250 LED Microbright Lights - Safety and Use Instructions](#)

Comprehensive safety and use instructions for StayBright 250 LED Microbright Lights (Model Nos. 93195LO, 93196LO, 93266LO) from Nicolas Holiday Ltd., detailing important precautions and care guidelines.



[NHL Tree Model No. 24115LO LED 800 Lights Indoor Use Only Safety and Care Instructions](#)

This document provides essential safety instructions and care guidelines for the NHL Tree Model No. 24115LO LED 800 Lights, designed for indoor use only. It covers proper usage, installation precautions, and storage recommendations to ensure safe operation and longevity of the product.



[NHL Tree Model 24115LO 24116LO LED 800 Lights - Indoor Use Safety and Care Instructions](#)

Comprehensive safety and care instructions for the NHL Tree Model No. 24115LO and 24116LO LED 800 Lights, designed for indoor use. Learn how to safely install, use, and store your holiday lighting.