



[Manuals.plus](#) /

> [SF](#) /

> SF Ocean III Chronograph Sport Watch NN77027PP01 User Manual

SF NN77027PP01

SF Ocean III Chronograph Sport Watch - Model NN77027PP01

User Manual

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your SF Ocean III Chronograph Sport Watch, Model NN77027PP01. This analog-digital watch features a multi-color round dial, a durable resin strap, and is designed for everyday use.



Figure 1: Front view of the SF Ocean III Chronograph Sport Watch.

Key Features:

- Analog and Digital Time Display
- Chronograph Functionality
- Alarm Feature

- Day and Date Display
- Water Resistance: 5 Meters (suitable for splashes, not for swimming or diving)
- Durable Resin Band and Plastic Case
- Quartz Movement

2. INITIAL SETUP

2.1 Starting the Watch

Before first use, ensure any plastic protector at the crown (the knob on the side of the watch) is removed. This plastic prevents the watch from running during shipping to conserve battery life. Once removed, the analog hands should begin to move.



Figure 2: Side view of the watch, highlighting the crown for initial setup.

2.2 Setting Analog Time

1. Pull the crown out to the first position.
2. Rotate the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back in to its original position to start the analog movement.

2.3 Setting Digital Time and Date

The digital display features multiple modes. Specific button functions are typically labeled on the watch case (e.g., **MODE**, **ADJUST**, **SET**, **LIGHT**). Refer to these labels for navigation.

1. Press the **MODE** button repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **ADJUST** or **SET** button to select the digit you wish to change (hours, minutes, seconds, year, month, day).
3. Use the **LIGHT** or another designated button to increase the value of the flashing digit.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

3. OPERATING INSTRUCTIONS

3.1 Mode Selection

Press the **MODE** button to cycle through different functions such as Time, Date, Alarm, and Chronograph (Stopwatch).

3.2 Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph display appears (usually indicated by "ST" or "STOP").
2. Press the **START/STOP** button (often labeled **SET** or **ADJUST**) to begin timing.
3. Press the **START/STOP** button again to pause or stop timing.
4. Press the **RESET** button (often labeled **LIGHT**) to clear the stopwatch to zero.

3.3 Setting and Using the Alarm

1. Press the **MODE** button until the alarm setting mode is displayed (often indicated by "AL").
2. Use the **ADJUST** or **SET** button to select the hour or minute digits.
3. Use the **LIGHT** or another designated button to change the alarm time.
4. Press the **MODE** button to confirm and exit.
5. To activate/deactivate the alarm, typically press a combination of buttons or a dedicated alarm ON/OFF button. Consult the specific button labels on your watch.

3.4 Backlight Function

Press the **LIGHT** button to illuminate the digital display. Note that the backlight may be dim in certain lighting conditions, particularly indoors, and is primarily intended for low-light visibility.

3.5 Water Resistance

This watch is water resistant up to 5 meters. This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. **It is not suitable for swimming, diving, or showering. Do not press any buttons while the watch is submerged in water.**

4. MAINTENANCE

4.1 Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, as they may damage the watch materials.

4.2 Battery Replacement

The watch uses two batteries: one for the analog movement and one for the digital display. When the display becomes dim or the watch stops functioning, battery replacement may be necessary. It is recommended to have batteries replaced by a qualified watch technician to ensure proper sealing and water resistance.

4.3 Strap Care

The watch features a durable resin strap. To prolong its life, avoid prolonged exposure to direct sunlight, extreme temperatures, and harsh chemicals. Inspect the strap periodically for signs of wear or cracking. If the strap shows significant damage, consider replacing it to prevent accidental loss of the watch.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Plastic protector still under crown; depleted battery.	Remove plastic protector. If issue persists, battery replacement may be needed.
Digital display is dim or blank.	Depleted digital battery.	Replace digital battery.
Incorrect time/date displayed.	Time/date not set correctly.	Refer to Section 2.2 and 2.3 for setting instructions.
Watch fogging up internally.	Exposure to extreme temperature changes; water ingress.	Avoid extreme temperature changes. If fogging persists or water is visible, seek professional repair immediately.

6. SPECIFICATIONS

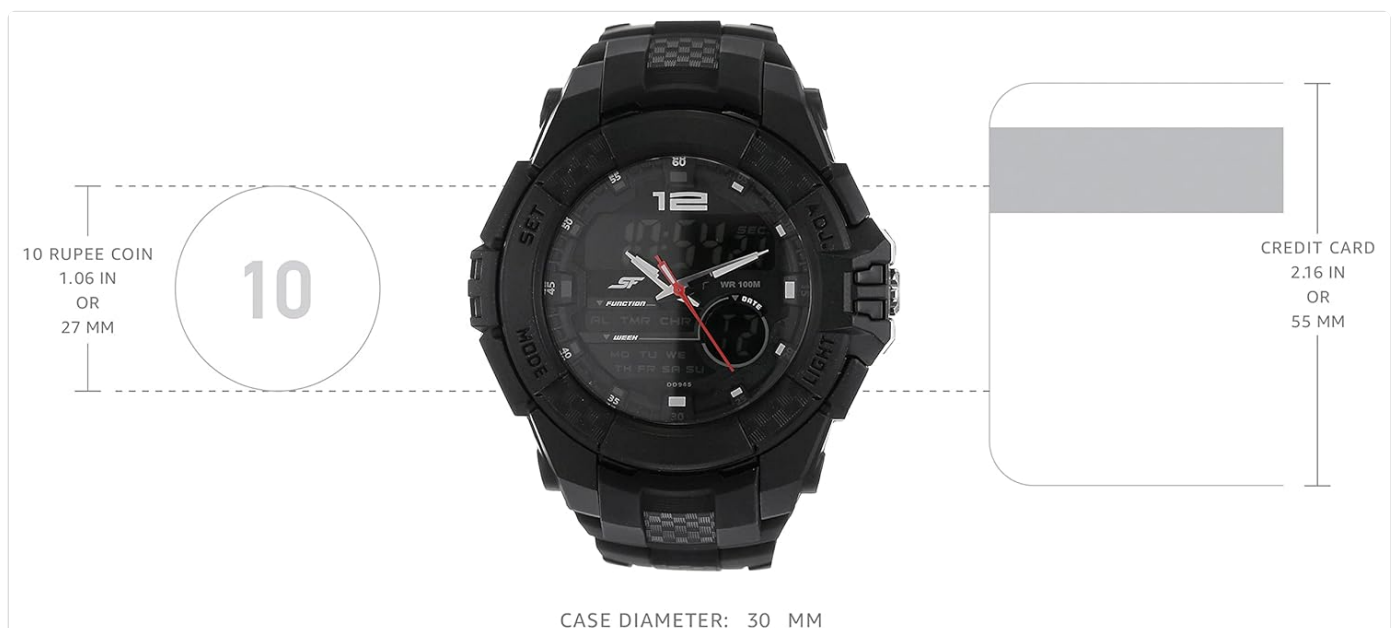


Figure 3: Watch dimensions for reference.

Feature	Detail
---------	--------

Feature	Detail
Model Number	NN77027PP01
Display Type	Analog-Digital
Movement	Quartz
Dial Colour	Multi-Color
Case Material	Plastic
Case Diameter	53.1 Millimeters
Case Thickness	17.9 Millimeters
Crystal Material	Acrylic
Band Material	Rubber
Band Colour	Black
Band Width	27 Millimeters
Clasp Type	Buckle
Water Resistance Depth	5 Meters
Item Weight	110 Grams
Special Features	Arabic Numerals, Second Hand
Batteries	1 Product Specific batteries required (included)

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This SF Ocean III Chronograph Sport Watch comes with a **12 Months Manufacturer Warranty** from the date of purchase. The warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was exposed to conditions beyond its 5-meter water resistance rating (e.g., swimming, diving, pressing buttons underwater).
- Battery replacement.
- Damage to the strap or crystal (acrylic).
- Unauthorized repairs or modifications.

7.2 Claiming Warranty

To claim warranty service, please retain your purchase receipt or invoice as proof of purchase. Contact the manufacturer, Sonata, or an authorized service center for assistance. You may be directed to a Titan showroom for service, as Sonata is a brand of Titan Company Limited.

7.3 Customer Support

For further assistance or inquiries regarding your SF Ocean III watch, please refer to the contact information provided with your

purchase documentation or visit the official Sonata/Titan website for customer support details.

© 2024 SF. All rights reserved. Model: NN77027PP01