

Microsoft 0885370898248

Microsoft Xbox One Console User Manual

Model: 0885370898248

1. INTRODUCTION

Welcome to the world of interactive entertainment with your new Microsoft Xbox One Console. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your console. The Xbox One is designed to be a comprehensive entertainment system, offering gaming, media playback, and online connectivity. Your console features a 1TB internal hard drive, a custom 1.75 GHz AMD 8-core APU, and supports 4K, 1080p, and 720p resolutions, providing a high-quality gaming and media experience.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Xbox One Console (1TB HDD)
- Xbox One Wireless Controller
- HDMI Cable
- Power Supply and Power Cord
- AA Batteries for Controller



Image: Xbox One Console and Wireless Controller. This image displays the main console unit in black, alongside a black wireless controller. The console has a distinct two-tone finish, with a glossy left side and a matte, vented right side. The controller features standard Xbox button layouts.



Image: Xbox One 1TB Console Retail Box. This image shows the green retail packaging for the Xbox One 1TB console, with the console and controller depicted on the front of the box.

3. SETUP GUIDE

3.1 Connecting the Console

1. **Placement:** Place your Xbox One console horizontally on a stable, flat surface with adequate ventilation. Ensure no vents are blocked.
2. **Power Connection:** Connect the power cord to the power supply, then connect the power supply to the console's power port. Plug the other end of the power cord into a wall outlet.
3. **HDMI Connection:** Connect one end of the HDMI cable to the **HDMI OUT** port on the back of your Xbox One console. Connect the other end to an HDMI input on your TV or monitor.
4. **Internet Connection (Optional):** For optimal experience, connect your console to the internet.
 - **Wired:** Connect an Ethernet cable from your router or modem to the **Ethernet port** on the back of the

console.

- **Wireless:** The console supports Wi-Fi. You will configure this during the initial setup process on screen.

3.2 Connecting the Wireless Controller

1. Insert the included AA batteries into the controller.
2. Press and hold the **Xbox button** (*glowing logo*) on the controller to turn it on.
3. Press the **Pair button** (*small circular button*) on the top of the controller until the Xbox button flashes rapidly.
4. Press the **Pair button** (*small circular button*) on the front of the console (*located near the USB port*). The Xbox button on the console will also flash.
5. Once the Xbox buttons on both the controller and console glow solid, the controller is paired.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **To Turn On:** Press the **Xbox button** on the front of the console or on your controller.
- **To Turn Off:**
 - Press and hold the **Xbox button** on your controller until the Power Options menu appears, then select "Turn console off".
 - Alternatively, press and hold the **Xbox button** on the front of the console for 10 seconds until it powers down.

4.2 Navigating the Dashboard

The Xbox One dashboard is your central hub for games, apps, and settings. Use the D-pad and analog sticks on your controller to navigate.

- **Home Screen:** Displays your recently played games and apps, as well as featured content.
- **Guide:** Press the **Xbox button** on your controller to open the Guide, providing quick access to friends, parties, messages, notifications, and system settings.
- **Store:** Access the Microsoft Store to purchase digital games, movies, TV shows, and apps.
- **My Games & Apps:** View and manage all your installed games and applications.

4.3 Inserting and Ejecting Discs

- **Inserting:** Gently slide a game disc or Blu-ray disc into the disc slot on the front of the console with the label facing up. The console will automatically pull the disc in.
- **Ejecting:** Press the **Eject button** (*small button next to the disc slot*) on the front of the console.

5. MAINTENANCE

5.1 Cleaning Your Console

- Ensure the console is powered off and unplugged before cleaning.
- Use a soft, dry, lint-free cloth to wipe down the exterior of the console.
- Do not use abrasive cleaners, solvents, or chemical sprays.
- Periodically clean dust from the vents using a soft brush or compressed air (use short bursts and hold the can upright).

5.2 Ventilation

Proper ventilation is crucial for the longevity of your console.

- Always place the console in a well-ventilated area.
- Do not place the console in an enclosed cabinet or on soft surfaces like carpet that can block airflow.
- Maintain at least 4-6 inches of clearance around all sides of the console.

5.3 Software Updates

Your Xbox One console regularly receives system updates to improve performance, add features, and enhance security.

- Ensure your console is connected to the internet to receive automatic updates.
- You can manually check for updates by going to **Settings > System > Updates & downloads**

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Console does not power on.	Power cord not connected, power supply issue, or power outlet issue.	Check all power connections. Try a different power outlet. Ensure the power supply light is on (if applicable).
No video or audio output.	HDMI cable loose or connected incorrectly, incorrect TV input selected.	Verify HDMI cable is securely connected to both console and TV. Ensure your TV is set to the correct HDMI input. Try a different HDMI cable or TV port.
Wireless controller not connecting.	Batteries low, not paired, or interference.	Replace controller batteries. Re-pair the controller following instructions in Section 3.2. Ensure no large metal objects are between the console and controller.
Disc not reading or ejecting.	Disc dirty/damaged, or disc drive issue.	Clean the disc with a soft, lint-free cloth. Try a different disc. If the issue persists, contact support.

7. SPECIFICATIONS

Feature	Detail
Model Number	0885370898248
Internal Storage	1 TB HDD
Processor	Custom 1.75 GHz AMD 8-core APU
Supported Resolutions	4K, 1080p, 720p
Dimensions (L x W x H)	7.48 x 5.31 x 1.18 inches

Feature	Detail
Weight	4.41 pounds
Wireless Connectivity	Wi-Fi (802.11n), Bluetooth (for controller)
Optical Drive	Blu-ray/DVD drive

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your console or visit the official Microsoft Xbox support website.

If you encounter issues not covered in the troubleshooting section or require further assistance, please contact Microsoft Support:




- **Online Support:** Visit support.xbox.com
- **Phone Support:** Refer to your region's specific contact numbers on the support website.




Please have your console's serial number ready when contacting support. The serial number is located on the back of the console.

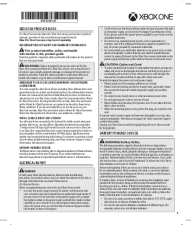

© 2024 Microsoft Corporation. All rights reserved. Xbox One is a trademark of Microsoft Corporation.

Related Documents - 0885370898248

	<p>Xbox One Product Guide: Safety, Setup, and Usage Information</p> <p>This guide provides essential safety, setup, usage, and warranty information for the Microsoft Xbox One console and Kinect for Xbox One sensor. Learn how to operate your device safely and effectively.</p>
	<p>Xbox One Product and Regulatory Guide, Limited Warranty & Agreement</p> <p>Official product, safety, regulatory, and limited warranty information for the Microsoft Xbox One console and Kinect sensor, including setup, care, electrical safety, battery safety, and legal terms.</p>
	<p>PowerA Advantage Wired Controller for Xbox User Manual</p> <p>User manual for the PowerA Advantage Wired Controller for Xbox, detailing setup, button assignment, profile settings, troubleshooting, and warranty information.</p>

	<p>Xbox 360 Chatpad User Manual and Guide</p> <p>Comprehensive user guide for the Microsoft Xbox 360 Chatpad. Learn about its features, setup, connecting to your controller, using the keyboard, troubleshooting common issues, and important safety information. Compatible with Xbox 360 consoles and controllers.</p>
	<p>PDP Gaming Media Remote for Xbox Series X/S and Xbox One Quick Start Guide</p> <p>This guide provides instructions for setting up and using the PDP Gaming Media Remote with Xbox Series X, Xbox One X, and Xbox One S consoles. It covers button functions, setup steps, and important safety information regarding battery usage and product handling.</p>
	<p>PowerA Wired Controller for Xbox User Manual</p> <p>Official user manual for the PowerA Wired Controller for Xbox, detailing setup, usage, troubleshooting, and warranty information.</p>