

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Bosch Electromenager](#) /
- › Bosch ProPower MFW67440 Meat Grinder Instruction Manual

Bosch Electromenager MFW67440

Bosch ProPower MFW67440 Meat Grinder Instruction Manual

Model: MFW67440

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can lead to injury and damage to the appliance.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Always unplug the appliance from the power supply before assembly, disassembly, or cleaning. Do not immerse the motor unit in water or other liquids.
- **Blade Safety:** The cutting blades and discs are sharp. Handle them with extreme care to avoid injury.
- **Children and Vulnerable Persons:** This appliance should not be used by children. Keep the appliance and its cord out of reach of children. Persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, should be supervised or instructed on safe use.
- **Proper Use:** Only use the provided pusher to feed food into the appliance. Never use your fingers or other utensils. Do not operate the appliance without food in the feed tray.
- **Overload Protection:** The motor is equipped with an overload protection system. If the appliance stops during operation, switch it off, unplug it, and allow it to cool down before attempting to clear any blockages or restart.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact authorized service personnel for repairs.

2. PRODUCT OVERVIEW AND COMPONENTS

The Bosch ProPower MFW67440 Meat Grinder is a versatile kitchen appliance designed for various food preparation tasks. Familiarize yourself with its components before use.



Image: The Bosch ProPower MFW67440 Meat Grinder main unit displayed with all its included accessories, such as various grinding discs, sausage horn, kebbe attachment, and grating/slicing drums.

2.1 Main Unit

- **Motor Housing:** Contains the powerful motor and control switches.
- **On/Off/Reverse Switch:** Controls appliance operation and reverse function for clearing blockages.
- **Attachment Release Button:** For detaching the grinding head.

2.2 Standard Accessories

- **Grinding Head:** The main assembly for mincing.
- **Feed Tray:** Holds food items before feeding into the grinder.
- **Pusher:** Used to safely guide food into the grinding head.
- **Grinding Discs:** Various sizes (fine, medium, coarse) for different textures.
- **Blade:** The cutting component inside the grinding head.

2.3 Specialized Attachments

- **Sausage Making Kit:** Includes a sausage horn for filling casings.

- **Kebbe Making Kit:** For forming traditional kebbe shells.
- **Grating and Slicing Drums:** Various drums for shredding and slicing vegetables.

3. SETUP AND ASSEMBLY

Before first use, clean all detachable parts as described in the 'Maintenance and Cleaning' section. Ensure the appliance is unplugged during assembly.



Image: A hand demonstrating the attachment of the grinding head to the main motor unit of the Bosch meat grinder, ensuring it is securely locked into place.

1. **Attach Grinding Head:** Insert the grinding head into the motor unit opening. Rotate it counter-clockwise until it locks securely into place.
2. **Insert Blade and Disc:** Place the cutting blade onto the shaft inside the grinding head, ensuring the sharp edges face outwards. Then, select the desired grinding disc and place it over the blade.
3. **Secure Ring Nut:** Screw the ring nut onto the grinding head until it is hand-tight. Do not overtighten.

4. **Attach Feed Tray:** Place the feed tray onto the top of the grinding head.
5. **Position Appliance:** Place the assembled appliance on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit.

4. OPERATING INSTRUCTIONS

4.1 General Operation

- **Power On:** Plug the appliance into a suitable power outlet. Switch the appliance to the 'ON' position (usually marked 'I').
- **Reverse Function:** If food becomes jammed, switch the appliance to the 'REV' (Reverse) position for a few seconds to clear the blockage. Then switch back to 'OFF' before resuming normal operation.
- **Power Off:** After use, switch the appliance to the 'OFF' position (usually marked 'O') and unplug it from the power outlet.

4.2 Meat Grinding



Image: The Bosch meat grinder actively processing raw meat, which is being extruded through the grinding disc and collected on a white plate.

1. Prepare meat by cutting it into small pieces (approx. 2-3 cm) that fit easily into the feed tube. Remove bones, gristle, and excessive fat.
2. Place a bowl or container under the grinding head to collect the minced meat.
3. Switch the appliance ON.
4. Feed the meat pieces into the feed tube using the pusher. Apply gentle, even pressure. Do not force the meat.
5. After grinding, switch the appliance OFF and unplug it.

4.3 Sausage Making



Image: A close-up of the Bosch meat grinder's sausage making attachment, with hands guiding a sausage casing as it is filled with meat mixture.

1. Assemble the grinding head with the sausage horn attachment. Ensure the blade and grinding disc are removed.
2. Prepare your sausage mixture.
3. Thread a pre-soaked sausage casing onto the sausage horn, leaving a small overhang at the end.
4. Switch the appliance ON.
5. Feed the sausage mixture into the feed tube using the pusher. Guide the casing as it fills, ensuring it fills evenly without air pockets.
6. Once filled, twist the casing at desired intervals to form individual sausages.

4.4 Kebbe Making



Image: The two main components of the kebbe making attachment, designed to form hollow kebbe shells, displayed next to a plate of finished kebbe.

1. Assemble the grinding head with the kebbe attachment. Ensure the blade and grinding disc are removed.
2. Prepare your kebbe dough mixture.
3. Switch the appliance ON.
4. Feed the kebbe dough into the feed tube using the pusher. The attachment will form hollow tubes.
5. Cut the tubes to the desired length and fill them with your chosen filling.

4.5 Grating and Slicing



Image: A hand feeding carrots into the grating attachment of the Bosch meat grinder, producing finely shredded carrots into a bowl.

1. Assemble the grinding head with the desired grating or slicing drum. Ensure the blade and grinding disc are removed.
2. Place a bowl or container under the outlet to collect the processed food.
3. Switch the appliance ON.
4. Feed vegetables or other food items into the feed tube using the pusher.
5. After processing, switch the appliance OFF and unplug it.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance. Always unplug the appliance before cleaning.

1. **Disassembly:** Disassemble all removable parts (feed tray, grinding head, blade, discs, attachments).
2. **Cleaning Parts:** Wash all detachable parts in warm, soapy water immediately after use. Use a brush to remove any food residue from the grinding discs and other intricate parts. Rinse thoroughly.
3. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or other liquids.
4. **Drying:** Dry all parts thoroughly before reassembling or storing to prevent rust, especially on metal components.
5. **Storage:** Store the appliance and its accessories in a dry, safe place, out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your Bosch ProPower MFW67440, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power switch is OFF; incorrect assembly.	Check power connection; ensure switch is ON; reassemble parts correctly.
Food is not grinding/processing efficiently or jams.	Food pieces are too large; sinews/gristle in meat; grinding disc blocked; motor overloaded.	Cut food into smaller pieces; remove bones/gristle; switch to 'REV' to clear blockage, then clean parts; allow motor to cool if overloaded.
Loud noise during operation.	Incorrect assembly of parts; foreign object inside.	Disassemble and reassemble correctly; check for and remove any foreign objects.

7. TECHNICAL SPECIFICATIONS

Brand: Bosch Electromenager

Model: MFW67440

Color: Black

Power: 700 W (Nominal), 1500 W (Peak)

Voltage: 230 Volts

Capacity: Up to 3.5 Kilograms per minute

Dimensions (L x W x H): 29.5 x 19.9 x 25.4 cm

Weight: 5.22 Kilograms

Noise Level: 1 dB

Automatic Stop Function: No

Energy Class: A

Recommended Uses: Mincing meat and fish, making sausages, grating vegetables

8. WARRANTY AND SUPPORT

This Bosch ProPower MFW67440 Meat Grinder is manufactured to high-quality standards. In the unlikely event of a defect, please refer to the warranty terms provided at the time of purchase.

Spare Parts Availability: 1 Year

For technical assistance, spare parts, or warranty claims, please contact Bosch customer service or your authorized dealer. Please have your model number (MFW67440) and purchase information ready.