

Dickie Toys 20 330 8365 AMU

Dickie Toys Storm Unit Toy Boat Instruction Manual

Model: 20 330 8365 AMU

1. INTRODUCTION

The Dickie Toys Storm Unit is an interactive toy boat designed for imaginative play. This unit features battery-powered working spotlights, various sound effects, an electric anchor, and a cable winch with an accompanying submarine. It is suitable for both dry land and water play, transforming any play area into an exciting adventure. This manual provides essential information for the safe and proper use of your Storm Unit.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 years.

- Always supervise children during play, especially when near water.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries with correct polarity (+ and -).
- Remove batteries from the toy if it will not be used for an extended period.
- Keep the toy away from extreme temperatures and direct sunlight.
- Do not submerge the entire boat in water; it is designed for surface water play.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Dickie Toys Storm Unit Toy Boat
- 1 x Submarine accessory



Image: The Dickie Toys Storm Unit boat and its submarine accessory displayed within its retail packaging.



Image: An alternative view of the Dickie Toys Storm Unit boat and submarine inside its packaging.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the Storm Unit boat.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries (type and quantity specified in Section 7: Specifications), ensuring correct

polarity (+/-).

4. Replace the battery compartment cover and secure it with the screw.

5. OPERATING INSTRUCTIONS

5.1 Activating Lights and Sounds

The Storm Unit is equipped with working spotlights and various sound effects to enhance play. Press the designated button on the boat's deck to activate these features.



Image: A finger pressing a button on the boat's cabin, indicating activation of light and sound features.

5.2 Operating the Cable Winch and Submarine

The boat features a manual winch to deploy and retrieve the submarine. Turn the winch handle to raise or lower the submarine into position.

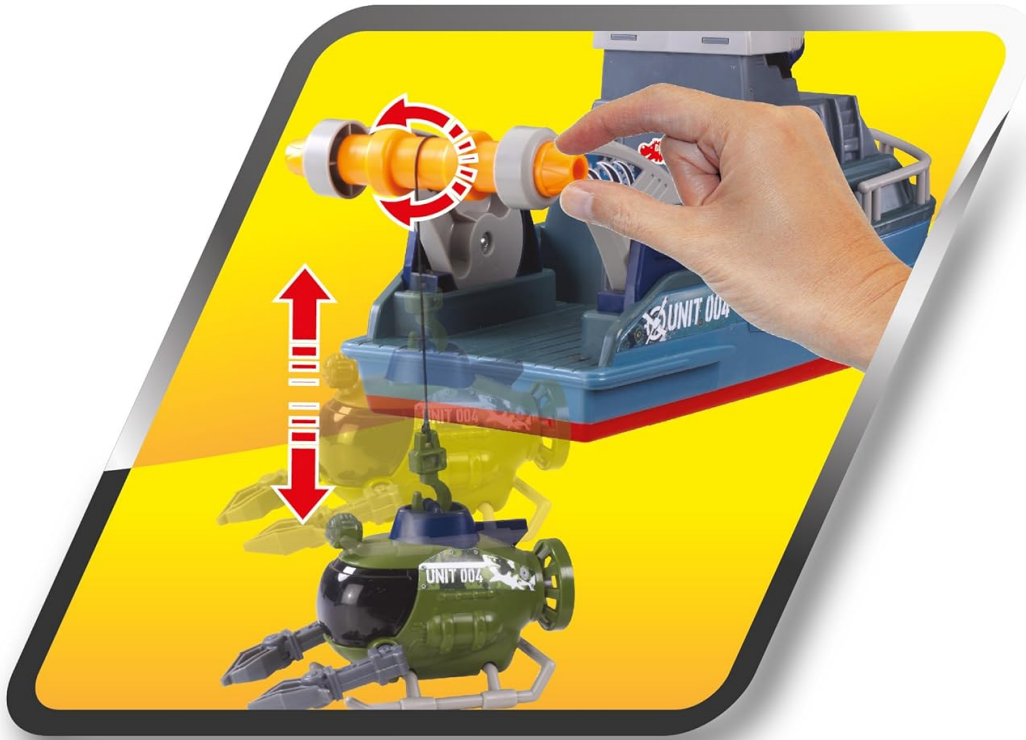


Image: A hand demonstrating the operation of the manual winch, lowering the green submarine from the boat's deck.

5.3 Deploying the Electric Anchor

The Storm Unit includes an electric anchor. Press the corresponding button to lower or raise the anchor.

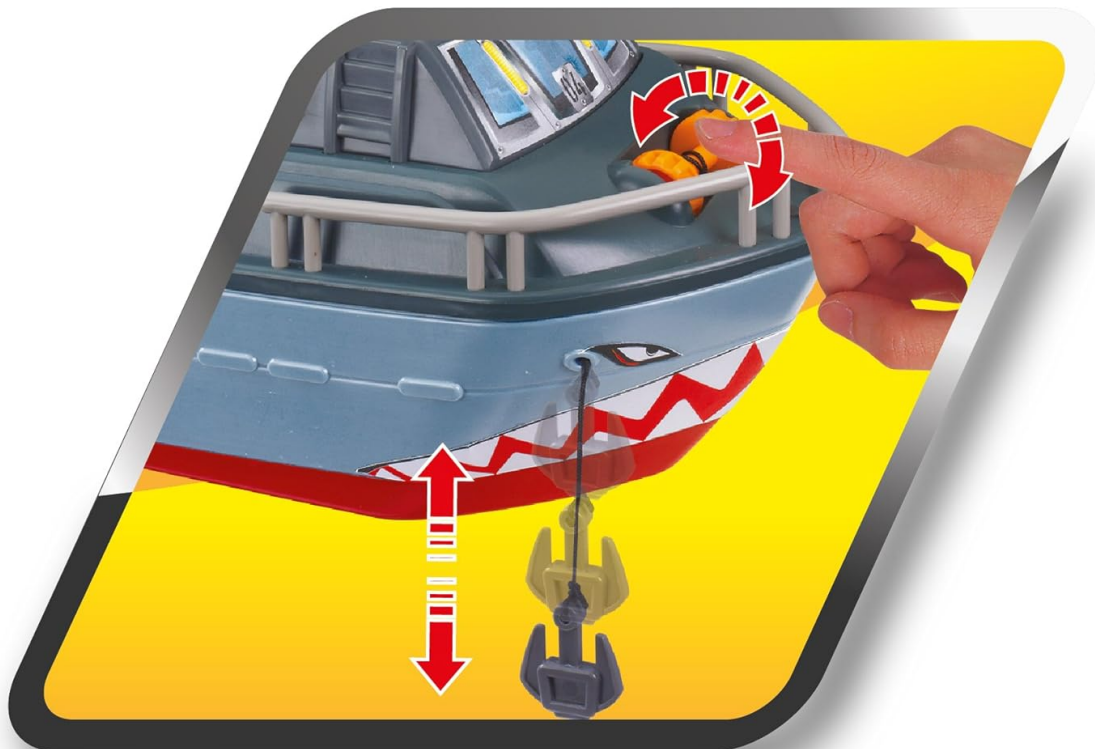


Image: A finger pressing a button on the boat's bow, controlling the movement of the electric anchor.

5.4 Submarine Features

The submarine accessory may feature movable parts, such as claws, for enhanced play. Manipulate these parts manually during play.



Image: The green submarine accessory, highlighting its movable claw mechanisms.

6. MAINTENANCE

6.1 Cleaning

- Wipe the toy boat with a damp cloth to remove dirt and dust.
- Do not use harsh chemicals or abrasive cleaners.
- Ensure the toy is completely dry before storing, especially after water play.

6.2 Battery Replacement

When lights dim or sounds become faint, it is time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.3 Storage

Store the Storm Unit in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods.

7. TROUBLESHOOTING

7.1 Lights or Sounds Not Working

- Check if batteries are installed correctly with the correct polarity.
- Replace with fresh batteries.
- Ensure the battery compartment cover is securely closed.

7.2 Winch or Anchor Not Operating

- For the winch, ensure there are no obstructions preventing manual rotation.
- For the electric anchor, check battery power as described above.
- Inspect for any visible damage or entanglement.

8. SPECIFICATIONS

Brand	Dickie Toys
Model Number	20 330 8365 AMU
Minimum Recommended Age	36 months (3 years)
Power Source	Battery Powered
Battery Types	Batteries required (type not specified, refer to packaging)
Material	Plastic
Item Weight	2.35 Pounds (approx. 1.07 kg)
Item Dimensions (L x W x H)	33 x 12.7 x 16.8 Centimeters

9. WARRANTY

For information regarding warranty coverage and terms, please refer to the documentation included with your purchase or contact Dickie Toys customer service directly. Warranty terms may vary by region and retailer.

10. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Dickie Toys customer support. Contact information can typically be found on the product packaging or the official Dickie Toys website.