

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nespresso](#) /

› [Nespresso Inissia Espresso Maker \(Model D40-US-BK-NE\) User Manual](#)

Nespresso D40-US-BK-NE

Nespresso Inissia Espresso Maker (Model D40-US-BK-NE) User Manual

Your guide to operating and maintaining your Nespresso Inissia machine.

1. PRODUCT OVERVIEW

The Nespresso Inissia Espresso Maker (Model D40-US-BK-NE) is a compact and lightweight machine designed for convenient preparation of espresso coffee. Equipped with a 19-bar high-pressure pump and a fast 25-second preheating time, it delivers quality espresso with ease. Its ergonomic handle and small footprint make it suitable for any kitchen space.



Figure 1: Front view of the Nespresso Inissia Espresso Maker in Black.

2. SETUP

2.1 Unpacking and Initial Placement

Carefully remove all packaging materials. Place the machine on a stable, flat surface away from water sources and heat. Ensure the power cord is accessible.



Figure 2: Nespresso Inissia machine and included components.

2.2 Water Tank Preparation

1. Remove the removable 24-ounce water tank from the back of the machine.
2. Rinse the water tank thoroughly with fresh drinking water.
3. Fill the water tank with fresh drinking water up to the maximum level indicator.
4. Place the water tank back onto the machine, ensuring it is securely seated.



Figure 3: Side view showing the removable water tank.

2.3 Initial Rinse

Before first use, or after a period of inactivity, perform an initial rinse cycle to clean the internal system.

1. Ensure the water tank is filled.
2. Place a large container (at least 24 oz) under the coffee outlet.
3. Press either the Espresso or Lungo button to start the rinse cycle. No capsule is needed for this step.
4. Allow the machine to run until the water tank is empty or the container is full. Repeat if desired.

3. OPERATING INSTRUCTIONS

3.1 Powering On

Plug the machine into a grounded power outlet. Press any coffee button to turn the machine on. The buttons will flash while the machine preheats (approximately 25 seconds) and become steady when ready.

3.2 Capsule Insertion

1. Lift the handle completely to open the capsule slot.
2. Insert a Nespresso Original coffee capsule. The machine is designed exclusively for Nespresso coffee capsules.
3. Close the handle firmly.





Figure 4: Machine with the handle raised, ready for capsule insertion.

3.3 Brewing Coffee

The Inissia offers two programmable buttons for coffee preparation:

- **Espresso (40 ml / 1.35 oz):** Press the left button once.
- **Lungo (110 ml / 3.7 oz):** Press the right button once.

The machine will automatically stop when the selected volume is dispensed. You can stop the flow at any time by pressing the button again.



Figure 5: Front view of the machine brewing coffee.

3.4 Adjusting Cup Tray

The folding cup tray can be adjusted to accommodate various cup sizes, including taller recipe glasses for milk-based beverages.

4. MAINTENANCE

4.1 Emptying the Used Capsule Container

The used capsule container automatically collects spent capsules and holds approximately 9-11 capsules. Empty and rinse the container regularly.



Figure 6: The used capsule container, which holds up to 11 capsules.

4.2 Cleaning the Drip Tray

The drip tray collects any excess liquid. Remove and clean it regularly with warm water and mild detergent. The machine is not dishwasher safe.

4.3 General Cleaning and Descaling

- Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaning agents.
- Regular descaling is recommended to maintain machine performance and coffee quality. Refer to the Nespresso website or contact customer support for descaling instructions and products.

5. TROUBLESHOOTING

If you encounter issues with your Nespresso Inissia machine, please refer to the following common solutions:

- **No coffee flow or slow flow:** Check if the water tank is filled. Ensure the capsule is correctly inserted. Perform a rinse cycle without a capsule. Descale the machine if necessary.
- **Flashing lights:** This usually indicates the machine is heating up. If lights continue to flash after 25 seconds, ensure the water tank is properly seated and filled.
- **Leaking:** Check the water tank for proper seating. Ensure the drip tray is correctly positioned.

For further assistance, please contact Nespresso customer support.

6. SPECIFICATIONS

Brand	Nespresso
Model Name	Inissia
Item Model Number	D40-US-BK-NE
Color	Black
Product Dimensions	4.7"D x 12.6"W x 9"H
Item Weight	5.3 pounds

Water Tank Capacity	24 ounces (approx. 680.39 grams)
Pressure Pump	19 Bar
Preheating Time	25 seconds
Operation Mode	Fully Automatic
Energy Rating	A Class
Automatic Power Off	After 9 minutes of inactivity
Coffee Input Type	Pods/Capsules (Nespresso Original)
Dishwasher Safe	No



Figure 7: Dimensions of the Nespresso Inissia Espresso Maker.

7. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your Nespresso Inissia machine or visit the official Nespresso website. The Nespresso Club Services are available online, by telephone, or in Boutiques for personalized advice and technical assistance.

© 2024 Nespresso. All rights reserved.