

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Radio Flyer](#) /

› [Radio Flyer Classic Walker Wagon \(Model 612Z\) Instruction Manual](#)

Radio Flyer 612Z

Radio Flyer Classic Walker Wagon (Model 612Z) Instruction Manual

Brand: Radio Flyer | Model: 612Z

1. INTRODUCTION AND OVERVIEW

The Radio Flyer Classic Walker Wagon is a versatile and durable wooden push toy designed to assist toddlers aged 1 to 4 years in developing confidence and balance during their walking journey. This award-winning product combines classic design with practical features, serving both as a supportive walker and a functional toy wagon for imaginative play and storage.

Key features include a "resist push" mechanism for beginner walkers, removable wooden stake sides, and a furniture-friendly bumper to protect your home. Its robust construction ensures longevity and suitability for various indoor floor types, including hardwood, tile, and carpet.

2. SAFETY INFORMATION

WARNING: Please read all instructions before assembly and use of this product. Failure to follow these instructions may result in serious injury.

- Adult assembly required.
- Always supervise children during use.
- Ensure all parts are securely fastened before each use.
- Do not use on uneven surfaces or near stairs, swimming pools, or other hazards.
- Maximum weight capacity: 35 lbs.
- Recommended for ages 12 months to 4 years.
- The "resist push" feature is designed to prevent the wagon from moving too quickly, aiding beginner walkers. Do not modify this feature.

3. PRODUCT FEATURES

- **Baby Push Walker:** Features resistance clickers to allow beginners to build confidence and balance. The resistance clickers prevent the product from moving too quickly.
- **Furniture Bumper:** A furniture-friendly bumper protects your home while beginners learn to walk,

preventing scratches or wall damage.

- **Toy Storage:** The Classic Walker Wagon doubles as a toy box. Your toddler can store their favorite toys for imaginative play indoors or bring them along on walking adventures.
- **Classic Design:** Crafted with a natural all-wood body and removable wooden side panels, creating a timeless aesthetic.
- **Durable Wheels:** Equipped with durable molded wheels featuring grip tread for smooth movement and comfort on various floor surfaces.

4. SETUP AND ASSEMBLY

The Radio Flyer Classic Walker Wagon requires adult assembly. Please follow the instructions provided in the packaging carefully. Basic assembly typically involves:

1. Attaching the wooden side panels to the main wagon body using the provided hardware.
2. Securing the wheels to the axles. Ensure all nuts and bolts are tightened appropriately to prevent wobbling.
3. Attaching the push handle securely.

Ensure all components are firmly attached and stable before allowing a child to use the walker. Periodically check all fasteners for tightness.

5. OPERATING INSTRUCTIONS

As a Push Walker:

- Place the child behind the walker, allowing them to grasp the handle firmly.
- The built-in resistance clickers on the wheels will provide a controlled pace, preventing the walker from moving too quickly for beginners.
- Encourage the child to push the walker forward, focusing on developing balance and coordination.
- Always ensure a clear path and supervise the child to prevent falls or collisions.

As a Toy Wagon:

- The wooden stake sides can be removed to create an open wagon for larger items or easier access.
- Children can load toys, books, or other small items into the wagon and pull it around using the handle.
- The durable wheels are suitable for various indoor surfaces.

6. MAINTENANCE

- **Cleaning:** Wipe down the wooden and metal surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly inspect all screws, bolts, and connections to ensure they are tight. Tighten any loose fasteners immediately.
- **Storage:** Store the walker wagon in a dry place away from extreme temperatures to prevent warping or damage to the wood.
- **Wheels:** Check wheels periodically for wear and tear. Ensure they rotate freely and the grip tread is intact.

7. TROUBLESHOOTING

- **Wobbling:** If the walker wobbles, check all assembly points and tighten any loose screws or bolts. Ensure the wheels are properly attached.

- **Wheels not turning smoothly:** Inspect wheels for any obstructions (e.g., hair, debris) and remove them. Ensure axles are not bent.
- **Resistance issues:** The resistance clickers are designed to provide a steady pace. If the walker moves too freely or is too stiff, inspect the wheel mechanism for any damage or obstructions.

8. SPECIFICATIONS

Product Dimensions	22.44 x 22.44 x 17.13 inches
Item Weight	10.4 pounds
Item Model Number	612Z
Manufacturer Recommended Age	12 months - 4 years
Maximum Weight Capacity	35 lbs

9. MEDIA GALLERY



Image: A hand demonstrating the removal of one of the wooden stake sides from the wagon.



Image: A detailed view of the wagon's natural all-wood body construction.



Image: A close-up of the wheel, highlighting the "resistance clickers" designed for safety and controlled movement.



Image: A diagram illustrating the overall dimensions of the walker wagon.



10. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation included with your product or visit the official Radio Flyer website. Keep your purchase receipt for warranty claims.