

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kid Galaxy](#) /

› [Kid Galaxy Squeezable Remote Control Fire Truck User Manual](#)

Kid Galaxy 10909

Kid Galaxy Squeezable Remote Control Fire Truck User Manual

Brand: Kid Galaxy

Model: 10909

INTRODUCTION

This manual provides essential information for the safe and effective use of your Kid Galaxy Squeezable Remote Control Fire Truck. Designed for preschool children, this RC toy offers simple two-button control for engaging play.

Safety Information

- Recommended for ages 2 and up.
- The soft, squeezable design is safe for toddlers and will not damage furniture or walls upon impact.
- Ensure adult supervision during play.
- Keep away from water and excessive moisture.
- Do not attempt to modify or disassemble the toy or remote control.

WHAT'S IN THE Box

- 1 x Kid Galaxy Squeezable Remote Control Fire Truck
- 1 x Two-Button Remote Control

SETUP

Battery Installation

Batteries are not included and must be purchased separately. Please refer to the product packaging for the most accurate and up-to-date battery requirements for both the truck and the remote control.

- **Fire Truck:** Requires 5 x AA batteries (not included). Locate the battery compartment on the underside of the truck. Use a small Phillips head screwdriver to open the compartment. Insert the batteries, ensuring correct polarity (+/-). Replace the cover and tighten the screw.
- **Remote Control:** Requires 2 x AAA batteries (not included). Locate the battery compartment on the back of the

remote control. Open the compartment, insert the batteries with correct polarity, and replace the cover.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period.

OPERATING YOUR FIRE TRUCK

Basic Controls

The remote control features two large, easy-to-use buttons:

- **Button 1 (Forward):** Press this button to make the fire truck move forward.
- **Button 2 (Spin):** Press this button to make the fire truck spin in place.

The truck is designed to drive on various indoor surfaces including hardwood floors, tile, concrete, and medium carpet. Its soft body ensures it won't mar furniture or walls if it bumps into them.



Image: The Kid Galaxy Squeezable Remote Control Fire Truck, red with white and silver accents, shown alongside its two-button remote control. The truck has large wheels and a soft, rounded body.

Demonstration Video

Video: A short demonstration of the Kid Galaxy Remote Control Fire Truck in action, showing its forward movement and spinning capabilities on a wooden floor. The video also highlights the soft, squeezable body and the simple two-button remote control.

MAINTENANCE

Cleaning

To clean your fire truck, gently wipe its surface with a soft, damp cloth. Do not immerse the toy or remote control in water. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or electronic components.

Storage

When not in use, store the fire truck and remote control in a cool, dry place away from direct sunlight. If storing for an extended period, remove all batteries from both the truck and the remote control to prevent leakage and corrosion.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause / Solution
Truck does not move or respond to remote.	<p>Check if batteries are correctly installed in both the truck and remote.</p> <p>Replace old or depleted batteries with new ones.</p> <p>Ensure the truck's power switch (usually on the underside) is in the "ON" position.</p>
Truck moves erratically or on its own.	<p>This can sometimes occur due to radio interference. Try moving to a different location.</p> <p>Ensure the remote control is turned off when not in use.</p> <p>Check for low batteries in either the truck or remote.</p>
Limited range or poor control.	<p>Ensure there are no obstructions between the remote and the truck.</p> <p>Check battery levels in both devices.</p> <p>Avoid operating near other electronic devices that may cause interference.</p>

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.5 x 4.5 x 6 inches
Item Weight	3.98 ounces
Item Model Number	10909
Manufacturer Recommended Age	18 months and up (as per specifications) / 2 years and up (as per description/feature bullets)
Frequency	27 or 49 MHz (varies by product)
Batteries Required (Truck)	5 x AA (not included)
Batteries Required (Remote)	2 x AAA (not included)
Material	Soft, squeezable body



Image: A rear-angle view of the Kid Galaxy Squeezable Remote Control Fire Truck, highlighting its robust wheels and the details on the back of the truck.



Image: A hand pressing down on the top of the Kid Galaxy Squeezable Remote Control Fire Truck, demonstrating its soft and flexible body material.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Kid Galaxy customer service directly. Refer to the product packaging or the official Kid Galaxy website for contact details.

Website: www.kidgalaxy.com (Example link, actual link not provided in data)

