

Meidi-Clock 621011607202

MEIDI CLOCK Modern Design Mickey Mouse 3D Wall Clock Instruction Manual

Model: 621011607202

INTRODUCTION

Thank you for choosing the MEIDI CLOCK Modern Design Mickey Mouse 3D Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Use only 1 AA 1.5V carbon battery. Do not use high-capacity alkaline or rechargeable batteries, as they may damage the clock movement.
- Keep batteries out of reach of children.
- Do not expose the clock to extreme temperatures or direct sunlight.
- Avoid dropping the clock, as this may cause damage to the internal mechanism or external casing.

PACKAGE CONTENTS

Your package should contain the following items:

- 1 x MEIDI-CLOCK Mickey Mouse 3D Wall Clock

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA 1.5V carbon battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.



Image: Rear view of the clock, highlighting the battery compartment and time adjustment knob.

2. Setting the Time

1. Locate the time adjustment knob on the back of the clock, typically near the battery compartment.
2. Gently turn the knob in either direction until the hour and minute hands display the correct time.
3. Avoid forcing the hands directly, as this can damage the movement.

3. Mounting the Clock

1. Choose a suitable location on a wall for mounting.
2. Insert a small nail or screw into the wall at the desired height. Ensure the nail or screw is securely fastened and can support the clock's light weight.
3. Align the improved rear shell hook piece on the back of the clock with the nail or screw on the wall.
4. Carefully hang the clock, ensuring it is stable and level.



Image: Front view of the clock, showcasing its modern design and 3D numerals.

OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, your MEIDI CLOCK Mickey Mouse 3D Wall Clock will begin to operate automatically. The clock features a silent quartz movement, ensuring no ticking sounds, which is ideal for bedrooms, offices, or any quiet environment. The large 3D Arabic numerals provide clear visibility from a distance.

3D Stereo Number



Image: Detailed view of the clock's 3D numerals, emphasizing their design and readability.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace the AA carbon battery annually or when you notice the clock losing time or stopping. Promptly remove depleted batteries to prevent leakage.
- **Hand Protection:** The metal hands are exposed. Handle the clock carefully to avoid bending or damaging them.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock is not running	Battery is dead or incorrectly installed.	Check battery polarity. Replace with a new AA 1.5V carbon battery.
Clock loses time or runs slow	Battery is low.	Replace with a new AA 1.5V carbon battery.
Hands are stuck or not moving smoothly	Hands may be bent or obstructed.	Gently check if hands are touching each other or the clock face. Carefully adjust if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Meidi-Clock
Model Number	621011607202
Color	Black
Display Type	Analog
Special Feature	Large Display, Silent Clock
Product Dimensions	12.5"W x 11"H (Approx. 32 x 29 x 5 cm)
Power Source	Battery Powered (1 AA 1.5V carbon battery, not included)
Material	ABS+PC Plastic, Stainless Metal Hands
Mounting Type	Wall Mount
Item Weight	15.4 ounces



Image: Clock dimensions for reference.

WARRANTY AND SUPPORT

This product comes with a Limited Warranty. For specific details regarding warranty coverage, please refer to the product packaging or contact the manufacturer directly. If you encounter any issues or require assistance, please reach out to the seller or manufacturer's customer support for guidance.

Contact information can typically be found on the product packaging or the official Meidi-Clock website.

© 2023 Meidi-Clock. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question