

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bosch](#) /

› [Bosch VitaJuice 2 MES25A0 Juicer Instruction Manual](#)

Bosch MES25A0

Bosch VitaJuice 2 MES25A0 Juicer Instruction Manual

Model: MES25A0

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Bosch VitaJuice 2 MES25A0 juicer. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

- Always ensure the appliance is correctly assembled and the lid is securely locked before operation. The juicer will not start if components are not properly in place.
- Do not insert fingers or other objects into the feeding chute while the appliance is operating. Use the food pusher provided.
- Unplug the appliance from the power supply before cleaning, assembling, or disassembling.
- Keep the appliance out of reach of children.
- Do not immerse the motor unit in water or any other liquid.
- Regularly inspect the power cord for damage. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Bosch VitaJuice 2 MES25A0 juicer:

- Motor unit with control dial (On/Off, Speed 1, Speed 2)
- Pulp container (2 Liters capacity)
- Juice jug with foam separator
- Lid with feeding chute and food pusher
- Stainless steel fine sieve
- Juice spout with anti-drip function
- Cleaning brush



Figure 1: All components of the Bosch VitaJuice 2 MES25A0 juicer, including the motor unit, pulp container, juice jug, lid, food pusher, stainless steel sieve, and cleaning brush.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all parts from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash all detachable parts (pulp container, juice jug, lid, food pusher, sieve) in warm soapy water, rinse thoroughly, and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble:**
 - a. Place the motor unit on a stable, flat surface.
 - b. Insert the pulp container onto the motor unit.
 - c. Place the stainless steel sieve securely into the motor unit.

- d. Position the lid onto the motor unit, ensuring it aligns correctly with the locking clamps.
 - e. Engage the locking clamps on both sides of the appliance until they click into place. The appliance will not operate if the lid is not securely locked.
 - f. Place the juice jug under the juice spout.
 - g. Insert the food pusher into the feeding chute.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet (220V).



Figure 2: Side view of the assembled juicer, showing the locking mechanism and the feeding chute.

OPERATING INSTRUCTIONS

Preparing Fruits and Vegetables

- Wash all fruits and vegetables thoroughly.
- The extra-large 73mm feeding chute allows most fruits and vegetables to be juiced whole. For very

large items, cut them into smaller pieces that fit comfortably into the chute.

- Remove large seeds (e.g., from peaches, plums) and hard pits.
- Peel citrus fruits (oranges, lemons, grapefruits) as their peel can impart a bitter taste.

Juicing Process

1. Ensure the juice jug is placed under the juice spout.
2. Turn the control dial to the desired speed setting:
 - a. **Speed 1:** For soft fruits and vegetables (e.g., berries, tomatoes, grapes).
 - b. **Speed 2:** For hard fruits and vegetables (e.g., apples, carrots, celery).
3. Gradually feed the prepared fruits and vegetables into the feeding chute. Use the food pusher to gently guide them down. Do not apply excessive force.
4. The juicer uses a centrifugal extraction method, which rapidly grates and spins the produce to separate juice from pulp.
5. The anti-drip system prevents juice from dripping onto your countertop when the spout is closed. To activate, push the spout upwards after juicing.
6. When finished, turn the control dial to "O/off" and unplug the appliance.



Figure 3: The Bosch VitaJuice 2 MES25A0 juicer ready for use, showing the control dial and feeding chute.



Figure 4: Detail of the juice spout, illustrating the anti-drip feature for a clean countertop.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your juicer. Always unplug the appliance before cleaning.

1. **Disassemble:** Unlock the clamps and carefully remove the lid, sieve, pulp container, and juice jug.
2. **Rinse Immediately:** Rinse all detachable parts under running water to prevent pulp and juice residue from drying.
3. **Dishwasher Safe Parts:** The pulp container, juice jug, lid, and food pusher are dishwasher safe. Place them on the top rack of your dishwasher.
4. **Cleaning the Sieve:** The stainless steel fine sieve should be cleaned thoroughly after each use. Use the provided cleaning brush to remove any trapped pulp fibers. For stubborn residue, soak the sieve in warm soapy water before scrubbing.
5. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water.
6. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	<ul style="list-style-type: none"> • Power cord not plugged in. • Lid not securely locked. • Components not correctly assembled. 	<ul style="list-style-type: none"> • Check power connection. • Ensure locking clamps are fully engaged. • Verify all parts (sieve, pulp container, lid) are correctly placed.
Low juice yield or excessive pulp in juice.	<ul style="list-style-type: none"> • Sieve is clogged. • Incorrect speed setting for produce. • Feeding produce too quickly. 	<ul style="list-style-type: none"> • Clean the sieve thoroughly. • Use Speed 2 for harder fruits/vegetables. • Feed produce slowly and steadily.
Appliance vibrates excessively.	<ul style="list-style-type: none"> • Sieve is not properly seated or damaged. • Uneven load of produce. 	<ul style="list-style-type: none"> • Check and reseal the sieve. Inspect for damage. • Feed produce evenly.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	MES25A0
Power	700 Watts
Voltage	220 Volts
Pulp Container Capacity	2 Liters
Product Dimensions (L x W x H)	31 x 18 x 31.2 cm
Item Weight	4.32 Kilograms

Feature	Detail
Material	Stainless Steel (sieve), Plastic (housing)
Number of Speeds	2
Noise Level	60 dB
Special Features	Whole fruit processing, Ultra-fine stainless steel sieve, Anti-drip system, Reinforced safety system, Dishwasher-safe parts, Powerful motor
Country of Origin	China

WARRANTY AND SUPPORT

Your Bosch VitaJuice 2 MES25A0 juicer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

- **Spare Parts Availability:** Spare parts are generally available for 1 year from the date of purchase.
- For technical assistance, repairs, or to order spare parts, please contact Bosch customer service. Contact details can typically be found on the official Bosch website or in the warranty documentation.