

RYOBI AR24095

RYOBI 0.095 in. Pro Cut II Replacement Trimmer Line

USER MANUAL

Introduction

This manual provides essential information for the safe and effective use of your RYOBI 0.095 inch Pro Cut II Replacement Trimmer Line. This product is designed for use with fixed-line trimmer heads that are compatible with 0.095 inch diameter line, specifically RYOBI Pro-Cut II™ String Heads.

The RYOBI 0.095 inch Pro Cut II Replacement Trimmer Line comes in pre-cut sections, simplifying the replacement process and ensuring optimal performance for your trimming tasks.

Safety Information

WARNING: To reduce the risk of injury, the user must read and understand the instructions in their trimmer's Operator's Manual before using this product. This trimmer line is an accessory and should only be used in accordance with the safety guidelines provided by your trimmer's manufacturer.

- Always wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear, when operating a string trimmer.
- Ensure the trimmer is turned off and the power source disconnected (battery removed or unplugged) before attempting to install or replace trimmer line.
- Inspect the trimmer head for any damage or wear before installing new line.
- Keep bystanders, children, and pets at a safe distance from the work area.

Setup and Installation

This section details the process for installing the RYOBI 0.095 inch Pro Cut II Replacement Trimmer Line into a compatible fixed-line trimmer head. Always refer to your trimmer's specific manual for detailed instructions on accessing and loading the trimmer head.



Image: The packaging for the RYOBI 0.095 inch Pro Cut II Replacement Trimmer Line. The package clearly indicates the line diameter, compatibility with Pro-Cut II™ String Heads, and quantity of 24 pre-cut strips.

1. **Prepare the Trimmer:** Ensure the string trimmer is completely powered off. If it is a battery-powered model, remove the battery pack. If it is an electric corded model, unplug it from the power source.
2. **Access the Trimmer Head:** Depending on your trimmer model, you may need to open or disassemble the fixed-line trimmer head to access the line insertion points. Consult your trimmer's manual for specific instructions.
3. **Remove Old Line (if present):** If there are any remaining pieces of old trimmer line, carefully remove them from the trimmer head.
4. **Insert New Line:** Take one pre-cut section of RYOBI 0.095 inch Pro Cut II Trimmer Line. Locate the designated holes or slots on your fixed-line trimmer head. Insert one end of the pre-cut line into a hole and push it through until the line is centered, with equal lengths extending from both sides of the head.
5. **Secure the Line:** Ensure the line is securely seated in the trimmer head. Some heads may have a locking mechanism or require the line to be threaded through a specific path.

- 6. **Repeat for Additional Lines:** If your trimmer head uses multiple lines, repeat step 4 for each additional line. The RYOBI Pro Cut II Trimmer Line package contains 24 pre-cut strips.
- 7. **Reassemble Trimmer Head:** Reassemble the trimmer head components if they were removed.
- 8. **Power On:** Reconnect the power source (insert battery or plug in) and test the trimmer.

Operating

Once the RYOBI 0.095 inch Pro Cut II Replacement Trimmer Line is correctly installed, the operation of your string trimmer will proceed as described in your trimmer's operator manual. This line is designed to provide efficient cutting performance for various trimming tasks.

Always follow the operating instructions and safety precautions provided with your specific string trimmer model.

Maintenance

Proper maintenance of your trimmer line ensures consistent performance and extends its lifespan.

- **Storage:** Store unused trimmer line in a cool, dry place away from direct sunlight and extreme temperatures. This helps prevent the line from becoming brittle.
- **Inspection:** Before each use, inspect the installed trimmer line for any signs of wear, fraying, or damage. Replace any worn or damaged line immediately to maintain cutting efficiency and safety.
- **Replacement:** Replace trimmer line as needed when it becomes too short or worn to effectively cut vegetation.

Troubleshooting

If you encounter issues while using the trimmer line, consider the following:

- **Line Breaks Frequently:**
 - Ensure the line is correctly installed and centered in the trimmer head.
 - Avoid hitting hard surfaces like concrete, rocks, or fences.
 - Check if the line is brittle due to improper storage; replace if necessary.
- **Poor Cutting Performance:**
 - Ensure the line is of adequate length extending from the trimmer head.
 - Verify that the line diameter (0.095 inch) is appropriate for your trimmer model.
 - Replace old or worn line with fresh line.

For issues related to the trimmer itself (e.g., motor problems, power supply), refer to your trimmer's operator manual or contact RYOBI customer support.

Specifications

Brand	RYOBI
Model Number	AR24095
Line Diameter	0.095 inches (2.41 mm)

Quantity	24 Pre-Cut Strips
Compatibility	RYOBI Pro-Cut II™ String Heads and other compatible fixed-line trimmer heads
UPC	046396490766

Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the official RYOBI website or contact RYOBI customer service directly. Warranty terms may vary and are typically provided with the original product purchase or available online.

You can visit the official RYOBI website for further assistance: www.ryobitools.com