

[Manuals.plus](#) /

> [Logilink](#) /

> Logilink ID0120 Wireless Numeric Keypad User Manual

Logilink ID0120

Logilink ID0120 Wireless Numeric Keypad User Manual

Model: ID0120 | Brand: Logilink

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Logilink ID0120 Wireless Numeric Keypad. Designed for use with laptops and compatible with Windows operating systems, this 2.4 GHz RF wireless keypad enhances data entry efficiency.



Image 1.1: Logilink ID0120 Wireless Numeric Keypad with its USB receiver.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Logilink ID0120 Wireless Numeric Keypad
- 1 x USB Receiver (2.4 GHz)
- 1 x AAA Alkaline Battery
- 1 x User Manual

3. SETUP INSTRUCTIONS

Follow these steps to set up your wireless numeric keypad:

1. **Insert Battery:** Locate the battery compartment on the back of the keypad. Open the cover and insert the provided AAA alkaline battery, ensuring correct polarity (+/-). Close the battery cover securely.



Image 3.1: Rear view of the keypad, indicating the battery compartment location.

2. **Connect USB Receiver:** Plug the small USB receiver into an available USB port on your laptop or computer. The operating system will automatically detect and install the necessary drivers. This process may take a few moments.



Image 3.2: The wireless keypad and its USB receiver, illustrating the components involved in the connection process.

3. **Power On:** If your keypad has a power switch (usually on the side or back), slide it to the 'ON' position. The keypad is now ready for use.

4. OPERATING INSTRUCTIONS

The Logilink ID0120 functions as a standard numeric keypad, providing efficient data entry for various applications.

4.1 Basic Keypad Functionality

- **Numeric Input:** Press the number keys (0-9) to enter digits.
- **Arithmetic Operations:** Use the '+', '-', '*', and '/' keys for calculations.
- **Enter Key:** Functions as the 'Enter' key on a standard keyboard.
- **Back Space:** Deletes the character to the left of the cursor.



Image 4.1: Front view of the keypad, detailing the layout of numeric and function keys.

4.2 Special Keys

- **NUM LOCK:** Toggles the numeric keypad between number entry and navigation functions. An indicator light typically shows when Num Lock is active.
- **HOME / END:** When Num Lock is off, these keys function as 'Home' and 'End' for navigation.
- **PG UP / PG DN:** When Num Lock is off, these keys function as 'Page Up' and 'Page Down'.
- **INS / DEL:** When Num Lock is off, these keys function as 'Insert' and 'Delete'.

4.3 Wireless Range

The keypad operates using 2.4 GHz RF wireless technology, providing a reliable connection up to 10 meters (approximately 33 feet) from the USB receiver. For optimal performance, ensure a clear line of sight

between the keypad and the receiver, and avoid placing the receiver near sources of interference.



Image 4.2: Illustration of the 10-meter wireless connection range between the keypad and a laptop.

5. MAINTENANCE

Proper care ensures the longevity and performance of your keypad.

- **Cleaning:** Use a soft, dry cloth to clean the keypad. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.

- **Battery Replacement:** When the keypad's performance degrades or it stops responding, replace the AAA battery. Always use a fresh alkaline battery.
- **Storage:** When not in use for extended periods, remove the battery to prevent leakage. Store the keypad in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Logilink ID0120 keypad, refer to the following common solutions:

- **Keypad not responding:**
 - Ensure the battery is correctly inserted and has sufficient charge. Replace if necessary.
 - Verify the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
 - Make sure the keypad's power switch (if present) is in the 'ON' position.
 - Move the keypad closer to the USB receiver to rule out range issues.
- **Keys typing incorrect characters:**
 - Check the 'NUM LOCK' indicator. If it's off, the keys may be functioning as navigation keys (Home, End, PgUp, PgDn, Ins, Del). Press 'NUM LOCK' to activate numeric input.
- **Intermittent connection:**
 - Reduce the distance between the keypad and the USB receiver.
 - Avoid placing the receiver near other wireless devices or large metal objects that could cause interference.

7. SPECIFICATIONS

Feature	Description
Model	ID0120
Brand	Logilink
Interface	RF Wireless (2.4 GHz)
Connectivity	USB Receiver
Compatible Devices	Laptop
Operating System Support	Windows 2000, Windows 7 (Enterprise, x64, H), and newer versions
Power Source	1 x AAA Battery
Color	Black
Special Feature	Backlit (Single Color)
Dimensions (L x W x H)	12.4 cm x 8.2 cm x 2.2 cm (approx. 4.9 x 3.2 x 0.9 inches)

8. WARRANTY AND SUPPORT

Logilink products are designed for reliability and performance. For detailed warranty information, technical

support, or further assistance, please visit the official Logilink website or contact their customer service.

You can find product-specific information and support resources at:

<http://logilink.de/showproduct/ID0120.html>