

[Manuals.plus](#) /

› [Reality Leuchten](#) /

› Reality Leuchten R40122001 Paper Floor Lamp Instruction Manual

Reality Leuchten R40122001

Reality Leuchten R40122001 Paper Floor Lamp Instruction Manual

Brand: Reality Leuchten | **Model:** R40122001

INTRODUCTION

Thank you for purchasing the Reality Leuchten R40122001 Paper Floor Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new lamp. Please read these instructions carefully before use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- **Indoor Use Only:** This lamp is designed exclusively for indoor use. Do not expose it to moisture or outdoor elements.
- **Electrical Safety:** Ensure the power supply voltage matches the lamp's requirements (230 Volts). Always unplug the lamp from the power outlet before cleaning, changing bulbs, or performing any maintenance.
- **Bulb Type and Wattage:** Use only E27 base bulbs. Do not exceed the maximum wattage of 60 Watts per bulb. Using higher wattage bulbs can cause overheating and fire hazards.
- **Fragile Material:** The lamp shade is made of paper. Handle with care to prevent tearing or damage. Keep away from open flames and heat sources.
- **Assembly:** Follow all assembly instructions carefully. Ensure all connections are secure before plugging in the lamp.
- **Placement:** Place the lamp on a stable, level surface to prevent tipping. Keep away from children and pets.
- **Cleaning:** Use a dry, soft cloth for cleaning. Do not use liquid cleaners or abrasive materials.

PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Lamp Frame (Base and vertical supports)

- Paper Lamp Shade
 - Lamp Holder with E27 Socket
 - Power Cord with Push Button Switch
 - Assembly Hardware (screws, nuts, etc., if applicable)
 - *Note: Light bulbs are not included and must be purchased separately.*
-

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Reality Leuchten R40122001 Paper Floor Lamp. It is recommended to assemble the lamp on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out and identify each component.
2. **Assemble the Lamp Frame:**
 - Attach the vertical support rods to the lamp base using the provided hardware. Ensure they are securely fastened.
 - Connect any upper frame sections if your model requires it, ensuring all parts align correctly.



Image: The lamp base with its support structure. Ensure all connections are tight.

3. Install the Lamp Holder:

- Carefully feed the power cord through the lamp frame.
- Secure the E27 lamp holder to the top section of the lamp frame according to the design. Ensure it is firmly attached and the wiring is not pinched.

4. Attach the Paper Lamp Shade:

- Gently unfold the paper lamp shade. Be careful as the paper material is delicate.
- Position the shade around the lamp frame, securing it at the top and bottom as designed. This typically involves attaching it to designated clips or rings on the frame.



Image: Detail of the paper shade. Handle with care during installation.

5. Insert Light Bulbs:

- Screw two E27 light bulbs (not included) into the lamp holders. Ensure they are securely tightened but do not overtighten.
- Verify that the bulbs do not exceed the maximum wattage of 60 Watts each.

6. Final Placement: Place the assembled lamp in its desired location, ensuring it is stable and the power cord is not a tripping hazard.



Image: The fully assembled Reality Leuchten R40122001 Paper Floor Lamp.

OPERATING INSTRUCTIONS

1. **Connect to Power:** Plug the lamp's power cord into a standard 230 Volt electrical outlet.
2. **Turn On/Off:** The lamp is equipped with a push-button switch on the power cord. Press the switch to turn the lamp on or off.

MAINTENANCE

- **Cleaning:** Always unplug the lamp before cleaning. Use a dry, soft, lint-free cloth to gently wipe the lamp frame and shade. Do not use water, cleaning sprays, or abrasive materials, as these can damage the paper shade and electrical components.

- **Bulb Replacement:**
 - a. Unplug the lamp from the power outlet.
 - b. Allow the old bulb to cool completely before touching it.
 - c. Carefully unscrew the old E27 bulb from the socket.
 - d. Screw in a new E27 bulb, ensuring it does not exceed 60 Watts.
 - e. Plug the lamp back in and test its operation.
- **Shade Care:** The paper shade is delicate. Avoid touching it unnecessarily to prevent marks or tears. Keep it away from direct sunlight to prevent discoloration over time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	◦ Lamp not plugged in. ◦ Light bulb is loose or burnt out. ◦ Power outlet is not functioning. ◦ Switch is faulty.	◦ Ensure the power cord is securely plugged into a working outlet. ◦ Tighten or replace the light bulb. ◦ Test the outlet with another appliance. ◦ Contact customer support if the switch is suspected to be faulty.
Lamp flickers.	◦ Loose bulb connection. ◦ Faulty bulb.	◦ Tighten the light bulb. ◦ Replace the light bulb.
Paper shade is damaged.	◦ Physical impact or improper handling.	◦ The paper shade is delicate and cannot be easily repaired if torn. Consider replacing the shade if damage affects aesthetics or light diffusion.

SPECIFICATIONS

Brand	Reality Leuchten
Model Number	R40122001
Product Dimensions (L x W x H)	23.01 x 23.01 x 130 cm
Item Weight	712.14 g (approx. 1.57 lbs)
Material	Paper (shade)
Color	White

Style	Modern
Number of Light Sources	2
Bulb Base Type	E27
Max Compatible Wattage	60 Watts per bulb
Voltage	230 Volts
Switch Style	Push Button
Power Source	Corded Electric
Plug Type	F - 2 pin EU German
Special Features	Lightweight
IP Rating	IP20 (No protection against water)
Specific Use	Indoor use only
Bulbs Included	No
Batteries Required	No
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question