

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips S9031/12 Shaver Series 9000 User Manual](#)

Philips S9031/12

Philips S9031/12 Shaver Series 9000 User Manual

Model: S9031/12

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips S9031/12 Shaver Series 9000. This advanced electric shaver is designed for both wet and dry shaving, featuring contour adjustment technology and a V-track system for a close and comfortable shave. Please read these instructions carefully before first use and retain them for future reference.



Image 1.1: The Philips S9031/12 Shaver Series 9000, its retail packaging, and included precision trimmer attachment.

Included Components:

- Philips S9031/12 Shaver Series 9000
- Precision Trimmer Attachment
- Charging Cable
- Cleaning Brush
- Travel/Storage Pouch

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the appliance.

- **Caution:** Use the shaver with care to avoid skin irritation or injury.
- Clean the shaver regularly to maintain hygiene and prevent bacterial growth.
- Avoid contact with water while the shaver is charging to prevent electrical hazards.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Do not use the appliance if it is damaged in any way.

3. SETUP

3.1 Initial Charging

Before using your shaver for the first time, ensure it is fully charged. Connect the charging cable to the shaver and plug it into a power outlet. The battery indicator lights will show the charging progress.

- A full charge takes approximately 1 hour and provides up to 50 minutes of shaving time (approximately 17 shaves).
- A quick charge of 5 minutes provides enough power for one shave.

3.2 Attaching the Precision Trimmer

To use the precision trimmer, first remove the shaving head from the shaver body. Align the trimmer attachment with the shaver body and press it on until it clicks into place.

4. OPERATING THE SHAVER

4.1 Shaving Techniques

The Philips S9031/12 Shaver Series 9000 can be used for both dry and wet shaving, including with foam or gel.



Image 4.1: A user demonstrating wet shaving with the Philips S9031/12 shaver and shaving foam.

- **Dry Shaving:** Ensure your face is clean and dry.
- **Wet Shaving:** Apply shaving foam or gel to your face before shaving.
- Press the on/off button to start the shaver.
- Move the shaving heads in small, circular motions over your skin. Apply gentle pressure. The shaver's 8-direction contour detect technology and V-track system are designed to follow your facial contours for an efficient shave.



Image 4.2: The flexible shaving heads of the Philips S9031/12 adapting to facial contours for optimal contact.

4.2 Using the Precision Trimmer

After attaching the precision trimmer, switch on the shaver. Use the trimmer to shape sideburns, moustaches, or to pre-trim longer beard hair before shaving.

4.3 Travel Lock

The shaver features a travel lock to prevent accidental activation during transport. To activate or deactivate the travel lock, press and hold the on/off button for 3 seconds. A padlock symbol will appear on the display when the travel lock is active.

5. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your shaver.

5.1 Cleaning the Shaver



Image 5.1: The Philips S9031/12 shaver being cleaned under running tap water, demonstrating its waterproof design.

- After each use, switch off the shaver and rinse the shaving unit under warm running water.
- For a more thorough cleaning, detach the shaving head and rinse both the head and the hair chamber under water.
- Use the provided cleaning brush to remove any stubborn hair particles.
- Allow the shaver to air dry completely before storing or recharging.

5.2 Replacing Shaving Heads

For optimal shaving performance, it is recommended to replace the shaving heads approximately every two years. The shaver's display will indicate when replacement is due with a shaving head symbol.

6. TROUBLESHOOTING

If you encounter issues with your Philips S9031/12 shaver, refer to the following common solutions:

- **Shaver not turning on:** Ensure the battery is charged. Check if the travel lock is activated (a padlock symbol will be displayed).
- **Poor shaving performance:** Clean the shaving heads thoroughly. If performance does not improve,

the shaving heads may need replacement.

- **Blocked shaving heads:** If an orange exclamation mark, cleaning, and shaving head symbol appear with an audible signal, the shaving heads may be blocked. Clean them thoroughly.
- **Overheating during charging:** If an orange exclamation mark appears during charging, the device may be overheating. Charging will pause until the shaver cools down.

7. SPECIFICATIONS

Brand	Philips
Model Number	S9031/12
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Battery Life	50 minutes
Charging Time	1 hour for full charge, quick charge for 1 shave
Special Features	Cordless, Dry Shave, Wet Shave
Recommended Use	Face
Blade Material	Stainless Steel
Product Dimensions	17.53 x 9.14 x 24.38 cm
Item Weight	0.4 Kilograms

8. WARRANTY AND SUPPORT

This Philips product is manufactured by Philips. For detailed warranty information, product registration, or technical support, please visit the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for warranty claims.

Manufacturer: Philips