

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [EGLO](#) /

> [EGLO 89076A Ceiling Track Light Instruction Manual](#)

## EGLO 89076A

# EGLO 89076A Ceiling Track Light Instruction Manual

Model: 89076A

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your EGLO 89076A Ceiling Track Light. Please read this manual thoroughly before installation and retain it for future reference. Proper installation and use are essential for optimal performance and safety.

## SAFETY INFORMATION

---

**WARNING: Risk of electric shock. Installation should be performed by a qualified electrician or a person with electrical experience. Disconnect power at the circuit breaker before installation or servicing.**

- Ensure the main power supply is switched off before commencing any work.
- All electrical connections must be in accordance with local and national electrical codes.
- Do not install this fixture in areas where it may be exposed to direct water spray or submersion, unless specifically rated for such conditions. This fixture is suitable for damp locations.
- Handle glass components with care to prevent breakage.
- Do not exceed the maximum wattage specified for the bulbs.
- Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Please check your local laws before purchasing and installing this product.

## PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- EGLO 89076A Ceiling Track Light Fixture (1 unit)
- Bulbs (included)
- Quick Installation Guide (1 unit)

## SETUP AND INSTALLATION

---

This section outlines the general steps for installing your EGLO 89076A Ceiling Track Light. Refer to the included Quick Installation Guide for detailed diagrams and specific instructions.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the mounting surface is clean, dry, and capable of supporting the fixture's weight.
2. **Mounting Bracket Installation:** Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Electrical Connections:** Connect the fixture's wires to the household electrical wires according to standard wiring practices (e.g., black to black, white to white, ground to ground). Use approved wire connectors and ensure all connections are secure.
4. **Fixture Attachment:** Carefully align the fixture with the mounting bracket and secure it using the provided screws or fasteners. Ensure the fixture is flush against the ceiling and stable.
5. **Bulb Installation:** Insert the included bulbs into the light sockets. This fixture is LED compatible.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image 1: EGLO 89076A Ceiling Track Light showing its dimensions (Length: 9.84", Width: 5.5", Height: 3.39"). The fixture features two adjustable light heads within a brushed aluminum square housing.



Image 2: The EGLO 89076A Ceiling Track Light installed on a ceiling, illuminating a modern living space. The brushed aluminum finish complements the room's decor.

## OPERATING INSTRUCTIONS

---

The EGLO 89076A Ceiling Track Light is designed for straightforward operation.

- **Power On/Off:** Control the light fixture using a standard wall switch connected to the circuit.
- **Adjusting Light Heads:** The individual light heads are adjustable, allowing you to direct light to specific areas. Gently pivot or tilt the light heads to achieve the desired illumination angle.
- **Dimming Functionality:** This fixture is compatible with dimmer switches (dimmer not included). If you wish to use a dimming function, ensure you have a compatible dimmer switch installed on your wall.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your track light.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the fixture is cool and power is disconnected before replacing bulbs. Use only bulbs of the correct type and wattage as specified for the fixture.
- **Inspection:** Periodically inspect the wiring and connections for any signs of wear or damage. If any issues are found, consult a qualified electrician.

## TROUBLESHOOTING

If you encounter issues with your EGLO 89076A Ceiling Track Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wiring connection Faulty bulb	Check circuit breaker and wall switch. Verify all wire connections are secure (with power off). Replace bulb with a new one.
Light flickers	Loose bulb Incompatible dimmer switch Loose wiring	Tighten bulb. Ensure dimmer switch is compatible with LED bulbs if using LED. Check wiring connections (with power off).
Humming noise from fixture	Incompatible dimmer switch Loose components	Replace dimmer with a compatible one. Ensure all parts are securely fastened.

If the problem persists after attempting these solutions, contact a qualified electrician or customer support.

## SPECIFICATIONS

Feature	Detail
Brand	EGLO
Model Number	89076A
Color	Black & Chrome Finish
Material	Metal, Glass

Feature	Detail
Light Fixture Form	Track Light Head
Power Source	Corded Electric
Special Feature	Adjustable Light Heads
Light Source Type	LED Compatible (Bulbs Included)
Finish Type	Finished
Number of Light Sources	2
Voltage	120 Volts
Shape	Square
Included Components	Light fixture, Quick Installation Guide
Lighting Method	Downlight
Item Weight	2 Pounds
Wattage	20 watts (total, for LED) / Designed for 2x35W
Switch Type	Dimmer compatible (dimmer not included)
Mounting Type	Protruding
Product Dimensions	3.37 x 5.5 x 9.87 inches
Damp Location Rated	Yes

## WARRANTY

---

All products purchased have a 30-day replacement parts policy to ensure a fully working item. All products are covered under a 1-year warranty when purchased on Amazon. The warranty period begins on the day the product is originally shipped. The warranty covers all of the items and conditions identified in the original manufacturer's warranty. Some of the items specifically not covered by the warranty are loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

## SUPPORT

---

For technical assistance, missing parts, or warranty claims, please contact EGLO customer support. Refer to the contact information provided in your purchase documentation or visit the official EGLO website for support details.