

[Manuals.plus](#) /

› [Soundstream](#) /

› Soundstream VR-930B Car DVD Player Instruction Manual

## Soundstream VR-930B

# Soundstream VR-930B Car DVD Player Instruction Manual

Model: VR-930B

## 1. PRODUCT OVERVIEW

---

The Soundstream VR-930B is a single DIN car DVD player featuring a 9.3-inch motorized LCD touchscreen display and Bluetooth connectivity. This unit supports playback of various media types including CD, CD-R/RW, DVD, DVD-R/RW, MP3, WMA, and AAC. It includes a front USB input and a front SD card slot for expanded media options. The device also offers AM/FM radio tuning and MP3 ID3 Tag Display for track information.



Image: The Soundstream VR-930B car DVD player, showcasing its large 9.3-inch motorized LCD touchscreen display in a vehicle dashboard.

### Key Features:

- Single DIN chassis with a 9.3-inch motorized LCD touchscreen display.
- Bluetooth for audio streaming and hands-free calling.
- Media playback from CD, DVD, USB, and SD cards.
- AM/FM tuner with MP3 ID3 Tag Display.
- Maximum power output of 52 watts x 4 channels.
- Removable faceplate for security.
- Includes a wireless remote control.

## 2. SAFETY INFORMATION

---

Read all instructions carefully before installation and operation. Failure to follow these instructions may result in damage to the unit, vehicle, or personal injury. Always ensure the vehicle is parked and the parking brake is engaged when operating features that require visual attention, such as DVD playback or extensive menu navigation. Do not operate the unit in a manner that distracts you from driving safely. Consult a professional for installation if you are unsure about any wiring or mounting procedures.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package before beginning installation. The typical package includes:

- Soundstream VR-930B Head Unit

- Wiring Harness
- Wireless Remote Control
- Mounting Hardware
- User Manual (this document)

## 4. SETUP

---

### 4.1 Installation

The VR-930B is designed for single DIN dashboard openings. Professional installation is highly recommended to ensure proper wiring and functionality. Incorrect installation can lead to damage to the unit or vehicle electrical system. Ensure the vehicle's battery is disconnected before starting any installation work.

### 4.2 Wiring Diagram

Refer to the detailed wiring diagram provided in the separate installation guide or on the unit's chassis for specific connections. Key connections include power (constant 12V, accessory 12V, ground), speaker outputs, antenna, parking brake sensor, and reverse gear input.

### 4.3 Initial Power On

After installation, reconnect the vehicle battery. Press the power button on the unit or remote control. The unit should power on and display the Soundstream logo. Follow any on-screen prompts for initial setup, such as language selection or clock setting.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Controls

- **Power Button:** Press to turn the unit on/off.
- **Volume Knob/Buttons:** Adjust audio output level.
- **Mode Button:** Cycle through available audio sources (Radio, DVD, USB, SD, Bluetooth, AUX).
- **Menu Button:** Access the main system settings and options.

### 5.2 DVD/CD Playback

Insert a DVD or CD into the disc slot. The unit will automatically detect the disc and begin playback. Use the on-screen controls or remote control for functions such as Play, Pause, Stop, Skip Track/Chapter, and Fast Forward/Rewind. Ensure the parking brake is engaged for video playback.

### 5.3 Bluetooth Connectivity

To pair a Bluetooth device:

1. Enable Bluetooth on your mobile device.
2. On the VR-930B, select the Bluetooth source.
3. Search for available devices on your mobile phone. The unit's name will typically appear as "Soundstream VR-930B" or similar.
4. Select the unit and enter the default PIN (usually "0000") if prompted.

Once paired, you can stream audio from your device or make/receive hands-free calls through the unit.

## 5.4 USB/SD Media Playback

Insert a USB drive into the front USB port or an SD card into the front SD card slot. The unit will automatically switch to the respective source and display the media files. Navigate through folders and select files using the touchscreen or remote control. Supported formats include MP3, WMA, and AAC.

## 5.5 Radio Operation (AM/FM)

Select the Radio source. Use the 'Seek' or 'Tune' functions to find radio stations. You can save your favorite stations as presets for quick access. Press the 'Band' button to switch between AM and FM bands.

## 5.6 Touchscreen Operation

The 9.3-inch LCD is a resistive touchscreen. Use light pressure with your fingertip or a stylus to interact with on-screen icons and menus. The motorized screen allows for angle adjustment to optimize viewing.

# 6. MAINTENANCE

---

## 6.1 Cleaning the Unit

Wipe the unit's surface and touchscreen with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth with a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents, as they can damage the finish or screen. Ensure the unit is powered off before cleaning.

## 6.2 Disc Care

Handle discs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards. Do not use abrasive cleaners or solvents on discs.

# 7. TROUBLESHOOTING

---

If you encounter issues with your VR-930B, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not power on.	Incorrect wiring; Blown fuse; Vehicle battery low.	Check power and ground connections. Inspect vehicle fuses. Ensure battery is charged.
No sound.	Volume too low; Mute activated; Speaker wires disconnected.	Increase volume. Deactivate mute. Check speaker wiring connections.
Disc error.	Dirty or scratched disc; Unsupported disc format.	Clean the disc. Try a different disc. Ensure disc format is supported.
Bluetooth not connecting.	Bluetooth not enabled on device; Unit not in pairing mode; Interference.	Ensure Bluetooth is on and visible. Put unit in pairing mode. Move closer to the unit.
Video not playing.	Parking brake not engaged; Incorrect video format.	Ensure parking brake is fully engaged. Check video file format compatibility.

# 8. SPECIFICATIONS

---

Below are the technical specifications for the Soundstream VR-930B:

Feature	Specification
Model Number	VR-930B
Display Size	9.3 Inches
Display Type	Motorized LCD Touchscreen
Display Resolution	800 x 480
Max Power Output	52 Watts x 4 Channels
Media Types Supported	CD+RW, CD-R, MP3, DVD, DVD-R/RW, WMA, AAC
Connectivity Technology	Bluetooth, USB
Power Source	12V
Product Weight	2.8 Pounds
GTIN / UPC	709483047792

## 9. WARRANTY INFORMATION

---

Soundstream products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims. For specific warranty details, refer to the warranty card included with your product or contact Soundstream customer support.

## 10. CUSTOMER SUPPORT

---

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Soundstream customer support. Visit the official Soundstream website for contact information, FAQs, and additional resources. When contacting support, please have your product model number (VR-930B) and proof of purchase readily available.