

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Glacier Bay](#) /

> Glacier Bay Swing-Style Shower Arm (Model 3075-512) Installation and User Manual

Glacier Bay 3075-512

Glacier Bay Swing-Style Shower Arm (Model 3075-512) Installation and User Manual

Brand: Glacier Bay | Model: 3075-512

INTRODUCTION

This manual provides comprehensive instructions for the safe installation, proper operation, and routine maintenance of your Glacier Bay Swing-Style Shower Arm. Designed for durability and adjustability, this chrome-finished brass shower arm enhances your showering experience. Please read all instructions carefully before beginning installation or use.

SAFETY INFORMATION

- Always turn off the main water supply before attempting any plumbing installation or repair.
- Wear appropriate personal protective equipment, such as safety glasses, during installation.
- Ensure all connections are properly tightened to prevent leaks. Do not overtighten, as this can damage threads.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Keep small parts away from children.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Glacier Bay Swing-Style Shower Arm (1)



Image 1: The Glacier Bay Swing-Style Shower Arm, shown in its chrome finish. This image displays the full length and design of the shower arm, including the threaded connection point and the adjustable pivot points.

SETUP AND INSTALLATION

Tools Required (Not Included):

- Adjustable Wrench
- Plumber's Tape (Thread Seal Tape)
- Soft Cloth (for cleaning and protecting finish)

Installation Steps:

1. **Prepare the Area:** Turn off the main water supply to your home. Remove any existing shower arm and clean the wall pipe threads thoroughly.
2. **Apply Plumber's Tape:** Wrap plumber's tape clockwise around the threaded end of the new shower arm that connects to the wall pipe. Apply 3-4 layers for a secure, leak-proof seal.
3. **Install Shower Arm:** Thread the shower arm into the wall pipe opening by hand. Ensure it is straight and securely started.
4. **Tighten Connection:** Use an adjustable wrench to carefully tighten the shower arm. Place a soft cloth over the arm to protect the chrome finish from scratches. Tighten until snug, but do not overtighten.
5. **Attach Shower Head:** Apply plumber's tape to the threads on the other end of the shower arm where the shower head will attach. Hand-tighten your shower head onto the arm, then use a wrench with a soft cloth to gently snug it into place.
6. **Check for Leaks:** Turn the main water supply back on and check all connections for leaks. If leaks occur, tighten connections slightly or reapply plumber's tape.



Image 2: An angled perspective of the Glacier Bay Swing-Style Shower Arm, highlighting its curved design and the threaded connection point for the wall pipe. This view helps visualize the arm's form factor.

OPERATING INSTRUCTIONS

The Glacier Bay Swing-Style Shower Arm features an adjustable angle design, allowing you to customize the position of your shower head for optimal comfort.

1. **Adjusting the Angle:** Gently grasp the shower arm near the pivot points. Loosen the adjustment knobs (if present and designed for user adjustment) or apply gentle pressure to pivot the arm to your desired angle.
2. **Securing the Position:** Once the desired angle is achieved, ensure the arm is stable. If there are adjustment knobs, tighten them to secure the position.



Image 3: A close-up view of the adjustment mechanism on the Glacier Bay Swing-Style Shower Arm. This detail shows the pivot point and the lever-style knob used to secure the arm's position, allowing for angle adjustments.



Image 4: The Glacier Bay Swing-Style Shower Arm shown installed on a tiled wall, with a shower head attached. This image demonstrates the product in a typical use environment, highlighting its functionality and aesthetic integration.

MAINTENANCE

- **Cleaning:** Clean the chrome finish regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Leak Checks:** Periodically inspect all connections for any signs of leaks. Address any leaks promptly to prevent water damage.
- **Adjustment Mechanism:** If the adjustment mechanism becomes stiff, ensure it is clean and free of mineral deposits. Do not force the adjustment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaks from connections.	Loose connection; insufficient plumber's tape; damaged threads.	Turn off water supply. Tighten connections. Reapply plumber's tape if necessary. Inspect threads for damage.

Problem	Possible Cause	Solution
Shower arm difficult to adjust.	Mineral buildup; adjustment mechanism overtightened.	Clean the pivot points. Ensure adjustment knobs (if present) are not overtightened.
Shower arm does not hold position.	Adjustment mechanism loose or worn.	Tighten adjustment knobs. If wear is significant, replacement may be necessary.

SPECIFICATIONS

Brand	Glacier Bay
Model Number	3075-512
Material	Brass
Finish Type	Polished Chrome
Color	Chrome
Installation Type	Wall Mounted
Fittings	Standard 1/2 inch NPT
Special Feature	Adjustable Angle (Swing-Style)
Item Weight	11 ounces
Package Dimensions	12 x 4.4 x 0.3 inches
UPC	820633963868

WARRANTY INFORMATION

No specific warranty information is provided in the product details. For warranty inquiries, please refer to the product packaging or contact the retailer where the product was purchased, or the manufacturer directly.

SUPPORT

For further assistance or technical support, please contact the manufacturer, Homewerks Worldwide, or the retailer from whom you purchased this product. Please have your model number (3075-512) and proof of purchase ready when contacting support.