



[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Digital Chronograph Watch User Manual

## Armitron 40/8309RED

# Armitron Sport Digital Chronograph Watch User Manual

Model: 40/8309RED | Brand: Armitron

## INTRODUCTION

---

This manual provides comprehensive instructions for the Armitron Sport Men's Digital Chronograph Resin Strap Watch, Model 40/8309RED. This watch features a quartz movement with a digital multifunctional display, designed for active lifestyles.



Figure 1: Front view of the Armitron Sport Digital Chronograph Watch, black with orange accents.

## KEY FEATURES

---

- **Digital Multifunctional Display:** Provides clear time and function readouts.
- **Chronograph with Alarm:** Allows for precise timing and includes an audible alarm function.
- **Lap Time:** Record split times during chronograph operation.
- **Dual Time:** Display time for two different time zones simultaneously.
- **Military Time:** Option for 24-hour time format.
- **Backlight Function:** Illuminates the display for visibility in low-light conditions.
- **Durable Construction:** Features a 54mm resin case with an acrylic dial window and a textured resin band with a stainless steel buckle closure.
- **Water Resistance:** Water resistant to 100 meters (330 feet), suitable for swimming and snorkeling.

## SETUP

---

Before initial use, ensure the watch is set to the correct time and date. Refer to the operating instructions for detailed steps on setting various functions.

### Setting Time and Date

1. Press the **MODE** button (usually on the bottom left) repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **RESET** button (top left) to select the digit to adjust (e.g., hours, minutes, year, month, day).
3. Use the **ST/STP** button (top right) to increase the selected digit.
4. Press **MODE** again to confirm settings and exit the time setting mode.



Figure 2: Side view illustrating watch buttons for setting and operation.

## OPERATING INSTRUCTIONS

---

### Chronograph Function

- To enter Chronograph mode, press the **MODE** button until "CHRONO" or a similar indicator appears.
- Press **ST/STP** to start and stop the chronograph.
- Press **RESET** to record lap times or to reset the chronograph to zero when stopped.

### Alarm Function

- Navigate to Alarm mode using the **MODE** button.
- Use **RESET** and **ST/STP** to set the desired alarm time.
- Activate or deactivate the alarm using the appropriate button (refer to watch face labels, often **ALARM CHIME** or similar).

### Backlight

Press the **EL** button (Electro-Luminescent) to illuminate the display for a few seconds. This feature is designed for low-

light visibility.

## MAINTENANCE

### Water Resistance

The Armitron Sport watch is water resistant to 100 meters (330 feet). This makes it suitable for swimming and snorkeling. However, it is **not** designed for scuba diving. Avoid pressing buttons while the watch is submerged to prevent water ingress.





WATER RESISTANT CHART	
 NOT WATER RESISTANT	<b>NOT WATER RESISTANT</b>
 ACCIDENTAL SPLASHES	<b>WATER RESISTANT TO 30M (100FT):</b> In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	<b>WATER RESISTANT TO 50M (165FT):</b> In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	<b>WATER RESISTANT TO 100 M (330 FT):</b> In general, suitable for swimming and snorkeling, but not scuba diving

Figure 3: Water Resistance Chart, indicating suitability for various water activities.

### Battery Replacement

The watch is powered by 1 Lithium Metal battery (included). When the display becomes dim or stops functioning, the battery may need replacement. The back of the watch case is secured by screws, allowing for battery access. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.



Figure 4: Back view of the watch, showing the screw-secured case back for battery access.

## Cleaning

Clean the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the resin and acrylic components.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (professional service recommended).
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if any respond. If not, a reset (if available) or professional inspection may be needed.

Problem	Possible Cause	Solution
Time is incorrect.	Time not set correctly or battery issue.	Refer to "Setting Time and Date" section. If issue persists, consider battery replacement.

## SPECIFICATIONS

---

**Model Number:** 40/8309RED

**Movement:** Quartz

**Display Type:** Digital

**Case Material:** Resin

**Dial Window Material:** Acrylic

**Band Material:** Resin

**Water Resistance Depth:** 100 Meters (330 Feet)

**Product Dimensions:** 4.49 x 4.25 x 2.91 inches

**Item Weight:** 8.82 ounces

**Battery:** 1 Lithium Metal battery (included)

**Manufacturer:** Armitron Sport

## WARRANTY AND SUPPORT

---

For warranty information, product support, or service inquiries, please refer to the official Armitron website or contact Armitron customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the official Armitron store on Amazon for more information:[Armitron Store](#)