

## Miele H 5241 B CLST

# Miele H 5241 B CLST Electric Oven User Manual

Model: H 5241 B CLST

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Miele H 5241 B CLST electric oven. Please read these instructions carefully before initial use to ensure proper installation, operation, and maintenance. Retain this manual for future reference.

## 2. SAFETY INFORMATION

### **WARNING: Risk of electric shock, fire, or injury.**

- Ensure the appliance is correctly earthed by a qualified electrician.
- Do not operate the oven if the power cord is damaged.
- Keep children away from the appliance during operation due to hot surfaces. This model includes a child lock feature for added safety.
- Always use oven mitts when handling hot dishes or oven racks.
- Do not store flammable materials in or near the oven.

## 3. PRODUCT OVERVIEW

The Miele H 5241 B CLST is a 76-liter electric oven designed for versatile cooking. It features intuitive controls and multiple heating functions.



Figure 3.1: Front view of the Miele H 5241 B CLST Electric Oven, showing the control panel with display and rotary selectors, and the large glass oven door.

### 3.1 Control Panel

The control panel consists of two rotary selectors and a digital display. The left selector controls the heating function, while the right selector adjusts temperature or time. The display shows current settings, time, and status indicators.

### 3.2 Oven Interior

The oven interior features multiple rack positions and an interior light for visibility during cooking.

## 4. SETUP AND INSTALLATION

---

Installation should only be performed by a qualified technician in accordance with local regulations and the provided installation instructions. Ensure adequate ventilation around the appliance.

### 4.1 First Use

- Remove all packaging materials and accessories from the oven cavity.
- Clean the interior with a damp cloth and mild detergent.
- Heat the empty oven at maximum temperature for approximately one hour to burn off any manufacturing residues. Ensure the room is well-ventilated during this process.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Setting the Time

After connecting to power, the display will prompt you to set the time. Use the right rotary selector to adjust the hours and minutes, then confirm.

## 5.2 Selecting a Heating Function

Turn the left rotary selector to choose your desired heating function (e.g., Conventional Heat, Fan Plus, Grill, Defrost). The selected function will appear on the display.

## 5.3 Setting the Temperature

Once a heating function is selected, turn the right rotary selector to set the desired temperature. The temperature range will vary depending on the selected function.

## 5.4 Defrost Function

The defrost function utilizes circulating air at room temperature to gently thaw frozen foods. Place food on a suitable dish on the oven rack. Select the defrost function and allow the food to thaw gradually.

## 5.5 Child Lock

To activate the child lock, refer to the specific instructions in the full manual, typically involving a combination of button presses or holding a selector. This prevents accidental operation by children.

# 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your oven.

- Always allow the oven to cool down before cleaning.
- Clean the interior with a soft cloth and warm soapy water. Avoid abrasive cleaners or scourers.
- The oven door glass can be cleaned with a glass cleaner.
- Removable parts like oven racks can be washed in a sink.

# 7. TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Oven does not heat	No power supply; circuit breaker tripped; door not closed properly.	Check power connection; reset circuit breaker; ensure door is fully closed.
Display shows an error code	Internal fault.	Switch off the oven at the mains for a few minutes, then switch back on. If the error persists, contact Miele Service.
Food not cooking evenly	Incorrect rack position; oven overloaded; door opened too frequently.	Refer to cooking guidelines for optimal rack positions; avoid overloading; minimize opening the door during cooking.

# 8. SPECIFICATIONS

---

Feature	Detail
Model Number	H 5241 B CLST

Feature	Detail
Brand	Miele
Capacity	76 Liters
Heating Method	Electric
Color	Black, White
Special Features	Child Lock, Defrost Function

## 9. WARRANTY AND SUPPORT

---

Your Miele H 5241 B CLST oven comes with a manufacturer's warranty. Please refer to the separate warranty document provided with your appliance for full terms and conditions.

For technical support, service requests, or to order spare parts, please contact Miele Customer Service:

- Visit the official Miele website for your region: [www.miele.com](http://www.miele.com)
- Refer to the contact information provided in your purchase documentation.