

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Microsoft](#) /

› [Xbox 360 E Console User Manual](#)

Microsoft 1538

Xbox 360 E Console User Manual

Comprehensive guide for setup, operation, and maintenance of your Xbox 360 E console.

1. PRODUCT OVERVIEW

The Xbox 360 E Console is a compact and powerful entertainment system designed for gaming and multimedia. This model features a sleek silk black finish and includes built-in WiFi for convenient online connectivity.

Key Features:

- Compact and lightweight design.
- 250GB internal storage capacity.
- Integrated WiFi for wireless network access.
- Capable of playing a wide range of Xbox 360 video games.



Figure 1.1: Front view of the Xbox 360 E Console retail packaging, highlighting the console and 250GB storage capacity.

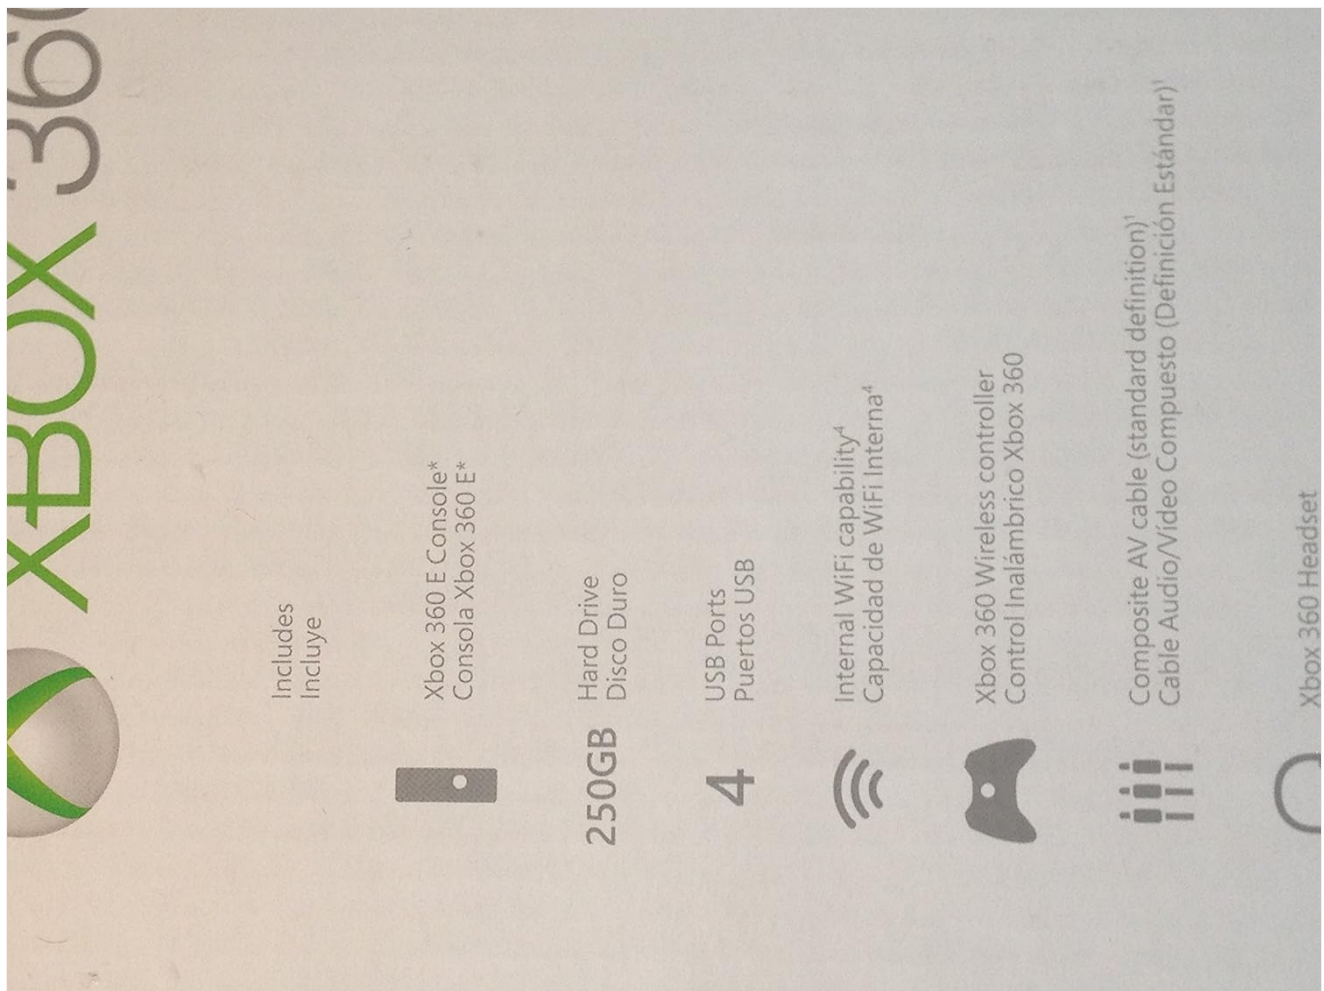


Figure 1.2: Side view of the Xbox 360 E Console packaging, detailing included components such as the console, hard drive, USB ports, WiFi capability, wireless controller, and composite AV cable.

2. SETUP GUIDE

2.1 Unpacking the Console

Carefully remove all components from the packaging. Ensure the following items are present:

- Xbox 360 E Console
- Xbox 360 Wireless Controller
- Power Supply Unit and Power Cord
- Composite AV Cable
- Headset (if included with your specific bundle)
- Games (if included with your specific bundle)



Figure 2.1: The Xbox 360 E Console alongside its essential accessories, including the power supply, wireless controller, and composite AV cables.

2.2 Connecting the Console

1. **Power Connection:** Connect the power supply unit to the console's power input port. Then, plug the power cord into the power supply unit and into a wall outlet.
2. **Video/Audio Connection:**
 - For standard definition, connect the composite AV cable to the AV port on the console and to the corresponding yellow (video), red (audio right), and white (audio left) ports on your television.
 - For high definition, use an HDMI cable (sold separately) to connect the console's HDMI port to your TV's HDMI input.
3. **Network Connection (Optional):** The console has built-in WiFi. For a wired connection, connect an Ethernet cable (sold separately) from your router to the Ethernet port on the console.



Figure 2.2: Rear view of the Xbox 360 E Console, illustrating the various ports for power, AV output, Ethernet, and USB connections.

2.3 Connecting Controllers

To connect a wireless controller:

1. Insert two AA batteries into the controller.
2. Press and hold the Xbox Guide button on the controller until it turns on.
3. Press the connect button on the console (small circular button near the USB ports).
4. Within 20 seconds, press the connect button on the controller (small button on the top edge). The lights around the console's power button and on the controller will flash and then become solid when connected.

2.4 Initial System Configuration

Upon first power-on, the console will guide you through initial setup steps, including language selection, display settings, and network configuration. Follow the on-screen prompts to complete this process.

3. OPERATING THE CONSOLE

3.1 Powering On/Off

- **To Power On:** Press the power button on the front of the console or the Xbox Guide button on a connected controller.
- **To Power Off:** Press and hold the Xbox Guide button on the controller and select "Turn Off Console" from the menu, or press the power button on the console.

3.2 Navigating the Dashboard

The Xbox 360 Dashboard is the main interface for accessing games, apps, settings, and other features. Use the controller's directional pad or left analog stick to navigate through menus and select options with the 'A' button.

3.3 Playing Games

1. Insert an Xbox 360 game disc into the disc drive slot on the front of the console.
2. The console will automatically detect the disc. Select "Play Game" from the Dashboard.
3. For digital games, navigate to your game library on the Dashboard and select the desired title.



Figure 3.1: A selection of Xbox 360 game titles, demonstrating the variety of entertainment available for the console.

3.4 Using Built-in WiFi

The Xbox 360 E Console features integrated WiFi. To connect to a wireless network:

1. Go to "System Settings" on the Dashboard.
2. Select "Network Settings".
3. Choose "Wireless Network" and select your desired network from the list.
4. Enter the network password (if required) and follow the prompts to connect.

3.5 Storage Management

The console includes a 250GB hard drive for storing games, saves, profiles, and other content. You can manage your storage by navigating to "System Settings" > "Storage" on the Dashboard. Here you can view available space,

delete content, or move items between storage devices.

4. MAINTENANCE

4.1 Cleaning the Console

To ensure optimal performance and longevity, regularly clean your Xbox 360 E Console:

- Use a soft, dry, lint-free cloth to wipe down the exterior surfaces.
- Avoid using abrasive cleaners, solvents, or chemical sprays.
- Ensure ventilation openings are clear of dust and debris. You may use a can of compressed air to gently clear dust from vents, holding the can upright and using short bursts.

4.2 Storage Considerations

To prevent damage to game discs and the console's disc drive, observe the following warning:



Figure 4.1: Front view of the Xbox 360 E Console, showing a warning label that advises against moving the console when a disc is in the tray.

Important: Do not move the console when a disc is in the tray. Moving the console while a disc is spinning can cause scratches to the disc and potentially damage the disc drive mechanism.

5. TROUBLESHOOTING

If you encounter issues with your Xbox 360 E Console, try the following common troubleshooting steps:

- **No Power:**

- Ensure the power cord is securely connected to the console, power supply, and wall outlet.
- Check if the power outlet is functional.
- Verify the power supply unit's indicator light is on.

- **No Video/Audio:**

- Confirm all video and audio cables are securely connected to both the console and the television.
- Ensure your TV input is set to the correct source (e.g., HDMI 1, AV).
- Try a different video cable or input port on your TV.

- **Disc Read Errors:**

- Clean the game disc with a soft, lint-free cloth, wiping from the center outwards.
- Ensure the disc is inserted correctly.
- Try a different game disc to determine if the issue is with the disc or the console.

- **Wireless Controller Not Connecting:**

- Replace the batteries in the controller.
- Resync the controller by pressing the connect buttons on both the console and controller.
- Ensure no strong interference sources are nearby.

- **Network Connection Issues:**

- Restart your router and modem.
- Verify your WiFi password is correct.
- Try a wired Ethernet connection if possible to rule out wireless issues.

If problems persist after attempting these steps, please refer to the official Microsoft Xbox support website for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	1538
Storage Capacity	250 GB Hard Drive
Connectivity	Built-in WiFi, Ethernet Port, USB Ports (4)
Video Output	Composite AV, HDMI (HDMI cable sold separately)
Dimensions (Approx.)	Compact design
Weight	Approximately 2 pounds
Manufacturer	Hon Hai Precision Industry Co., Ltd.
First Available	June 24, 2014

