



[Manuals.plus](#) /

› [Samsung](#) /

› Samsung BN59-01180A Replacement TV Remote Control User Manual

Samsung BN59-01180A

Samsung BN59-01180A Replacement TV Remote Control USER MANUAL

Introduction

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Samsung BN59-01180A Replacement TV Remote Control. This remote is designed as an original replacement for compatible Samsung televisions, ensuring seamless control and functionality.



Figure 1: Front view of the Samsung BN59-01180A remote control, showing all buttons including power, number pad, volume, channel, menu, and navigation controls.

Setup

Follow these steps to prepare your remote control for use:

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards to open it. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Close the battery cover by sliding it back into place until it clicks securely.



Figure 2: Back view of the Samsung BN59-01180A remote control, highlighting the battery compartment.

2. Initial Pairing (If Required):

For most replacement remotes, direct line-of-sight operation with your Samsung TV is automatic. However, if your TV requires pairing for a new remote, refer to your television's user manual for specific instructions. A common method involves pressing and holding the "Return" and "Guide" buttons simultaneously for a few seconds while pointing the remote at the TV, or navigating to the TV's settings menu to add a new remote.

Operating Instructions

The Samsung BN59-01180A remote control provides intuitive access to your Samsung TV's functions. Below are common button functions:

- **Power (●):** Turns the TV on or off.
- **Number Pad (0-9):** Directly enter channel numbers.
- **Volume (+/-):** Adjusts the sound volume.
- **Channel (CH ▲/▼):** Changes the TV channel up or down.
- **Mute (MUTE):** Mutes or unmutes the TV sound.
- **Source (SOURCE):** Selects input sources (HDMI, AV, Component, etc.).
- **Menu (MENU):** Opens the TV's main menu.
- **Home (HOME):** Navigates to the Smart Hub or home screen.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Used to navigate through menus and options.
- **Enter (●):** Confirms a selection.
- **Return (RETURN):** Goes back to the previous screen or menu.
- **Exit (EXIT):** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Perform specific functions depending on the TV menu or application.



Figure 3: Close-up view of the lower section of the Samsung BN59-01180A remote control, showing navigation, return, exit, and color buttons.

Maintenance

Proper care will extend the life of your remote control:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

Troubleshooting

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV.
- **Buttons Not Working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris.
 - If only specific buttons are not working, the remote may be damaged and require replacement.
- **Intermittent Functionality:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

Specifications

Model Number	BN59-01180A
Brand	Samsung
Compatible Devices	Samsung TV
Color	Black
Product Dimensions	3.15 x 1.57 x 9.06 inches
Item Weight	2.89 ounces
Special Feature	Ergonomic
Max Number of Supported Devices	1

Warranty and Support

Warranty Information: This product is an original Samsung replacement part. For specific warranty terms and conditions, please refer to the documentation provided with your original purchase or visit the official Samsung website. Warranty coverage may vary based on region and retailer.

Customer Support: For further assistance, technical support, or inquiries regarding your Samsung remote control, please contact Samsung customer service directly or visit their official support website. You can typically find contact information and support resources on the Samsung global website or your regional Samsung website.

Note: Always ensure you are using official Samsung support channels for accurate and reliable information.

