

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart Elemental 8 Cup Food Processor FP-8SV Instruction Manual](#)

## Cuisinart FP-8SVP1

# Cuisinart Elemental 8 Cup Food Processor (Model FP-8SV) Instruction Manual

## INTRODUCTION

Thank you for choosing the Cuisinart Elemental 8 Cup Food Processor. This appliance is designed to simplify various food preparation tasks, from chopping and slicing to shredding and pureeing. With its powerful 350-watt motor and versatile attachments, it is an essential tool for any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## PRODUCT OVERVIEW

The Cuisinart Elemental 8 Cup Food Processor (Model FP-8SV) features a robust design and intuitive controls for efficient food processing.

### Key Features:

- **Superior Function:** 350-watt motor for powerful food prep and performance.
- **Capacity:** 8-cup work bowl with clear measurement markings.
- **Versatile Discs:** Reversible shredding and slicing discs (medium to fine).
- **Integrated Feed Tube:** Allows adding ingredients during processing.
- **Intuitive Controls:** Rubberized touchpad with High, Low, Off, and Pulse settings.
- **Easy to Clean:** Removable parts are dishwasher safe.
- **BPA-Free:** All food-contact parts are BPA-free.

### Included Components:

- Motor Base
- 8-Cup Work Bowl
- Work Bowl Cover with Feed Tube
- Food Pusher
- Chopping Blade (Stainless Steel)
- Reversible Slicing/Shredding Disc (Stainless Steel)
- Spatula
- Instruction/Recipe Booklet



Figure 1: Cuisinart Elemental 8 Cup Food Processor with chopped vegetables. This image displays the assembled food processor with its work bowl containing freshly chopped ingredients, highlighting its compact design and clear bowl for visibility during operation.



Figure 2: Cuisinart Elemental 8 Cup Food Processor in a kitchen setting. The food processor is shown on a white kitchen counter, surrounded by fresh ingredients like tomatoes, basil, and cheese, illustrating its readiness for various culinary tasks.

## SETUP

Before using your food processor for the first time, wash all removable parts in warm, soapy water, rinse thoroughly, and dry. The work bowl, work bowl cover, food pusher, and discs are also dishwasher safe (top rack only).

### Assembly:

1. Place the motor base on a clean, dry, and stable surface.
2. Position the work bowl onto the motor base, aligning the handle with the front of the base. Turn the work bowl clockwise until it locks securely into place.
3. Carefully place the desired blade or disc onto the center stem of the work bowl. Ensure it is seated properly.
4. Place the work bowl cover onto the work bowl, aligning the feed tube with the work bowl handle. Turn the cover clockwise until it locks securely. The food processor will not operate unless the work bowl and cover are correctly locked.
5. Insert the food pusher into the feed tube.

## OPERATING INSTRUCTIONS

Ensure the unit is properly assembled and plugged into a grounded electrical outlet before operation.

### Controls:

- **High/Low:** Press for continuous processing at high or low speed.

- **Pulse:** Press and hold for short bursts of power. Release to stop. This is ideal for chopping and controlling texture.
- **Off:** Press to turn off the unit.

## Processing Food:

1. Prepare ingredients by cutting them into pieces that fit easily through the feed tube.
2. For chopping, place ingredients directly into the work bowl with the chopping blade. Use the Pulse function for best results, pulsing until desired consistency is achieved.
3. For slicing or shredding, insert the reversible disc with the desired side facing up. Place ingredients into the feed tube and use the food pusher to guide them through while the motor is running (High or Low setting). Apply even pressure on the food pusher.
4. Do not overfill the work bowl. Refer to the maximum fill lines on the bowl.
5. Always turn off the unit and wait for the blade/disc to stop completely before removing the cover or work bowl.

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will ensure the longevity and performance of your Cuisinart Food Processor.

### Cleaning:

- Always unplug the food processor before cleaning.
- All removable parts (work bowl, cover, food pusher, blades, and discs) are dishwasher safe (top rack only).
- For manual cleaning, wash parts in warm, soapy water using a soft brush for hard-to-reach areas. Handle blades and discs with extreme care as they are very sharp.
- Wipe the motor base clean with a damp cloth. Never immerse the motor base in water or other liquids.
- Ensure all parts are completely dry before reassembling or storing.

### Storage:

Store the food processor in a dry place. The blades and discs can be stored safely within the work bowl when not in use to save space.

## TROUBLESHOOTING

---

If your food processor is not operating as expected, please refer to the following common issues:

- **Unit does not turn on:** Ensure the work bowl and cover are correctly locked into place on the motor base. The unit has safety interlocks that prevent operation if not properly assembled. Check that the power cord is securely plugged into a working electrical outlet.
- **Motor stalls or slows down:** This may indicate that the work bowl is overfilled or the ingredients are too dense. Reduce the amount of ingredients or cut them into smaller pieces.
- **Uneven chopping:** Use the Pulse function for better control over chopping consistency. Avoid continuous processing for chopping tasks.

For more detailed troubleshooting steps or persistent issues, please refer to the comprehensive user manual included with your product or contact Cuisinart customer support.

## SPECIFICATIONS

<b>Brand</b>	Cuisinart
<b>Model Name</b>	Elemental Food Processor
<b>Item Model Number</b>	FP-8SVP1
<b>Wattage</b>	350 watts
<b>Bowl Capacity</b>	8 Cups
<b>Product Dimensions</b>	7.6"D x 9.58"W x 15.19"H
<b>Color</b>	Silver
<b>Blade Material</b>	Stainless Steel
<b>Power Source</b>	Corded Electric
<b>Is Dishwasher Safe</b>	Yes (Removable parts)

## WARRANTY AND SUPPORT

The Cuisinart Elemental 8 Cup Food Processor comes with a **Limited 2-Year Warranty**. For complete details regarding warranty policies, coverage, and how to make a claim, please refer to the user manual provided with your product. The user manual also contains contact information for Cuisinart customer support for any questions or assistance you may need.

This product is BPA-free.