

[Manuals.plus](#) /

› [Ikea](#) /

› IKEA Charcoal Filter Set for Range Hoods

Ikea FIL601

IKEA Charcoal Filter Set for Range Hoods

Model: FIL601 / TV01BA

INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your IKEA charcoal filter set. These filters are designed to effectively remove odors and purify the air in your kitchen when used with compatible IKEA range hoods operating in recirculation mode.

PRODUCT OVERVIEW

The IKEA charcoal filter set (FIL601 / TV01BA) consists of two activated charcoal filters. These filters are crucial for range hoods that do not vent air outside, as they absorb cooking odors and grease particles, ensuring cleaner air circulation within your kitchen.



Image: A set of two IKEA charcoal filters, showcasing their design and structure. These filters are essential for air purification in recirculation range hoods.



Image: Detailed dimensions of a single charcoal filter, indicating its length, width, and height for compatibility verification.

SPECIFICATIONS

Brand	Ikea
Model Numbers	FIL601, TV01BA
Material	Charcoal, Plastic
Dimensions (L x W x H)	28.5 cm x 17.4 cm x 5.5 cm (per filter)
Compatible Appliances	IKEA Range Hoods (specific models may vary, refer to your hood's manual)
Number of Units	2 filters per pack

SETUP AND INSTALLATION

Before installation, ensure your range hood is unplugged from the power outlet to prevent electrical hazards. Refer to your specific IKEA range hood's instruction manual for detailed steps on accessing the filter compartments, as procedures may vary between models.

- 1. Locate Filter Compartments:** Typically, charcoal filters are located behind the metal grease filters. You may need to remove the grease filters first.
- 2. Remove Old Filters:** If replacing old filters, carefully detach them. Note their orientation for correct installation of the new filters.
- 3. Install New Filters:** Insert the new charcoal filters into their designated slots. Ensure they are securely fastened. Some

models may require twisting or clicking them into place.

4. **Reassemble:** Reinstall the metal grease filters and any other components removed during the process.
5. **Restore Power:** Plug the range hood back into the power outlet.



Image: Visual representation of a charcoal filter in relation to a range hood, illustrating the general area for installation.

OPERATING PRINCIPLES

Once installed, the charcoal filters work by drawing air through the activated carbon granules, which trap and neutralize cooking odors and airborne grease particles. This process ensures that the air recirculated back into your kitchen is cleaner and fresher. The effectiveness of the filters depends on regular replacement.

MAINTENANCE

Charcoal filters are not washable and cannot be regenerated. Their absorption capacity diminishes over time as they become saturated with odors and particles. For optimal performance and air quality, it is recommended to replace the

charcoal filters regularly.

- **Replacement Frequency:** The frequency of replacement depends on your cooking habits. For average use, replacement every 3 to 6 months is generally recommended. Heavy cooking may require more frequent replacement.
- **Disposal:** Dispose of used filters according to local waste disposal regulations.



Image: A close-up of the charcoal filter's surface, highlighting the material responsible for odor absorption.

TROUBLESHOOTING

If you experience issues with your range hood's air purification after installing new charcoal filters, consider the following:

- **Persistent Odors:** Ensure the filters are correctly installed and securely fitted. If odors persist, the filters may be saturated or the issue might stem from another part of the ventilation system.
- **Reduced Airflow:** While charcoal filters typically do not significantly impede airflow when new, old or heavily saturated filters can. Check if the metal grease filters are clean, as these are often the primary cause of reduced airflow.
- **Filter Type Mismatch:** Verify that you have purchased the correct charcoal filter model (FIL601 / TV01BA) for your specific IKEA range hood.

WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the official IKEA website or contact IKEA customer service directly. Specific warranty terms and support options may vary by region and product type.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00LCAEBDO>

More documents and user manuals: **<https://manuals.plus/>**