



[Manuals.plus](#) /

> [Conair](#) /

> INFINITIPRO BY CONAIR Spin Air Rotating Styler / Hot Air Brush BC179 User Manual

Conair BC179

INFINITIPRO BY CONAIR Spin Air Rotating Styler / Hot Air Brush BC179 User Manual

Model: BC179

[Safety
Instructions](#)

[Setup](#)

[Operating
Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

- **DANGER** – Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:
 - Always unplug appliance immediately after using.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Do not pull, twist, or wrap line cord around appliance.
 - This appliance should not be used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- The brush attachment may be hot during use. Allow to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not use with a voltage converter.

2. SETUP AND FIRST USE

Before using your INFINITIPRO BY CONAIR Spin Air Rotating Styler, please ensure you have read and understood all safety instructions.

Getting Started:

1. **Unpack the Styler:** Carefully remove the styler and any accessories from its packaging.
2. **Inspect the Device:** Check the styler for any visible damage to the cord, plug, or brush attachment. Do not use if damaged.
3. **Plug In:** Insert the power cord into a suitable electrical outlet. Ensure your hands are dry when plugging in or unplugging the device.
4. **Hair Preparation:** For best results, towel-dry your hair to remove excess moisture. The styler works most effectively on damp, not soaking wet, hair.



Image: The INFINITIPRO BY CONAIR Spin Air Rotating Styler, highlighting its brush head and ergonomic handle design.

3. OPERATING INSTRUCTIONS

The INFINITIPRO BY CONAIR Spin Air Rotating Styler is designed to dry, brush, and style your hair simultaneously, providing volume and shine.

Controls and Settings:



Image: Detail of the styler's control panel, illustrating the heat/speed settings and brush rotation buttons.

- **Heat/Speed Settings:** The styler features a slide switch with multiple settings:
 - **OFF:** Turns the appliance off.
 - **LOW:** Low heat and speed for gentle drying and styling.
 - **HIGH:** High heat and speed for faster drying and styling.
 - **COOL:** Cool air setting to set your style. The brush will **not** spin on the cool setting.
- **Rotation Buttons:** Two buttons control the brush rotation. Press the left button for counter-clockwise rotation and the right button for clockwise rotation. The brush spins in both directions.

Styling Your Hair:

1. **Section Hair:** Divide your towel-dried hair into manageable sections.
2. **Select Setting:** Choose the desired heat/speed setting (LOW or HIGH).
3. **Position Styler:** Place the brush under a section of hair, close to the roots.
4. **Activate Rotation:** Press and hold the appropriate rotation button (left or right) to make the brush spin. The brush will gently grip the hair.
5. **Glide and Style:** Slowly glide the styler down the hair section, allowing the rotating brush to smooth

and shape your hair. For added volume, hold the brush at the roots for a few seconds. For curls or waves, wrap the hair around the barrel and hold briefly before releasing.

6. **Release Hair:** Release the rotation button to stop the brush from spinning and gently pull the styler away from your hair.
7. **Cool Shot (Optional):** Once a section is styled, switch to the COOL setting (brush will not spin) to help set the style and add shine.
8. **Repeat:** Continue with remaining sections until your desired style is achieved.

The tourmaline ceramic technology helps safely dry hair and promotes a healthy look, while the ion generator reduces frizz and enhances shine for silky smooth results.

Official Product Video:

Your browser does not support the video tag.

Video: This video demonstrates the use of the INFINITI^{PRO} BY CONAIR Spin Air Rotating Styler, showing how the rotating brush dries and styles hair to create volume and shine.

4. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your styler.

Cleaning Instructions:

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean the Brush:** Use a small brush or comb to remove any trapped hair or lint from the bristles.
3. **Removable Filter:** The styler features a removable filter for easy lint cleanup, which helps extend motor life. Gently twist or pull to remove the filter cover (refer to diagram in original manual if available) and clean any accumulated lint or dust. Reattach securely before next use.
4. **Wipe Down:** Wipe the exterior of the styler with a damp cloth. Do not immerse the appliance in water or any other liquid.
5. **Storage:** Store the styler in a cool, dry place when not in use. Do not wrap the cord around the appliance, as this can damage the cord.





Image: Packaging detail showing key features, including the removable filter for maintenance.

5. TROUBLESHOOTING

If you encounter issues with your Spin Air Rotating Styler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Styler does not turn on.	Not plugged in, power outlet malfunction, or damaged cord.	Ensure the styler is securely plugged into a working electrical outlet. Check for power at the outlet. If the cord is damaged, discontinue use and contact customer support.
Brush does not spin.	Styler is on COOL setting, rotation button not pressed, or hair is tangled.	The brush will not spin on the COOL setting; switch to LOW or HIGH. Ensure you are pressing and holding one of the rotation buttons. Check for any hair or debris obstructing the brush mechanism.
Reduced airflow or overheating.	Air inlet/outlet blocked by lint or hair.	Unplug the styler and allow it to cool. Clean the removable filter and ensure all air openings are free of obstructions.
Hair gets tangled in the brush.	Using too large a section of hair, or incorrect technique.	Work with smaller sections of hair. Ensure the brush is rotating smoothly through the hair and not catching. Release the rotation button if hair starts to tangle.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	BC179
Brush Size	1.5 Inch (38mm)
Technology	Tourmaline Ceramic, Ion Generator
Heat/Speed Settings	2 Heat (LOW, HIGH) / 2 Speed, 1 Cool Shot
Brush Rotation	Bi-directional (spins left and right)
Bristles	Tangle-free antistatic boar and nylon bristles
Power Source	Corded Electric
Product Dimensions	3.75 x 5.13 x 15.25 inches
Item Weight	1.6 Pounds
UPC	074108308504

7. WARRANTY AND SUPPORT

Limited Three-Year Warranty:

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS

FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Customer Support:

For product assistance or further inquiries, please visit the official Conair website or contact their customer service department.

- **Website:** www.conair.com
- **Phone:** 1-800-3-CONAIR (for California residents regarding warranty service)