

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KitchenAid](#) /

› [KitchenAid KSM2FPA Food Processor Attachment User Manual](#)

KitchenAid KSM2FPA

KitchenAid KSM2FPA Food Processor Attachment User Manual

Model: KSM2FPA | Brand: KitchenAid

PRODUCT OVERVIEW

The KitchenAid KSM2FPA Food Processor Attachment, with its Commercial Style Dicing Kit, is designed to expand the capabilities of your KitchenAid Stand Mixer. This versatile attachment allows you to efficiently dice, slice, shred, and julienne a wide variety of fresh fruits, vegetables, and hard cheeses. It is engineered for quick and easy food preparation, making it a valuable addition to any kitchen.

This attachment is powered directly by your KitchenAid Stand Mixer, eliminating the need for an additional motor or power source. All KitchenAid food processors and accessories manufactured after 2011 are BPA-free.



Figure 1: The KitchenAid KSM2FPA Food Processor Attachment connected to a KitchenAid Stand Mixer, actively dicing bell peppers into a clear glass bowl. This image demonstrates the attachment in use, highlighting its primary function.

INCLUDED COMPONENTS

The KSM2FPA Food Processor Attachment comes with a comprehensive set of components to handle various food preparation tasks:

- **(1) Slicing Disc:** For uniform slices of varying thickness.
- **(1) Shredding Disc:** For fine or coarse shredding of ingredients.
- **(1) Julienne Disc:** For creating thin, matchstick-like cuts.
- **(1) Dicing Kit:** Includes the dicing grid and blade for precise cubing.
- **(1) Storage Case:** A convenient case to keep all discs and the dicing kit organized and protected.



Figure 2: The KitchenAid KSM2FPA Food Processor Attachment shown alongside its complete set of accessories, including the slicing, shredding, julienne, and dicing discs, all neatly stored in their dedicated case. This illustrates the full range of tools provided with the attachment.

SETUP INSTRUCTIONS

1. **Prepare the Stand Mixer:** Ensure your KitchenAid Stand Mixer is unplugged and the power hub cover is removed. The power hub is located on the front of the mixer head.
2. **Attach the Food Processor:** Insert the attachment shaft into the power hub, ensuring the shaft aligns with the square drive socket. Tighten the attachment knob clockwise until the attachment is securely fastened to the mixer.
3. **Select and Install Disc:** Choose the desired disc (slicing, shredding, or julienne) or assemble the dicing kit. Carefully place the disc onto the drive shaft inside the food processor bowl. Ensure it sits correctly and is stable.
4. **Secure the Lid:** Place the food processor lid onto the bowl, aligning the lid tab with the slot on the bowl. Twist the lid clockwise until it locks into place. The food chute should be positioned at the top.
5. **Position Food Pusher:** Insert the food pusher into the food chute. This will be used to guide ingredients through the disc.
6. **Place Receiving Bowl:** Position a large bowl or container directly underneath the food processor's output chute to

collect processed ingredients.



Figure 3: A detailed close-up of the KSM2FPA Food Processor Attachment, showing its robust construction and the feed tube where ingredients are inserted. This view helps users identify key parts during setup.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut ingredients into pieces that fit comfortably into the food chute. For optimal results, ensure ingredients are firm and not overripe.
2. **Adjust Slicing Thickness (if applicable):** If using the slicing disc, use the ExactSlice system's external adjustable slicing lever to select your desired thickness (from thick to thin).
3. **Power On:** Plug in your KitchenAid Stand Mixer. Turn the mixer to the recommended speed setting for food

processing (typically speed 4-6 for most tasks, refer to your mixer's manual for specific recommendations).

4. **Feed Ingredients:** Slowly feed ingredients into the food chute. Use the food pusher to gently guide them through the disc. **Do not force ingredients through.**
5. **Monitor Output:** Process ingredients until the desired quantity is achieved. Turn off the mixer and unplug it before removing the attachment or processed food.



Figure 4: A hand gently feeding carrots into the wide feed tube of the KitchenAid KSM2FPA Food Processor Attachment. This image demonstrates the ease of loading ingredients for processing.



Figure 5: The KitchenAid KSM2FPA Food Processor Attachment in action, dicing onions into a bowl. This illustrates the attachment's capability for processing various vegetables.



Figure 6: The KitchenAid KSM2FPA Food Processor Attachment processing tomatoes, demonstrating its ability to handle softer produce for dicing. The processed tomatoes are collected in a bowl below.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your food processor attachment.

- **Disassembly:** Always unplug the stand mixer before disassembling the attachment. Remove the food processor lid, then carefully remove the disc or dicing kit. Detach the food processor bowl from the mixer.
- **Cleaning:** The food processor bowl, lid, and discs are **not dishwasher safe**. Hand wash all components with warm, soapy water. Rinse thoroughly and dry immediately.
- **Dicing Kit Cleaning:** Use the included cleaning tool to remove any food particles stuck in the dicing grid.
- **Storage:** Store all discs and the dicing kit in the provided storage case to protect the blades and keep them organized. Store the main food processor body in a clean, dry place.

Product Care Instructions: Hand Wash.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Attachment not operating.	Not properly attached to the power hub; Mixer not plugged in or turned on.	Ensure the attachment is securely fastened to the power hub. Verify the mixer is plugged into a working outlet and turned to the correct speed setting.
Ingredients not processing efficiently.	Ingredients are too large or too soft; Disc is dull or incorrectly installed.	Cut ingredients into smaller, manageable pieces. Ensure ingredients are firm. Check that the disc is correctly seated and sharp.
Lid not locking into place.	Lid or bowl misaligned; Food particles obstructing the lock mechanism.	Ensure the lid tab aligns perfectly with the slot on the bowl. Check for and remove any food debris from the locking mechanism.

SPECIFICATIONS

- **Model Name:** Food Processor Attachment
- **Model Number:** KSM2FPA
- **Brand:** KitchenAid
- **Color:** Silver
- **Product Dimensions:** 6.9"D x 10.2"W x 9.7"H
- **Item Weight:** 7.04 pounds
- **Blade Material:** Stainless Steel
- **Special Feature:** Manual (attachment powered by stand mixer)
- **Recommended Uses:** Slice, Shred, Julienne, Dice
- **Dishwasher Safe:** No (Hand Wash Only)



Figure 7: Visual representation of the KitchenAid KSM2FPA Food Processor Attachment with its key dimensions indicated, providing a clear understanding of its size.

WARRANTY AND SUPPORT


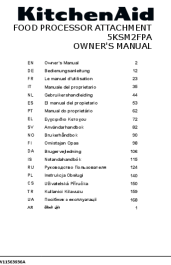

For warranty information, product registration, or further assistance, please refer to the official KitchenAid website or contact KitchenAid customer support directly. You may also find detailed user guides and manuals in PDF format on the

product's Amazon page under the "Documents" section.

Note: No official product videos from the seller were available for embedding in this manual.

- **User Guide (PDF):** [Download User Guide](#)
- **User Manual (PDF):** [Download User Manual](#)

Related Documents - KSM2FPA

	<p>KitchenAid Food Processor Attachment Instructions KSM1FPA KSM2FPA</p> <p>User manual and instructions for the KitchenAid Food Processor Attachment (models KSM1FPA, KSM2FPA). Covers setup, operation, safety, recipes, and troubleshooting for use with KitchenAid Stand Mixers.</p>
	<p>KitchenAid 5KSM2FPA Food Processor Attachment Owner's Manual</p> <p>Comprehensive owner's manual for the KitchenAid 5KSM2FPA Food Processor Attachment, covering safety instructions, assembly, usage, care, and warranty information.</p>
	<p>KitchenAid KSMVSA Fresh Prep Slicer/Shredder Attachment - User Manual and Safety Guide</p> <p>Comprehensive guide for the KitchenAid KSMVSA Fresh Prep Slicer/Shredder attachment, including parts, safety instructions, assembly, usage, care, troubleshooting, and warranty information.</p>

