

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coleman](#) /

› [Coleman Bravo CX10WP HD Action Camera User Manual](#)

Coleman CX10WP

Coleman Bravo CX10WP HD Action Camera User Manual

Model: CX10WP

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Coleman Bravo CX10WP HD Action Camera. Please read this manual thoroughly before operating the device and retain it for future reference.

The Coleman Bravo CX10WP is designed to capture high-quality video and still images in various environments, including underwater, with its included waterproof housing.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Coleman Bravo CX10WP Camera
- Waterproof Case
- Pivot Tip
- Lens Cap
- Velcro Strap
- Anti-fog Inserts
- Secure Strap
- Curved Adhesive Mount
- Flat Adhesive Mount
- Handlebar/Bike Mount
- T-Tip Adapter
- Instruction Manual (this document)
- Image Editing Software

PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.



Figure 1: Front view of the Coleman Bravo CX10WP camera enclosed in its transparent waterproof housing. The lens is prominent in the center, surrounded by a black ring, with a yellow top latch visible.



Figure 2: Side view of the Coleman Bravo CX10WP camera without its waterproof housing. The silver-colored camera body shows the lens on the front, a control button on the side, and ports on the rear side.

Key Features:

- Full HD 1080p Video Recording (30 fps)
- 960p Video Recording (30 fps)
- 720p Video Recording (60 fps)
- 5 Megapixel Still Image Capture
- 170-degree Ultra-Wide Angle Lens
- Integrated OLED Screen
- Waterproof up to 61 meters with included housing
- Mini HDMI and USB Connectivity

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the camera.
2. Open the cover and insert the Li-ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

2. Memory Card Installation

The camera supports SDHC memory cards (not included). A high-speed card (Class 10 or higher) is recommended for optimal video recording performance.

1. Locate the memory card slot.

2. Insert the SDHC card with the contacts facing the correct direction until it clicks into place.
3. To remove, gently push the card until it springs out.

3. Charging the Battery

Before first use, fully charge the battery.

1. Connect the camera to a USB power source (e.g., computer, USB wall adapter) using the provided USB cable.
2. The charging indicator light will illuminate. It will turn off or change color when charging is complete.

4. Mounting the Camera

The Coleman Bravo CX10WP comes with various mounts for different applications.

- **Waterproof Case:** Always use the waterproof case when operating the camera underwater or in wet conditions. Ensure the case is properly sealed before submersion.
- **Adhesive Mounts:** Use the curved or flat adhesive mounts for attaching the camera to helmets or other smooth surfaces. Ensure the surface is clean and dry before applying.
- **Handlebar/Bike Mount:** Attach the camera to handlebars or similar cylindrical objects using the provided mount.
- **T-Tip Adapter:** This adapter allows compatibility with various mounting accessories.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the Power/Mode button until the screen illuminates.
- To power off, press and hold the Power/Mode button until the screen turns off.

2. Mode Selection

Press the Power/Mode button repeatedly to cycle through available modes: Video Recording, Photo Capture, and Playback.

3. Recording Video

1. Select Video Recording mode.
2. Press the Shutter/OK button to start recording. A red indicator light will flash, and the recording icon will appear on the screen.
3. Press the Shutter/OK button again to stop recording. The indicator light will stop flashing.

4. Taking Photos

1. Select Photo Capture mode.
2. Press the Shutter/OK button to take a photo. The screen may briefly flash.

5. Playback

1. Select Playback mode.
2. Use the navigation buttons (if available, or Power/Mode and Shutter/OK for selection) to browse through your recorded videos and photos.
3. Press the Shutter/OK button to play a video or view a photo.

6. Menu Navigation

Access the camera settings menu to adjust video resolution, photo resolution, date/time, and other parameters. Refer to the on-screen prompts for specific menu options and navigation using the available buttons.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens with fingers.
- Do not use harsh chemicals or abrasive cleaners.

2. Waterproof Case Care

- After each use in water, rinse the waterproof case with fresh water to remove salt, sand, or chlorine.
- Allow the case to air dry completely before storing.
- Inspect the O-ring seal regularly for any debris, cracks, or damage. Clean the O-ring and apply silicone grease if necessary to maintain its waterproof integrity.

3. Storage

Store the camera and accessories in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly installed.	Charge the battery. Ensure the battery is inserted with correct polarity.
Cannot record video or take photos.	Memory card is full, not inserted, or corrupted.	Insert a memory card. Delete unnecessary files. Format the memory card (this will erase all data).
Poor video/photo quality.	Lens is dirty. Incorrect settings. Low light conditions.	Clean the lens. Adjust video/photo resolution settings. Ensure adequate lighting.
Water leakage into case.	Waterproof case not properly sealed. Damaged O-ring.	Ensure case is securely latched. Inspect O-ring for damage or debris and clean/replace if necessary.

SPECIFICATIONS

Model Number	CX10WP
Video Resolution	1080p (30 fps), 960p (30 fps), 720p (60 fps)
Still Image Resolution	5 Megapixels
Lens	170-degree Ultra-Wide Angle

Display	Integrated 2-inch OLED Screen
Waterproof Depth	Up to 61 meters (with included waterproof case)
Connectivity	USB, Mini HDMI
Storage Media	SDHC Memory Card (not included)
Battery Type	Lithium-ion
Audio Format	AAC, MP3, PCM

WARRANTY AND SUPPORT

The product includes a 1-year warranty as stated in the package contents. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official Coleman website.

Please retain your proof of purchase for warranty validation.