

[Manuals.plus](#) /

› [Essentiel B](#) /

› Essentiel B CLE USB WiFi N300 Mini-Format Network Adapter User Manual

Essentiel B CLE USB WIFI N300 MINI-Format

Essentiel B CLE USB WiFi N300 Mini-Format Adapter User Manual

MODEL: CLE USB WIFI N300 MINI-FORMAT

Brand: Essentiel B

1. PRODUCT OVERVIEW

The Essentiel B CLE USB WiFi N300 mini-format adapter is a compact wireless network solution designed for easy connectivity. It provides Wi-Fi N connectivity with a data transfer speed of up to 300 Mbps, utilizing a USB 2.0 interface for broad compatibility with PC and Mac systems. Its mini-format design ensures it is unobtrusive when plugged into a USB port.



A close-up view of the Essentiel B CLE USB WiFi N300 mini-format adapter. It features a compact black body with the 'essentiel b' logo in white, connected to a standard silver USB-A connector.

2. SETUP GUIDE

Follow these steps to set up your Essentiel B USB WiFi adapter:

1. **Insert the Adapter:** Locate an available USB 2.0 port on your computer (PC or Mac). Gently insert the Essentiel B USB WiFi adapter into the port. Ensure it is fully seated.
2. **Driver Installation:**
 - **Windows:** In most cases, Windows will automatically detect and install the necessary drivers. If not, a driver CD might be included with the product, or you may need to download drivers from the Essentiel B official website.
 - **macOS:** macOS typically requires specific drivers. Refer to the included documentation or the Essentiel B support website for macOS driver downloads and installation instructions.
3. **Verify Installation:** After driver installation, check your computer's network settings. The new wireless adapter should appear as an available network device.

3. OPERATING INSTRUCTIONS

Once the adapter is installed, you can connect to a wireless network:

- **Access Network Settings:**
 - **Windows:** Click on the Wi-Fi icon in the system tray (usually bottom-right corner).
 - **macOS:** Click on the Wi-Fi icon in the menu bar (usually top-right corner).
- **Select Network:** A list of available Wi-Fi networks will appear. Select your desired network.
- **Enter Password:** If the network is secured, you will be prompted to enter the Wi-Fi password (security key).
- **Connect:** Click "Connect" to establish the wireless connection. The adapter supports Wi-Fi N standard, providing stable and fast connectivity up to 300 Mbps.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Essentiel B USB WiFi adapter, consider the following maintenance tips:

- **Keep it Clean:** Periodically clean the adapter with a soft, dry cloth. Avoid using liquid cleaners or solvents.
- **Protect the USB Connector:** When not in use, store the adapter in a safe place to prevent damage to the USB connector. Avoid bending or applying excessive force to the connector.
- **Avoid Extreme Conditions:** Do not expose the adapter to extreme temperatures, humidity, or direct sunlight.
- **Firmware/Driver Updates:** Check the Essentiel B official website periodically for updated drivers or firmware, which can improve performance and compatibility.

5. TROUBLESHOOTING

If you encounter issues with your Essentiel B USB WiFi adapter, refer to the common problems and solutions below:

Problem	Solution
Adapter not detected by computer.	<ul style="list-style-type: none">• Ensure the adapter is fully inserted into the USB port.• Try a different USB port.• Restart your computer.• Reinstall or update the drivers for the adapter.
Cannot connect to Wi-Fi network.	<ul style="list-style-type: none">• Verify you are entering the correct Wi-Fi password.• Ensure your router is powered on and broadcasting a signal.• Move closer to the Wi-Fi router to improve signal strength.• Restart your router and modem.
Slow Wi-Fi speed or frequent disconnections.	<ul style="list-style-type: none">• Check for interference from other electronic devices.• Ensure your router's firmware is up to date.• Update the adapter's drivers.• Consider changing the Wi-Fi channel on your router to avoid congestion.

6. SPECIFICATIONS

Feature	Detail
Brand	Essentiel B
Model Name	CLE USB WIFI N300 MINI-Format
Product Weight	4.54 g
Hardware Platform	PC / Mac
Hardware Interface	USB
Batteries Included	No
Data Transfer Rate	300 Megabits per second
Data Link Protocol	USB
Connector Type	WUSB, USB 2.0
ASIN	B00LGJQNCS
First Available Date	21 October 2014

Feature	Detail
Commercial Identification Number	03497670060200

7. WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or service, please refer to the documentation included with your purchase or visit the official Essentiel B website. Support resources typically include FAQs, driver downloads, and contact information for customer service.

It is recommended to register your product on the manufacturer's website, if applicable, to receive updates and facilitate warranty claims.

© 2024 Essentiel B. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00LGJQNCS>

More documents and user manuals: <https://manuals.plus/>