

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › **DAM** /
- › DAM Quick Power Pirate 45 LSC Fishing Reel Instruction Manual

DAM Quick Power Pirate 45 LSC

DAM Quick Power Pirate 45 LSC Fishing Reel

Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, maintenance, and troubleshooting of your DAM Quick Power Pirate 45 LSC fishing reel. Please read this manual thoroughly before using the reel to ensure safe and efficient performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Always handle fishing equipment with care to prevent injury.
- Ensure all components are securely fastened before use.
- Keep fingers clear of moving parts during operation.
- Do not attempt to disassemble the reel beyond the scope of this manual, as this may void the warranty and cause damage.
- Rinse the reel with fresh water after each use in saltwater environments to prevent corrosion.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- DAM Quick Power Pirate 45 LSC Fishing Reel
- Instruction Manual (this document)

Note: Additional accessories may be sold separately.

4. SETUP

4.1 Attaching the Reel to a Fishing Rod

1. Align the reel foot with the reel seat on your fishing rod.
2. Tighten the reel seat's locking nuts until the reel is firmly secured and does not wobble. Do not overtighten.

4.2 Spooling Fishing Line

Proper line spooling is crucial for optimal performance.

1. Pass the fishing line through the rod guides, starting from the tip.
2. Tie the line to the reel's spool using an arbor knot or similar secure knot.
3. Close the bail (if applicable) or engage the level wind.
4. Maintain light tension on the line as you reel it onto the spool. The line should lay evenly across the spool.
5. Fill the spool to approximately 1/8 inch (3mm) from the rim. Overfilling can cause tangles.



Figure 1: Front view of the DAM Quick Power Pirate 45 LSC reel, displaying the spool and line capacity specifications. Note the gear ratio of 1:4.0 and line capacities in LBS/YDS and mm/M.

5. OPERATING THE REEL

5.1 Drag System Adjustment

The drag system controls the amount of resistance the line experiences when a fish pulls on it. Adjust the drag before casting.

- To increase drag, turn the drag star/knob clockwise.
- To decrease drag, turn the drag star/knob counter-clockwise.
- A good starting point for drag is about 25-30% of your line's breaking strength.

5.2 Casting

1. Engage the free spool lever (often labeled "ON" or "Free Spool") to allow the line to run freely.
2. Hold the rod and reel comfortably.
3. Perform your casting motion.
4. As the lure or bait approaches the target, gently feather the spool with your thumb to control the cast distance and prevent backlashes.
5. Once the lure hits the water, disengage the free spool lever by turning the handle slightly or pressing the lever back to the "OFF" position.



Figure 2: Side view of the DAM Quick Power Pirate 45 LSC reel, highlighting the handle assembly and the "Auto Speed Release" lever, which controls the free spool function.

5.3 Retrieving Line

Turn the handle clockwise to retrieve the line. The level wind system will guide the line evenly onto the spool.

6. MAINTENANCE

Regular maintenance extends the life and performance of your reel.

- **After Each Use:** Rinse the reel thoroughly with fresh water, especially after saltwater exposure. Allow it to air dry completely.
- **Lubrication:** Periodically apply a small amount of reel oil to moving parts (handle shaft, level wind worm gear) and reel grease to gears. Refer to a reel schematic for specific lubrication points if available.
- **Storage:** Store the reel in a dry, cool place away from direct sunlight and extreme temperatures. Loosen the drag completely during storage to prevent drag washer compression.
- **Inspection:** Regularly inspect the reel for any signs of wear, damage, or loose screws. Address issues promptly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Reel handle is stiff or difficult to turn.	Lack of lubrication, dirt/salt buildup, internal damage.	Clean and lubricate the reel. If problem persists, seek professional service.
Line tangles or backlashes frequently.	Overfilled spool, improper casting technique, worn line, drag too loose.	Check line level, practice casting, replace old line, adjust drag.
Drag slips or is inconsistent.	Drag washers are dry, dirty, or worn.	Clean and re-grease drag washers. Replace if worn.

8. SPECIFICATIONS

Feature	Detail
Brand	DAM
Model	Quick Power Pirate 45 LSC
Hand Orientation	Right Hand
Material	Carbon, Stainless Steel
Item Weight	600 Grams
Gear Ratio	1:4.0
Line Capacity (LBS/YDS)	23/480, 25/360, 30/300
Line Capacity (mm/M)	0.45/440, 0.50/330, 0.60/220

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official DAM website or contact your authorized dealer. Keep your proof of purchase for warranty claims.

Manufacturer: DAM

Website: www.dam.de *(Note: This is a placeholder URL, please refer to the official product documentation for the correct support website.)*