

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit XWDA 751480X WSSS EU Front-Load Washing Machine User Manual

Indesit 85592

Indesit XWDA 751480X WSSS EU Front-Load Washing Machine User Manual

Model: 85592

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential information for the correct installation, use, and maintenance of your Indesit XWDA 751480X WSSS EU washing machine. Please read it carefully before using the appliance and keep it for future reference.

1.1 Safety Warnings

- Ensure the appliance is disconnected from the power supply before any cleaning or maintenance.
- Do not allow children to play with the appliance.
- Do not touch the appliance with wet hands or feet.
- Do not open the detergent dispenser while the machine is operating.
- In case of malfunction, do not attempt to repair the appliance yourself. Contact authorized technical assistance.

2. SETUP AND INSTALLATION

2.1 Unpacking

Remove all packaging materials and transport bolts from the rear of the appliance. Keep packaging materials out of reach of children.

2.2 Positioning

Place the washing machine on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and access.



Figure 1: Indesit XWDA 751480X WSSS EU Front-Load Washing Machine. This image shows the full front view of the washing machine, highlighting its white casing, the large circular door, and the control panel at the top with various dials and buttons.

2.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap.
- Ensure the drain hose is properly positioned in a drain or sink.
- Plug the power cord into a grounded electrical outlet. Do not use extension cords or multiple adapters.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview

The control panel consists of a program selector dial, function buttons, and a display screen.

3.2 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine. The maximum capacity is 7 kg.

3.3 Adding Detergent

Pull out the detergent dispenser drawer. Add detergent and fabric softener to the appropriate compartments as indicated

in the drawer.

3.4 Selecting a Program

Turn the program selector dial to choose the desired wash program (e.g., Cotton, Synthetics, Delicates). Refer to the program table for details.

3.5 Starting a Wash Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. The display will show the remaining time.

4. MAINTENANCE

4.1 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

4.2 Cleaning the Door Seal

Wipe the rubber door seal after each wash to remove any lint or debris and prevent mold growth.

4.3 Cleaning the Filter

Periodically clean the pump filter, usually located at the bottom front of the machine, to ensure proper drainage.

5. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is firmly closed; Select a program and press Start.
Water not draining	Drain hose kinked or blocked; Pump filter clogged.	Check and straighten drain hose; Clean the pump filter.
Excessive vibration	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust feet to level machine; Redistribute laundry.

If the problem persists after attempting these solutions, please contact customer support.

6. SPECIFICATIONS

Brand: Indesit
Model: XWDA 751480X WSSS EU (Model Number: 85592)
Type: Front-Load Washing Machine
Capacity: 7 Kilograms
Spin Speed: 1400 rpm
Dimensions (L x W x H): 59.5 x 54 x 85 cm
ASIN: B00LHLB078

7. WARRANTY AND SUPPORT

For information regarding warranty coverage and terms, please refer to the warranty card included with your appliance or visit the official Indesit website.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Have your model number (85592) and serial number ready when contacting support.

Note: Availability of spare parts information is not provided in the product data.