

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux 134629900 Washer Door Lock Instruction Manual

## Electrolux 134629900

# Electrolux 134629900 Washer Door Lock Instruction Manual

Genuine Replacement Part for Electrolux and Frigidaire Washers

## INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the Electrolux 134629900 Washer Door Lock. This is a genuine replacement part designed for specific Electrolux and Frigidaire washing machine models. Proper installation and care are crucial for the safe and effective functioning of your appliance.

## SAFETY INFORMATION

- **Disconnect Power:** Always disconnect the washing machine from its power source before attempting any installation, repair, or maintenance. Failure to do so can result in electric shock or serious injury.
- **Professional Installation Recommended:** Appliance repair can be complex. If you are not comfortable performing the installation yourself, it is highly recommended to seek assistance from a qualified appliance technician.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and eye protection, during installation.
- **Handle with Care:** The door lock mechanism contains electrical components. Handle the part carefully to avoid damage.

## SETUP AND INSTALLATION

The Electrolux 134629900 Door Lock is a direct replacement part. Installation typically involves accessing the front panel or top of the washing machine, removing the old door lock, and connecting the new one. Specific steps may vary by washer model. Always refer to your appliance's service manual for detailed, model-specific instructions.

1. **Prepare the Appliance:** Disconnect the washer from the electrical outlet and turn off the water supply.
2. **Access the Door Lock:** Depending on your washer model, you may need to remove the top panel, front panel, or door boot to access the door lock assembly.
3. **Disconnect Old Lock:** Carefully disconnect the electrical wiring harness from the old door lock. Note the orientation of the wires if not clearly marked.
4. **Remove Old Lock:** Unscrew or unclip the old door lock from its mounting position.
5. **Install New Lock:** Position the new Electrolux 134629900 Door Lock in place and secure it with the screws or clips.

6. **Connect Wiring:** Reconnect the electrical wiring harness to the new door lock. Ensure connections are secure.
7. **Reassemble Washer:** Reattach any panels or door boots that were removed.
8. **Test Functionality:** Reconnect power and water supply. Run a short cycle to ensure the door locks and unlocks correctly and that there are no leaks.



Figure 1: Front view of the Electrolux 134629900 Washer Door Lock. This image shows the overall shape and primary locking mechanism.

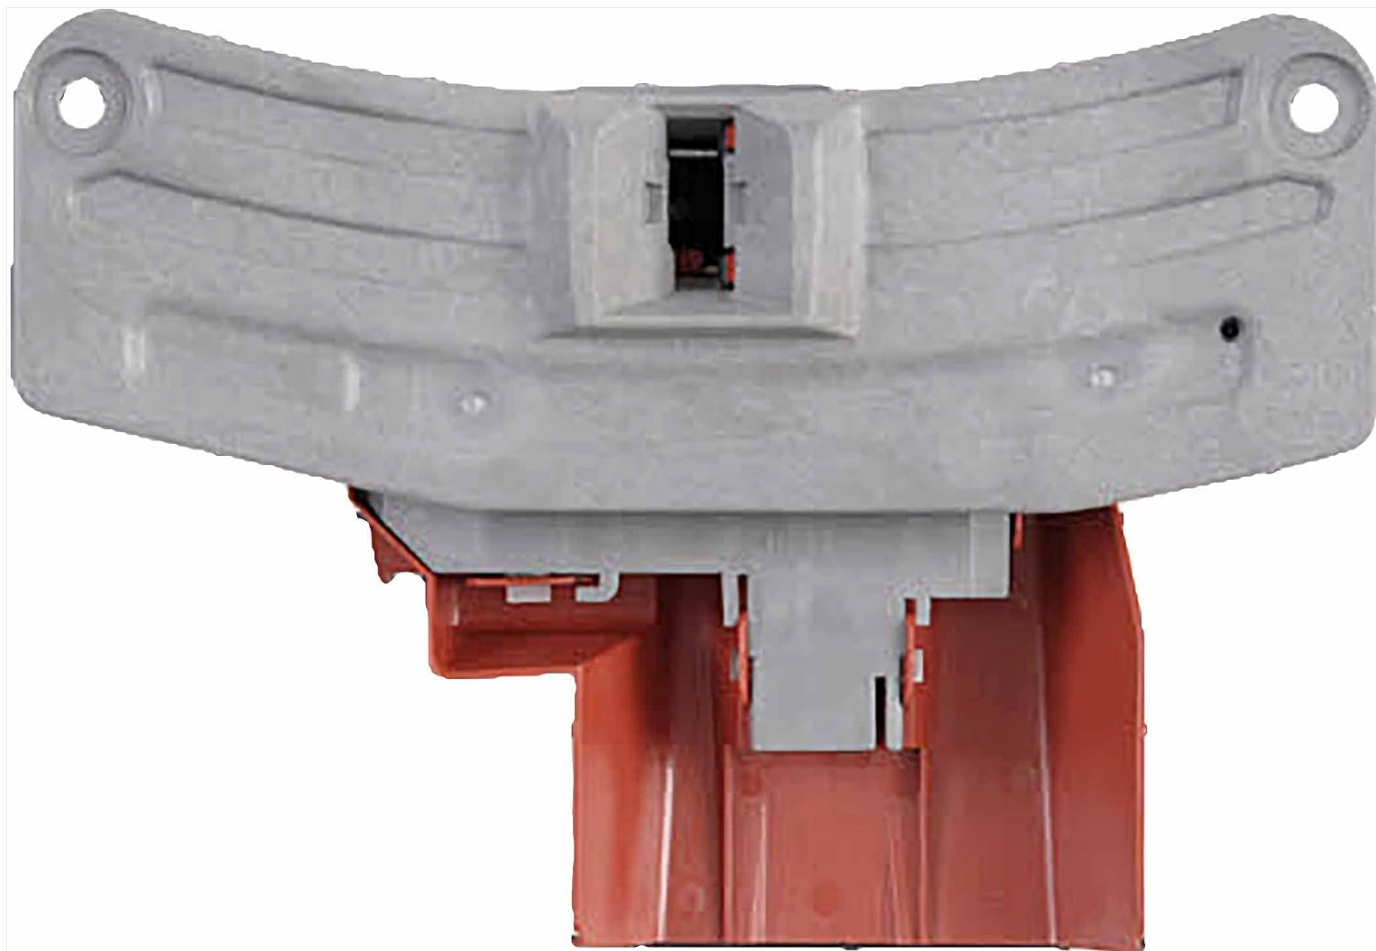
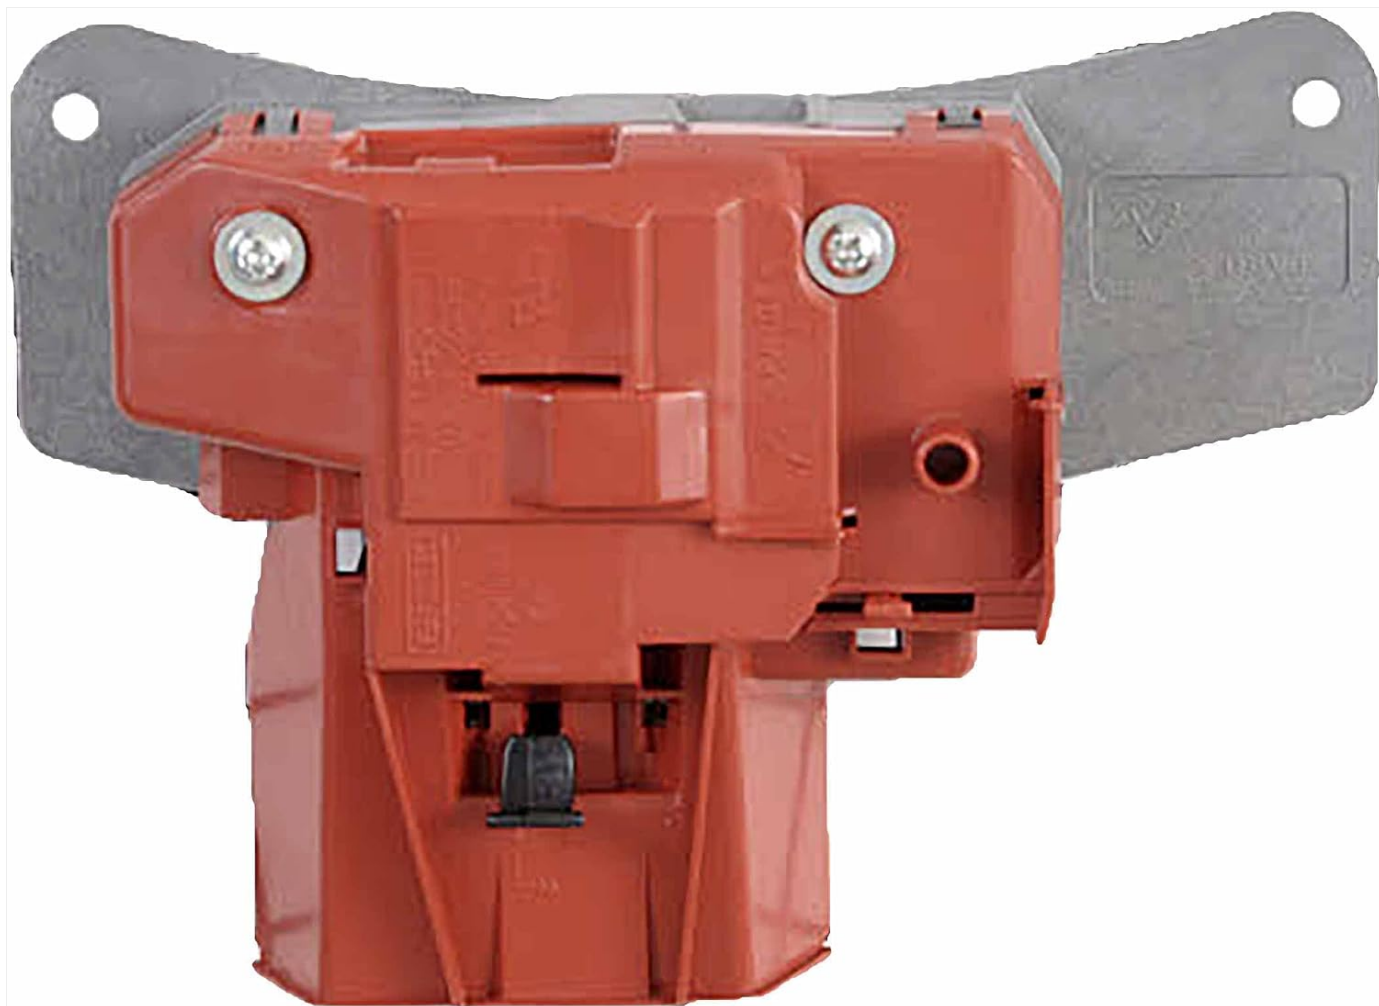


Figure 2: Top view of the door lock, highlighting the mounting points for secure installation within the washer.



*Figure 3: Rear view of the door lock, showing the electrical connectors where the wiring harness attaches.*

## OPERATING PRINCIPLES

---

The door lock is a critical safety component in your washing machine. Its primary function is to prevent the washer door from being opened during operation, especially during spin cycles or when water is present. When a wash cycle begins, the washer's control board sends a signal to the door lock, engaging a mechanism that securely latches the door. The door remains locked until the cycle is complete and it is safe to open. This part ensures the proper and safe operation of your appliance.

## MAINTENANCE

---

The Electrolux 134629900 Door Lock is designed for durability and typically requires no routine maintenance. However, regular inspection of the door and surrounding area can help identify potential issues early:

- **Keep Clean:** Ensure the area around the door lock and door strike is free from lint, detergent residue, or foreign objects that could obstruct the locking mechanism.
- **Inspect for Wear:** Periodically check the door lock and the door strike on the washer door for any visible signs of wear, cracks, or damage.
- **Door Alignment:** Verify that the washer door closes and latches smoothly without excessive force. Misalignment can put undue stress on the lock.

If any issues are observed, consider replacing the part to maintain optimal safety and performance.

## TROUBLESHOOTING

---

If your washing machine is experiencing issues related to the door lock, consider the following troubleshooting steps:

- **Door Not Locking:** If the washer door does not lock at the start of a cycle, or if the washer displays an error code related to the door lock (e.g., E42), the door lock mechanism may be faulty.
- **Door Not Unlocking:** If the door remains locked after a cycle is complete and the washer has cooled down, the door lock may be stuck or defective.
- **Intermittent Operation:** Inconsistent locking or unlocking could indicate a loose electrical connection or an internal fault within the lock.
- **Visual Inspection:** With the power disconnected, visually inspect the door lock for any obvious damage, burnt marks, or broken components. Check the wiring harness for secure connections and signs of damage.

In most cases, if the door lock is determined to be faulty, replacement with a genuine part like the Electrolux 134629900 is the recommended solution.

## SPECIFICATIONS

|                             |                             |
|-----------------------------|-----------------------------|
| Model Number                | 134629900                   |
| Brand                       | Electrolux                  |
| Material                    | Multi-Material              |
| Item Dimensions (L x W x H) | 6 x 4 x 1.75 inches         |
| Item Weight                 | 5.6 ounces                  |
| UPC                         | 612058424020                |
| Included Components         | Appliance Replacement Parts |

## WARRANTY INFORMATION

This Electrolux 134629900 Washer Door Lock comes with a FULL 30 DAY WARRANTY from the manufacturer. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation provided with your purchase or contact Electrolux customer support.

## SUPPORT

For further assistance, technical support, or to locate a qualified service technician, please contact Electrolux customer service. When contacting support, have your appliance's model and serial number, as well as the part number (134629900), readily available. You can find contact information for Electrolux customer support on their official website or in your appliance's original user manual.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question