

NEC NP3250W

NEC NP3250W Wireless LCD Digital Projector User Manual

Model: NP3250W

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, setup, and maintenance of your NEC NP3250W Wireless LCD Digital Projector. Please read this manual thoroughly before using the projector and retain it for future reference.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent fire, electric shock, or injury:

- **Power Source:** Use only the power supply specified for this projector. Ensure the power cord is securely plugged into a grounded outlet.
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the projector for proper airflow to prevent overheating.
- **Lamp:** The projector lamp operates at high temperatures and pressures. Allow the projector to cool down completely before attempting any maintenance, especially lamp replacement. Refer to the maintenance section for lamp handling instructions.
- **Liquid and Moisture:** Do not expose the projector to rain, moisture, or excessive humidity. Avoid placing liquids near the projector.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Opening the projector casing may expose you to dangerous voltage or other risks.
- **Eye Protection:** Do not look directly into the projector lens when the lamp is on, as the intense light can damage your eyes.

3. PROJECTOR COMPONENTS OVERVIEW

Familiarize yourself with the various parts of your NEC NP3250W projector.



Figure 3.1: Angled front view of the NEC NP3250W projector, showing the main lens, focus/zoom rings, and side ventilation grilles.



Figure 3.2: Direct front view of the NEC NP3250W projector, displaying the main lens, lens release button, and zoom indicator.



Figure 3.3: Top panel controls of the NEC NP3250W projector, including navigation buttons (Menu, Select, Enter, Source, Auto Adjust, 3D Reform), indicator lights (USB, Lamp, Status, Power), and lens shift/focus adjustment dials.



Figure 3.4: Rear panel of the NEC NP3250W projector, detailing all input/output ports including USB (B/LAN), LAN, USB, Computer 1/2 (VGA/DVI-D), Component In, S-Video In, Video In, Audio In/Out, Remote, PC Control, and AC In power connection.



Figure 3.5: Side view of the NEC NP3250W projector, emphasizing the large ventilation grilles for heat dissipation.



Figure 3.6: Bottom label of the NEC NP3250W projector, displaying model number (NP3250W), electrical ratings (100-240V~

4. SETUP

4.1. Unpacking and Initial Inspection

Carefully remove the projector from its packaging. Inspect for any signs of damage. If the projector was purchased without a lamp, ensure a compatible lamp is acquired and installed before operation. Refer to Section 6.1 for lamp installation instructions.

4.2. Projector Placement

Place the projector on a stable, level surface or mount it securely. Ensure the projector is positioned at an appropriate distance from the screen to achieve the desired image size. Maintain adequate clearance around the ventilation openings.

4.3. Connecting Power

1. Connect the power cord to the AC IN port on the rear of the projector (refer to Figure 3.4).
2. Plug the other end of the power cord into a grounded electrical outlet.

4.4. Connecting Input Sources

The NP3250W offers various input options:

- **Computer (VGA/DVI-D):** Use a VGA or DVI-D cable to connect your computer to the 'COMPUTER 1 IN' or 'COMPUTER 2 IN' ports.
- **Component Video:** Connect component video cables (YPbPr) to the 'COMPONENT IN' ports.
- **S-Video:** Connect an S-Video cable to the 'S-VIDEO IN' port.
- **Composite Video:** Connect a composite video cable (yellow RCA) to the 'VIDEO IN' port.
- **Audio:** Connect audio cables to the corresponding 'AUDIO IN' ports for each video input, or use the dedicated 'AUDIO IN' ports for general audio input.
- **LAN/USB:** For network and USB connectivity, refer to Section 5.3 for detailed instructions.

5. OPERATING THE PROJECTOR

5.1. Powering On and Off

1. **Power On:** Press the **POWER** button on the projector's top panel or the remote control. The power indicator light will turn green.
2. **Power Off:** Press the **POWER** button again. A confirmation message may appear. Press **POWER** once more to confirm shutdown. The projector will enter a cooling cycle, and the power indicator will flash before turning off. Do not unplug the projector during the cooling cycle.

5.2. Basic Image Adjustments

- **Focus:** Rotate the **FOCUS** ring on the lens or use the 'FOCUS' dial on the top panel (refer to Figure 3.3) until the image is sharp.
- **Zoom:** Rotate the **ZOOM** ring on the lens to adjust the image size.
- **Lens Shift:** Use the **LENS SHIFT** dials on the top panel (refer to Figure 3.3) to vertically or horizontally adjust the image position without moving the projector.

- **Keystone Correction:** If the image appears trapezoidal, use the 'KEYSTONE' function in the projector's OSD (On-Screen Display) menu to correct it.
- **Source Selection:** Press the **SOURCE** button on the top panel or remote control to cycle through available input sources.
- **Menu Navigation:** Use the **MENU** button and arrow keys on the top panel (refer to Figure 3.3) to access and navigate the projector's settings menu. Press **ENTER** to confirm selections.

5.3. Wireless Connectivity

The NEC NP3250W supports wireless projection. To utilize this feature:

1. Ensure a compatible wireless adapter (if not built-in) is connected to the projector's USB port.
2. Access the 'Network' or 'Wireless' settings within the projector's OSD menu.
3. Configure the wireless settings to connect to your local Wi-Fi network or establish a direct connection with a compatible device.
4. Follow the on-screen instructions or refer to the detailed network guide for specific software installation on your computer or mobile device for wireless transmission.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your projector.

6.1. Lamp Replacement

Important Note: The product description indicates 'Missing Lamp'. A new lamp must be installed before the projector can be operated.

The projector lamp has a limited lifespan. When the 'LAMP' indicator light illuminates or a warning message appears, the lamp needs replacement. Always use genuine NEC replacement lamps.

1. **Power Off and Cool Down:** Turn off the projector and unplug the power cord. Allow at least 60 minutes for the lamp to cool completely. The lamp operates at high temperatures and can cause severe burns if handled while hot.
2. **Locate Lamp Cover:** Identify the lamp cover on the projector casing.
3. **Remove Cover:** Loosen the screw(s) securing the lamp cover and carefully remove it.
4. **Remove Old Lamp:** Loosen the screw(s) holding the lamp module in place. Carefully pull the lamp module straight out.
5. **Install New Lamp:** Gently insert the new lamp module, ensuring it is seated correctly. Tighten the screw(s) to secure it.
6. **Replace Cover:** Reattach the lamp cover and tighten its screw(s).
7. **Reset Lamp Timer:** After replacing the lamp, you must reset the lamp timer in the projector's OSD menu to accurately track lamp usage. Refer to the OSD menu for 'Lamp Reset' options.

6.2. Air Filter Cleaning

The air filter prevents dust from entering the projector and affecting performance. Clean the filter regularly (e.g., every 100-200 hours of use).

1. **Power Off and Cool Down:** Turn off and unplug the projector. Allow it to cool.
2. **Locate Filter Cover:** Identify the air filter cover, typically on the side or bottom of the projector.
3. **Remove Filter:** Open the cover and carefully remove the air filter.

4. **Clean Filter:** Use a small vacuum cleaner or a soft brush to remove dust from the filter. Do not wash the filter with water.
5. **Reinstall Filter:** Place the clean filter back into its slot and close the cover securely.

6.3. Lens Cleaning

Use a soft, lint-free cloth specifically designed for optical lenses. Gently wipe the lens surface to remove dust or smudges. Avoid using abrasive cleaners or excessive force.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No image displayed	<ul style="list-style-type: none">• Projector not powered on• Input source not selected• Input cable loose or faulty• Lamp not installed or faulty	<ul style="list-style-type: none">• Press POWER button• Select correct input source• Check cable connections• Install or replace lamp (refer to Section 6.1)
Image is blurry	<ul style="list-style-type: none">• Lens out of focus• Projector too close/far from screen	<ul style="list-style-type: none">• Adjust FOCUS ring/dial• Adjust projector distance or use ZOOM
Image is trapezoidal	Projector not perpendicular to screen	Adjust projector angle or use Keystone Correction in OSD menu.
Projector overheats and shuts down	Blocked ventilation or dirty air filter	Ensure clear ventilation. Clean air filter (refer to Section 6.2).
Wireless connection issues	Incorrect network settings or adapter issues	Check wireless settings in OSD. Ensure wireless adapter is properly installed.

8. SPECIFICATIONS

Feature	Specification
Model Number	NP3250W
Brand	NEC
Display Resolution	1280 x 800 (WXGA)

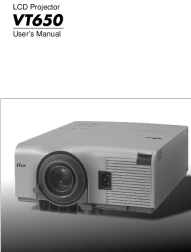



Feature	Specification
Connectivity Technology	Wireless
Special Feature	Integrated speakers
Recommended Uses	Business, Education
Product Dimensions	20 x 12 x 20 inches
Item Weight	25 pounds

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official NEC website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 NEC Corporation. All rights reserved.

Related Documents - NP3250W

	<p>NEC VT650 LCD Projector User's Manual</p> <p>User's manual for the NEC VT650 LCD Projector, covering setup, operation, maintenance, troubleshooting, and specifications. Includes warranty information and product registration details.</p>
	<p>NEC VT45 LCD Projector User's Manual</p> <p>A comprehensive user's manual for the NEC VT45 LCD Projector, detailing setup, operation, maintenance, troubleshooting, and specifications. Includes warranty information and product registration details.</p>
	<p>NEC GT1150 LCD Projector User Manual - Setup, Operation, and Specifications</p> <p>Comprehensive user manual for the NEC GT1150 LCD Projector, covering installation, operation, maintenance, troubleshooting, and technical specifications. Learn how to set up and use your projector effectively.</p>
	<p>Manual do Utilizador NEC L50W: Instalação, Operação e Segurança do Projetor</p> <p>Guia completo para o projetor NEC L50W. Aprenda sobre instalação, operação, características, segurança e solução de problemas para maximizar o desempenho do seu projetor NEC.</p>

<div data-bbox="252 105 296 120" data-label="Text"><p>NEC</p></div> <div data-bbox="116 161 303 331" data-label="Image"></div>	<div data-bbox="341 154 987 185" data-label="Section-Header"><p>NEC DT100 Multi-Function LCD Projector User's Manual</p></div> <div data-bbox="341 197 1426 306" data-label="Text"><p>User's manual for the NEC DT100 Multi-Function LCD Projector. This guide covers installation, operation, features such as 5-in-1 projection capabilities, ease of use, high-quality imaging, and safety precautions.</p></div>
<div data-bbox="138 441 177 448" data-label="Section-Header"><p>PLEASE READ</p></div> <div data-bbox="138 450 287 506" data-label="Text"><p>This manual is provided as a free service by Projector.com.</p><p>We are in no way responsible for the contents of this manual. We do not guarantee its accuracy and we do not make any claim or copyright. The copyright remains the property of their respective owners.</p></div> <div data-bbox="138 524 205 530" data-label="Section-Header"><p>ABOUT PROJECTOR.COM</p></div> <div data-bbox="138 533 287 591" data-label="Text"><p>Projector.com (http://www.projector.com) is your online and shopping guide resource for DLP and LCD video projectors.</p><p>Visit the site to read the latest projector news and reviews, read and compare on projector specifications, download user manuals and more more.</p></div>	<div data-bbox="341 517 1401 586" data-label="Section-Header"><p>NEC MultiSync MT840/MT1040/MT1045 LCD Projector User Manual - Setup, Operation, and Specifications</p></div> <div data-bbox="341 598 1463 707" data-label="Text"><p>This user manual provides comprehensive instructions for the NEC MultiSync MT840, MT1040, and MT1045 LCD projectors, covering setup, installation, operation, maintenance, troubleshooting, and technical specifications.</p></div>