

Manuals.plus /

› tectake /

› tectake Folding Camping Chair Model 800070 User Manual

tectake 800070

tectake Folding Camping Chair Model 800070 User Manual

Model: 800070 | Brand: tectake

PRODUCT OVERVIEW

The tectake Folding Camping Chair is designed for portability and comfort during various outdoor activities. Its robust construction and practical features make it suitable for camping, fishing, beach outings, or simply relaxing in your garden. The chair is lightweight, folds compactly, and includes a carrying bag for easy transport.

- Highly portable and quick to store.
- Integrated cup holder in the armrest.
- Plastic feet for enhanced stability.
- Includes a practical carrying bag.
- Durable powder-coated steel frame.
- Water-repellent 100% polyester fabric.

SETUP INSTRUCTIONS

1. **Unpack the Chair:** Remove the chair from its carrying bag.
2. **Unfold the Frame:** Hold the top of the chair frame and gently pull the armrests outwards. The legs will automatically extend.
3. **Secure the Seat:** Ensure all four legs are fully extended and the plastic feet are flat on the ground. Press down lightly on the seat fabric to ensure it is taut and securely in place.



Image: The tectake Folding Camping Chair fully unfolded, ready for use. This view shows the chair's stable structure and comfortable seating area.

OPERATING INSTRUCTIONS

Once the chair is set up, it is ready for use.

- **Seating:** Sit gently into the chair, distributing your weight evenly. The chair is designed to support a maximum weight of 120 kg.
- **Using the Cup Holder:** The integrated mesh cup holder located on the armrest can securely hold beverages or small items like a mobile phone.



Image: A close-up view of the integrated mesh cup holder, demonstrating its capacity to hold a standard beverage can securely.

MAINTENANCE AND STORAGE

Cleaning

The chair's 100% polyester fabric is water-repellent and easy to clean.

- For light dirt, wipe with a damp cloth.
- For more stubborn stains, use a mild soap solution and a soft brush, then rinse thoroughly with clean water.
- Allow the chair to air dry completely before folding and storing to prevent mildew.
- Do not use harsh chemicals or abrasive cleaners, as these may damage the fabric or frame finish.

Folding and Storage

1. **Fold the Chair:** Grasp the armrests and push them inwards towards each other. The chair frame will collapse.
2. **Compact Folding:** Bring the legs together to achieve the most compact folded size.
3. **Store in Bag:** Place the folded chair into the provided carrying bag. Secure the bag with its drawstring or strap.
4. **Storage Location:** Store the chair in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.



Image: The tectake Folding Camping Chair in its compact folded state, positioned next to its carrying bag. An inset detail highlights the water-repellent property of the fabric.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|--|---|
| Chair feels unstable. | Legs not fully extended or uneven ground. | Ensure all legs are fully locked into position. Move the chair to a flat, stable surface. |
| Difficulty folding the chair. | Frame components might be misaligned or stiff. | Apply gentle, even pressure when pushing the armrests inwards. Check for any obstructions in the folding mechanism. |
| Fabric appears dirty or stained. | Exposure to dirt, food, or beverages. | Refer to the "Cleaning" section under Maintenance for proper cleaning procedures. |

SPECIFICATIONS

| | |
|--------------------------------------|--|
| Brand | tectake |
| Model Number | 800070 |
| ASIN | B00LM54F26 |
| Color | Black-Grey |
| Material | Powder-coated steel frame, 100% polyester fabric, plastic feet |
| Overall Dimensions (Unfolded) | Approx. 80 cm (L) x 50 cm (W) x 95 cm (H) |
| Folded Dimensions | Approx. 14 cm (L) x 14 cm (W) x 95 cm (H) |
| Seat Height | Approx. 44 cm |
| Seat Surface | Approx. 51 cm (L) x 40 cm (W) |
| Frame Diameter | Approx. 16 mm |
| Maximum Load Capacity | 120 kg |
| Weight | Approx. 2.4 kg |
| Recommended Use | Camping, relaxing, outdoor activities |

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact tectake customer service directly. Contact details can typically be found on the manufacturer's official website or through your retailer.