

Smeg TSSR01

SMEG TSSR01 Sandwich Rack Set Instruction Manual

Brand: Smeg | Model: TSSR01

PRODUCT OVERVIEW

The SMEG TSSR01 Sandwich Rack Set is designed to enhance your toasting experience, specifically compatible with SMEG's TSF01 and TSF03 toasters. This accessory allows for the easy creation of perfectly toasted sandwiches. Each rack features a durable stainless steel grill and a solid bottom tray to catch melting cheese or fillings, preventing messes inside your toaster. The anti-heat treated plastic handles ensure safe and easy handling, even when hot. Whether you're crafting a classic grilled cheese or a gourmet panini, the TSSR01 racks provide a convenient and mess-free solution, all while maintaining SMEG's signature retro aesthetic.

Your browser does not support the video tag.

Official Product Overview Video: This video provides a visual introduction to the SMEG TSSR01 Sandwich Rack Set, demonstrating its features and compatibility with SMEG toasters.

KEY FEATURES

- **Perfect Compatibility:** Specifically designed for SMEG TSF01 and TSF03 toasters.
- **Durable Construction:** Crafted from high-quality stainless steel for long-lasting use.
- **Mess-Free Toasting:** Integrated bottom tray catches drips and prevents spills inside the toaster.
- **Safe Handling:** Equipped with anti-heat treated plastic handles for easy and safe operation.
- **Compact Dimensions:** Each rack measures 240 x 32 x 173 mm (9.45" x 1.26" x 6.8").
- **Lightweight Design:** Net weight of 0.1 kg (0.22 lbs) for easy handling and storage.
- **Easy Maintenance:** Simple to clean, ensuring hygiene and convenience.

SETUP

Unpacking

1. Carefully remove the sandwich racks from their packaging.
2. Inspect both racks for any signs of damage. If damaged, do not use and contact customer support.
3. Remove any protective films or ties.
4. Before first use, wipe the racks with a damp cloth and dry thoroughly.

Compatibility

The SMEG TSSR01 Sandwich Rack Set is specifically designed for use with SMEG TSF01 and TSF03 2-slice toasters. Ensure your toaster model is compatible before use.



Image: The SMEG TSSR01 Sandwich Rack Set, showing both stainless steel racks with their anti-heat handles.

OPERATING INSTRUCTIONS

Preparing Your Sandwich

1. Prepare your sandwich ingredients. For best results, use bread slices that fit comfortably within the rack.
2. Place your sandwich (e.g., grilled cheese, panini) inside one of the sandwich racks. Ensure the filling is contained to prevent drips.
3. Close the rack securely, ensuring the sandwich is held firmly but not overly compressed.

Inserting and Toasting

1. Carefully insert the loaded sandwich rack into a slot of your compatible SMEG TSF01 or TSF03 toaster.
2. Lower the toaster lever.
3. Select your desired browning setting on the toaster. Start with a lower setting and adjust as needed for optimal results.
4. Once toasting is complete, the rack will pop up with the toast.
5. Using the anti-heat handles, carefully remove the hot sandwich rack from the toaster.
6. Open the rack and remove your toasted sandwich.



Image: The sandwich racks shown in use with a SMEG toaster, demonstrating how they hold sandwiches for toasting.

MAINTENANCE AND CLEANING

- Allow the sandwich racks to cool completely before cleaning.
- Wipe the stainless steel grill and bottom tray with a soft, damp cloth. For stubborn food residue, use a mild dish soap solution.
- Rinse thoroughly with clean water and dry immediately to prevent water spots or corrosion.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- **Important Note:** The SMEG TSSR01 Sandwich Racks are *not* dishwasher compatible. Hand wash only.



Image: A single sandwich rack, highlighting its stainless steel construction and integrated bottom tray for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your SMEG TSSR01 Sandwich Rack Set, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sandwich not toasting evenly.	Toaster browning setting too low or uneven heat distribution.	Increase the toaster's browning setting. Ensure the rack is fully inserted and centered in the toaster slot.

Problem	Possible Cause	Solution
Rack difficult to insert or remove.	Improper alignment or toaster slot obstruction.	Ensure the rack is aligned correctly with the toaster slot. Check for any crumbs or debris obstructing the slot.
Food sticking to the rack.	Excessive cheese/filling overflow or insufficient cleaning.	Ensure fillings are contained within the bread. Clean the rack thoroughly after each use to prevent buildup. A light spray of cooking oil on the rack before use can help.

SPECIFICATIONS

Attribute	Detail
Brand	Smeg
Model Number	TSSR01
Material	Alloy Steel (Stainless Steel)
Product Dimensions (Each Rack)	1.25"D x 9.4"W x 6.8"H (240 x 32 x 173 mm)
Item Weight (Each Rack)	0.22 lbs (0.1 kg) / 12 ounces (0.34 kg for the set, assuming 2 racks)
Number of Pieces	2 (as a set)
Assembly Required	No
Dishwasher Compatible	No (Hand wash recommended)



Image: Side profile of a single sandwich rack, illustrating its compact design and dimensions.

WARRANTY AND SUPPORT

SMEG offers a 2-year EU Spare Part Availability Duration for this product, ensuring long-term support for components. For specific warranty details, product registration, or technical assistance, please refer to the official SMEG website or contact their customer support directly.

You can often find additional support and FAQs on the [Smeg Store on Amazon](#) or by visiting the official Smeg global website.

© 2024 Smeg. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.