

[Manuals.plus](#) /

> [Samsung](#) /

> Samsung Galaxy Tab S T705 8.4-inch Tablet User Manual

Samsung SM-T705

Samsung Galaxy Tab S T705 8.4-inch Tablet User Manual

Model: SM-T705

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Samsung Galaxy Tab S T705 8.4-inch tablet. It covers setup, operation, key features, maintenance, and troubleshooting to help you maximize your device's capabilities.





Figure 1: Front view of the Samsung Galaxy Tab S T705 tablet.

SETUP

1. Initial Device Activation

Upon first power-on, follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account. This process is crucial for accessing applications and services.

2. Fingerprint Scanner Setup

The Galaxy Tab S T705 features a fingerprint scanner for enhanced security and quick access. To set up:

1. Navigate to **Settings > Lock screen and security > Fingerprint Scanner**.
2. Follow the on-screen instructions to register your fingerprints. You may need to swipe your finger multiple times for accurate registration.
3. Set a backup password or PIN as an alternative unlock method.

The fingerprint scanner can also automatically unlock specific multi-user profiles.

3. Expanding Storage with a microSD Card

The tablet supports microSD cards up to 128 GB for additional storage. Locate the microSD card slot on the side of the device. Gently insert the card until it clicks into place. Ensure the tablet is powered off before inserting or removing the card to prevent data corruption.





Figure 2: Side view of the tablet with ports, including the microSD slot (not explicitly visible but typically near the USB port).

OPERATING INSTRUCTIONS

1. Display Features

The Samsung Galaxy Tab S T705 features an 8.4-inch Super AMOLED display with a resolution of 2560x1600 pixels. This display technology provides vibrant colors and high contrast for an enhanced viewing experience.

2. Multi Window Functionality

To use two applications simultaneously:

1. Tap and hold the **Recent Apps** button (usually a square icon) to activate Multi Window mode.
2. Select the first application from the list.
3. Select the second application to open it in the other pane.
4. You can adjust the size of each window by dragging the divider between them.

3. Camera Usage

The tablet is equipped with an 8-megapixel rear camera and a 2.1-megapixel front camera. To access the camera, tap the **Camera** icon on your home screen or app drawer. You can switch between front and rear cameras, record videos, and access various camera modes and settings.

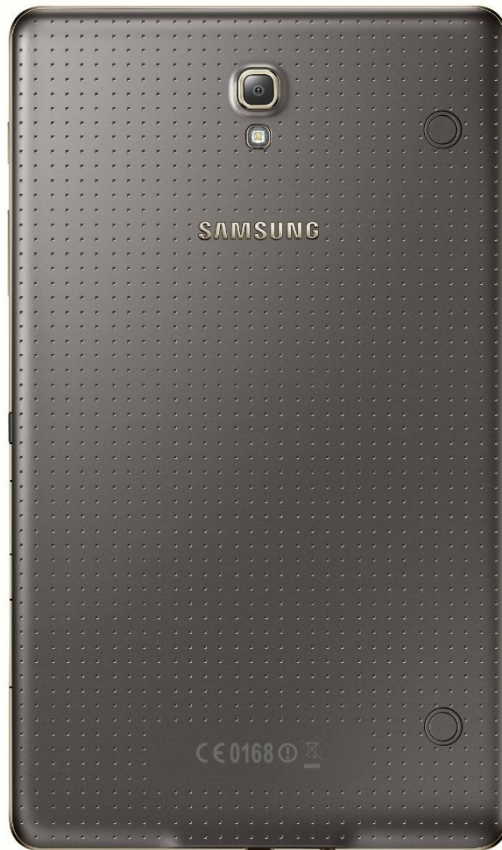


Figure 3: Rear view of the Samsung Galaxy Tab S T705 tablet.

4. Ultra Power Saving Mode

To extend battery life, activate Ultra Power Saving Mode. This mode changes the screen to black and white and restricts background data for non-essential applications. To enable, go to **Settings > Power saving > Ultra power saving mode**.

5. Multi-User and Kids Modes

The tablet supports up to eight user profiles. To set up Multi-User Mode, go to **Settings > Users**. Kids Mode provides a child-friendly interface with parental controls for app access and time limits.

6. SideSync 3.0

SideSync allows you to connect your Samsung Galaxy S5 smartphone to your tablet to make/receive calls, send/receive text messages, and control your phone directly from the tablet screen.

7. Hancom Office

For productivity, Hancom Office is pre-installed, allowing you to access, edit, and save documents directly on your tablet.

8. Smart Switch

Use Smart Switch to transfer contacts, photos, and media from an old device to your new Galaxy Tab S T705.

9. WatchON and IR Blaster

The WatchON feature provides TV listings and recommendations. The built-in IR blaster allows the tablet to function as a universal remote control for compatible home entertainment systems.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals. For stubborn smudges, lightly dampen the cloth with water. Ensure no moisture enters ports or openings.

2. Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. Charge the device using the provided charger and data cable. Regularly activating Ultra Power Saving Mode can help conserve battery power when needed.

3. Software Updates

Periodically check for software updates to ensure optimal performance and security. Go to **Settings > About device > Software update**.

TROUBLESHOOTING

1. Device Freezing or Unresponsive

If the tablet becomes unresponsive, press and hold the **Power** button for approximately 10 seconds to force a restart. If the issue persists, try clearing the cache partition (refer to online resources for specific steps for your Android version) or performing a factory reset (this will erase all data, so back up first).

2. Battery Drains Quickly

- Reduce screen brightness.
- Close unused applications running in the background.
- Disable Wi-Fi, Bluetooth, or GPS when not in use.
- Activate Ultra Power Saving Mode.
- Check **Settings > Battery** to identify apps consuming the most power.

3. Connectivity Issues (Wi-Fi/Cellular)

- Toggle Wi-Fi or cellular data off and on.
- Restart your tablet and your Wi-Fi router (if applicable).
- Ensure you are within range of the network.
- Verify network settings in **Settings > Connections**.

SPECIFICATIONS

Below are the technical specifications for the Samsung Galaxy Tab S T705 8.4-inch tablet:

Feature	Detail
Operating System	Android v4.4.2 (KitKat)
Processor	Octa-Core Exynos 5 Octa 5420 (Quad-core 1.9GHz Cortex-A15 & Quad-core 1.3 GHz Cortex-A7)
RAM	3 GB
Internal Memory	16 GB

Feature	Detail
Expandable Memory	Up to 128 GB with microSD
Display Size	8.4 inches
Display Type	Super AMOLED capacitive touchscreen
Display Resolution	2560 x 1600 WQXGA
Rear Camera	8 MP CMOS with LED flash, autofocus, Full HD Video Recording
Front Camera	2.1 MP CMOS
Battery Capacity	4900 mAh
Connectivity	2G GSM, 3G WCDMA, 4G LTE, Wi-Fi (802.11 a/b/g/n/ac), Bluetooth v4.0, GPS, GLONASS, Beidou, MHL, USB 2.0, 3.5mm Earjack
Special Features	Accelerometer, Adaptive Display, Fingerprint Sensor, Gyro Sensor, Hall Sensor, Multi-Window, IR Blaster, Voice Calling
Dimensions (LxWxH)	21.3 x 12.6 x 0.7 cm
Weight	298 g

WARRANTY AND SUPPORT

1. Warranty Information

The Samsung Galaxy Tab S T705 comes with a 1-year manufacturer warranty for the device itself. In-box accessories, including batteries, are covered by a 6-month manufacturer warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

2. Customer Support

For technical assistance, service, or further inquiries, please visit the official Samsung support website or contact their customer service helpline. Refer to the documentation included in your product packaging for specific contact details in your region.

The product package includes: Tablet, Charger, Data Cable, and User Guide.