

## Notifier FMM-1

# Notifier FMM-1 Intelligent Addressable Monitor Module User Manual

Model: FMM-1

## 1. INTRODUCTION AND OVERVIEW

---

The Notifier FMM-1 is an intelligent addressable monitor module designed for use with Notifier's ONYX series and other compatible fire alarm control panels. This module allows conventional alarm initiating devices, such as manual pull stations, normally open contact devices, or waterflow switches, to be connected to an intelligent fire alarm system. It monitors the status of these devices and reports their condition (normal, alarm, or trouble) back to the control panel.

The FMM-1 module is a crucial component for integrating existing conventional devices into modern addressable fire detection systems, providing precise location identification for alarms and troubles.



Figure 1: Front view of the Notifier FMM-1 module. This image displays the module's front face, featuring the "Notifier by Honeywell" branding and two small circular indicators, likely for status or activity.

## 2. SETUP AND INSTALLATION

---

Installation of the FMM-1 module should only be performed by qualified personnel in accordance with all local and national electrical codes, and the manufacturer's instructions. Ensure that all power to the fire alarm control panel and associated circuits is disconnected before beginning installation.

### 2.1 Mounting

The FMM-1 module is designed for mounting in a standard 4-inch square, 2-1/8 inch deep electrical box. It can also be mounted in a surface-mount box (SMB500) or a standard 1-gang box. The module includes mounting tabs for secure installation.

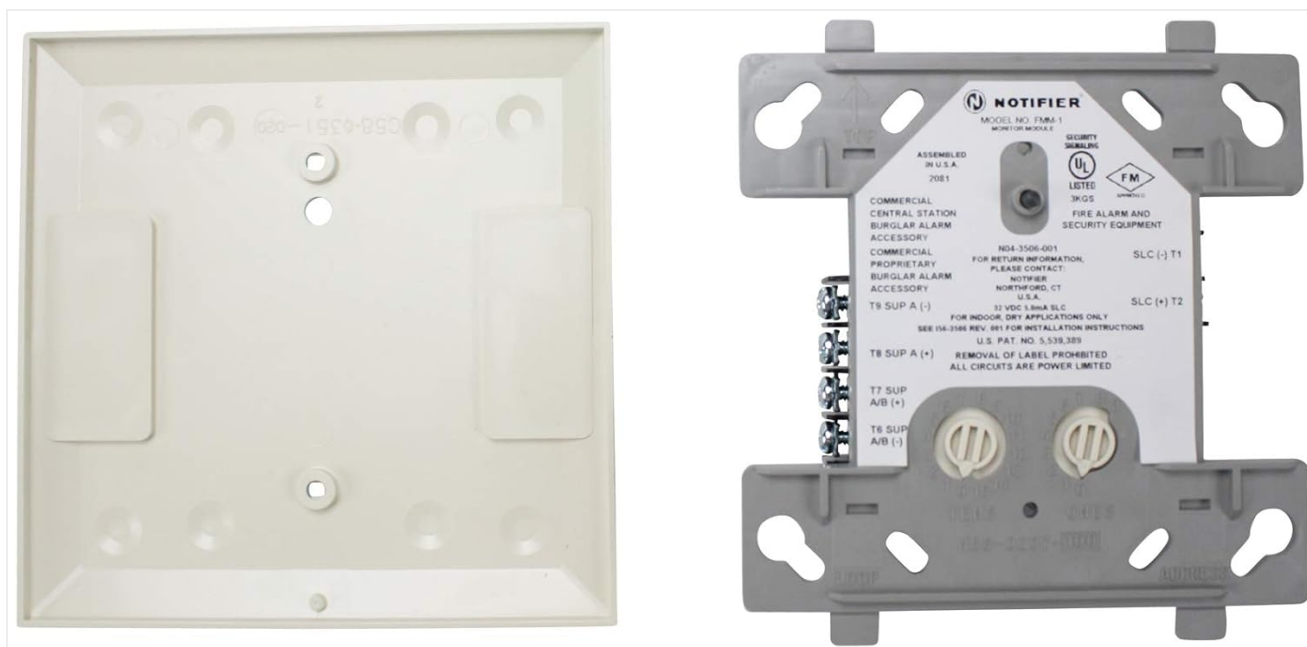


Figure 2: Front and back components of the Notifier FMM-1 module. This image illustrates both the front cover and the rear mounting plate, which houses the terminal connections for wiring.

## 2.2 Wiring

The FMM-1 module connects to the Signaling Line Circuit (SLC) of the fire alarm control panel and to the conventional initiating device circuit (IDC). Refer to the specific wiring diagrams provided with the module and the fire alarm control panel for correct connections. Ensure proper polarity for all connections.

- **SLC Connections:** Connect the SLC input and output wires to the designated terminals on the module.
- **IDC Connections:** Connect the conventional initiating device circuit to the appropriate terminals. An End-of-Line Resistor (EOLR) must be installed at the last device on the IDC circuit as specified by the manufacturer to ensure proper supervision.
- **Addressing:** Set the unique address for the module using the rotary switches on the module. Each module on the SLC must have a distinct address.



Figure 3: Rear view of the Notifier FMM-1 module with wiring details. This image provides a clear view of the terminal block for connecting to the fire alarm system's Signaling Line Circuit (SLC) and the initiating device circuit (IDC), along with product labels and certifications.

After wiring, verify all connections are secure and correct before applying power to the system.

### 3. OPERATING PRINCIPLES

Once properly installed and addressed, the FMM-1 module operates by continuously monitoring the connected conventional initiating device circuit. It communicates the status of this circuit to the intelligent fire alarm control panel via the SLC.

- **Normal State:** When the connected initiating device circuit is in a normal, non-alarm state, the module reports a normal status to the control panel.
- **Alarm State:** Upon activation of a connected device (e.g., a pull station is activated, or a waterflow switch detects flow), the module detects the change in circuit status and immediately transmits an alarm signal to the control panel. The control panel will then initiate its programmed alarm sequence.
- **Trouble State:** If a fault occurs on the initiating device circuit (e.g., an open circuit, short circuit, or ground fault), the module detects this trouble condition and reports it to the control panel. The control panel will indicate a trouble condition, often with an audible signal and a display message indicating the module's address.

The module's LED indicators (if present) may provide local visual indication of its status, such as flashing during normal operation or solid during an alarm/trouble condition. Refer to the specific product documentation for LED behavior.

## 4. MAINTENANCE

The Notifier FMM-1 module is designed for reliable, long-term operation with minimal maintenance. However, regular system-wide inspections and testing are crucial for ensuring the continued proper functioning of the fire alarm system.

- **Visual Inspection:** Periodically inspect the module and its connections for any signs of physical damage, corrosion, or loose wiring.
- **System Testing:** The fire alarm system, including all connected modules and devices, should be tested regularly by qualified personnel in accordance with NFPA 72 (National Fire Alarm and Signaling Code) and local authority having jurisdiction (AHJ) requirements. This includes testing the functionality of devices connected to the FMM-1 module to ensure they properly report to the control panel.
- **Cleaning:** If necessary, gently clean the exterior of the module with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Any maintenance or repair work beyond simple visual inspection and cleaning should be performed by a certified fire alarm technician.

## 5. TROUBLESHOOTING

If the FMM-1 module or its connected devices are not functioning as expected, consider the following troubleshooting steps. Always ensure power is disconnected before inspecting wiring.

| Symptom                                      | Possible Cause                                                                                | Solution                                                                                                                                       |
|----------------------------------------------|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Module reports trouble condition.            | Open circuit, short circuit, or ground fault on IDC; incorrect EOLR; module addressing error. | Verify IDC wiring for breaks or shorts. Check EOLR value and placement. Confirm module address is unique and correctly set.                    |
| Module not communicating with control panel. | Incorrect SLC wiring; module address conflict; faulty module.                                 | Check SLC wiring for proper polarity and continuity. Ensure no duplicate addresses on the SLC. If issues persist, module may need replacement. |
| Connected device does not report alarm.      | Faulty initiating device; incorrect IDC wiring; module not configured correctly.              | Test the initiating device directly. Verify IDC wiring to the device. Confirm module programming in the control panel.                         |

For complex issues or if troubleshooting steps do not resolve the problem, contact a certified fire alarm technician or Notifier technical support.

## 6. SPECIFICATIONS

The following are key specifications for the Notifier FMM-1 Intelligent Addressable Monitor Module:

- **Model Number:** FMM-1
- **Brand:** Notifier



- **Power Source:** Corded Electric (via SLC)
- **Item Weight:** Approximately 1.6 ounces (0.1 Pounds)
- **Product Dimensions:** Approximately 4.9 x 4.9 x 1.3 inches
- **Alarm Type:** Audible (via connected devices, reported to panel)
- **UPC:** 783863011221
- **Manufacturer:** Notifier
- **Application:** Indoor, dry applications only
- **Certifications:** UL Listed, FM Approved (for Fire Alarm and Security Equipment)



Figure 4: Notifier FMM-1 module as packaged. This image shows the module, its clear plastic packaging, and the included installation and maintenance instructions, along with minor accessories.

## 7. WARRANTY AND SUPPORT


For specific warranty information regarding the Notifier FMM-1 Intelligent Addressable Monitor Module, please refer to the warranty documentation provided with your purchase or contact your authorized Notifier distributor or reseller. Warranty terms typically cover defects in materials and workmanship for a specified period from the date of

purchase.

For technical support, installation assistance, or service inquiries, please contact Notifier's official customer support channels or your certified fire alarm system installer. Always provide your product model number (FMM-1) and any relevant system details when seeking support.

**Notifier Official Website:** [www.notifier.com](http://www.notifier.com)

Documents - Notifier – FMM-1

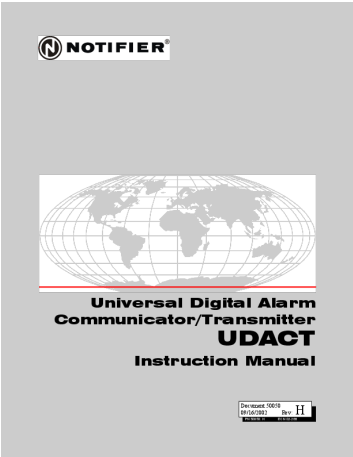


[\[pdf\]](#) User Manual Guide

Notifier Universal Digital Alarm Communicator Transmitter UDACT Instruction Manual 50050H Go Now  
Techcommft blob core windows net View guide user manual Url techcommft fluidtopics integrations docs  
50050 |||

Universal Digital Alarm Communicator/Transmitter UDACT Instruction Manual H  
Document 50050 09/16/20 ... 100, AFP-200, AFP-300, AFP-400, AFC-600, NFS-640,  
NFS-3030, and AM2020/AFP1010 applications, use an **FMM-1** module to supervise  
the relay closure refer to Figure 9 on page 26 . Program the custom label...

 lang:en **score:42** filesize: 2.03 M page\_count: 132 document date: 2005-08-15

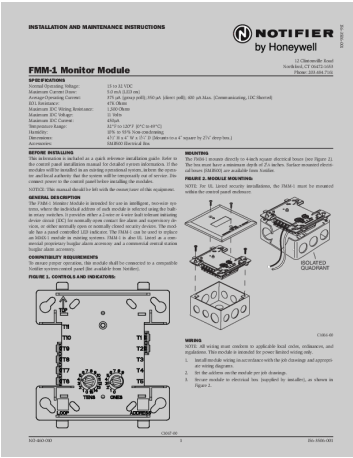


[\[pdf\]](#) User Manual Installation Guide Instructions Specifications Dimension Guide  
Documentation Guide Accessories

Notifier FMM 1 2007 Installation Manual fire alarm control panel manual covering installation edition  
notifier facp fmm detection safety smoke detector suppression emergency systems building automation  
life documentation user guide programming operation technical reference Manuals 88 Free Downloads  
FACP Manuals v1 docs facpmanuals manuals |||


I56-3506-001 Installation And Maintenance Instructions **FMM-1** Monitor Module  
Specifications Normal Operating Voltage: Maximum Current Draw: Average  
Operating Current: EOL Resistance: Maximum IDC Wiring Resistance: Maximum IDC  
Voltage: Maximum IDC Current: Temperature Range: Humidity: Dimensions: A...

 lang:en **score:40** filesize: 975.8 K page\_count: 2 document date: 2008-02-08

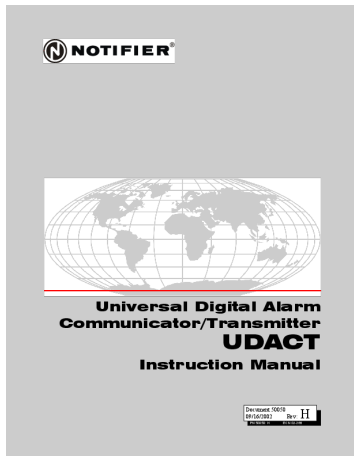


## [\[pdf\]](#) User Manual Documentation Guide

 Notifier Universal Digital Alarm Communicator Transmitter UDACT Instruction Manual 50050H notifier fire alarm facp udact manual installation operations programming control panel detection safety smoke detector suppression emergency systems building automation life documentation user guide operation ma Manuals 88 Free Downloads FACP Manuals v1 docs facpmanuals manuals 2002 ||| Universal Digital Alarm Communicator/Transmitter UDACT Instruction Manual H Document 50050 09/16/20 ... 100, AFP-200, AFP-300, AFP-400, AFC-600, NFS-640, NFS-3030, and AM2020/AFP1010 applications, use an **FMM-1** module to supervise the relay closure refer to Figure 9 on page 26 . Program the custom label... lang:en **score:39** filesize: 1.99 M page\_count: 132 document date: 2005-08-15

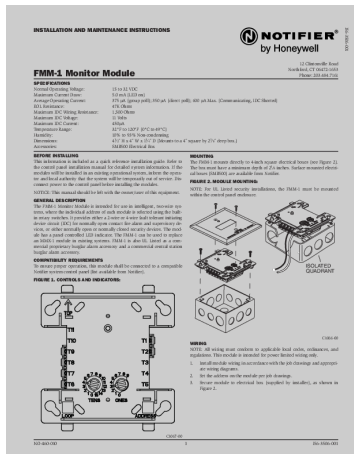

## [\[pdf\]](#) User Manual Installation Guide Instructions Specifications Dimension Guide Accessories

 HCE FMM 1 I56 3506 001 b prod edam honeywell content dam hbt en us documents manuals and guides installation ||| I56-3506-001 Installation And Maintenance Instructions **FMM-1** Monitor Module Specifications Normal Operating Voltage: Maximum Current Draw: Average Operating Current: EOL Resistance: Maximum IDC Wiring Resistance: Maximum IDC Voltage: Maximum IDC Current: Temperature Range: Humidity: Dimensions: A... lang:en **score:38** filesize: 979.28 K page\_count: 2 document date: 2017-06-28

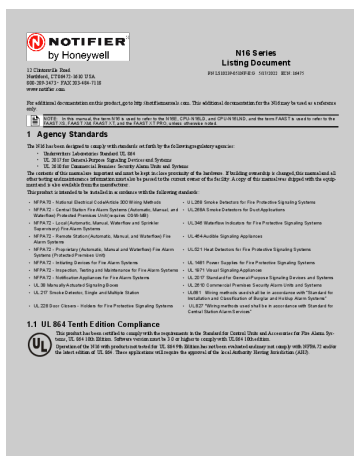

## [\[pdf\]](#) User Manual Instructions Documentation Guide

N16 Listing Document Notifier fire alarm control panel manual with installation operation and programming instructions 2022 edition notifier facp n16 n16e n16x cpu n16ld n16lnd detection safety smoke detector suppression emergency systems building automation life documentation user guide technical reference E421973 FACP Manuals v1 docs facpmanuals manuals listing document ||| 12 Clintonville Road Northford, CT 06472-1610 USA 800-289-3473 FAX 203-484-7118 www.notifier.com N ... 5B DR-D5 DR-D5B DR-E5 DR-E5B DTR-A5 DTR-B5 DTR-C5 DTR-D5 DTR-E5 DVC-KDB VP-2B DP-DISP2 CHS-M3 FZM-1 **FMM-1\*** **FMM-101\*** **FDM-1\*** **FTM-1\*** **FCM-1\*** **FRM-1\*** **AA-30\*** **AA-100\*** **AA-120\*** **ACT-1\*** **ACT-2\*** **ACT-4** **ACT-25** **ACT-70...** lang:en **score:36** filesize: 1.81 M page\_count: 64 document date: 2022-05-18



 


## [\[pdf\]](#) User Manual Documentation

LS10006 051NF E E5 NFS2 3030ULLD book E421973 3030 Listing Document 1 Installation 19 mag 2022 — Refer to page 5 for wiring the SLC and Notifier Wiring Manual setup information refer UDACT 2 Instruction hbt fire F2 false prod edam honeywell content dam en us documents manuals guides ul listed

12 Clintonville Road Northford, CT 06472-1610 USA 800-289-3473 FAX 203-484-7118 [www.notifier.com](http://www.notifier.com) N ... on documents. For additional setup information on the TM-4, refer to the TM-4 Instruction Manual. **FMM-1** - MR-101/C - SLC - To Previous Node on Network 24V LCM-320 NCM-W NFS2-3030 NCM...

lang:en **score:35** filesize: 2.04 M page\_count: 76 document date: 2022-05-19

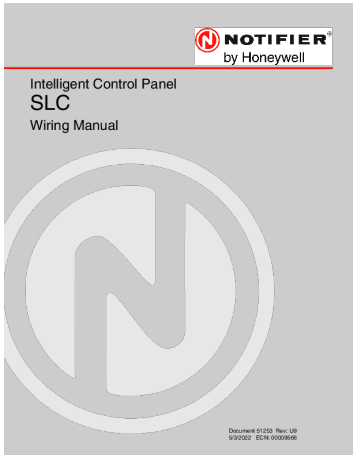


## [\[pdf\]](#) User Manual Documentation Guide

Notifier SLC Wiring 2022 Installation Technical Reference Manual fire alarm control panel manual covering installation technical reference edition notifier facp slc wiring detection safety smoke detector suppression emergency systems building automation life documentation user guide programming maintenance Manuals 88 Free Downloads FACP Manuals v1 docs facpmanuals manuals |||

Intelligent Control Panel SLC Wiring Manual Document 51253 Rev: U9 5/3/2022 ECN: 00009566 Fire Ala ...

.....72 C.3: **FMM-1**

 lang:en **score:34** filesize: 3.08 M page\_count: 88 document date: 2025-06-13

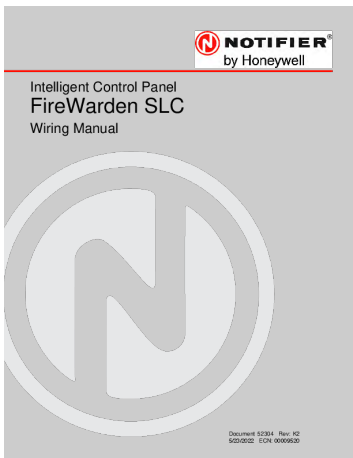


## [\[pdf\]](#) User Manual

51309 book E654944 FireWarden SLC ba fire 52304 prod edam honeywell content dam hbt en us documents manuals and guides wiring notifier |||

Intelligent Control Panel FireWarden SLC Wiring Manual Document 52304 Rev: K2 5/23/2022 ECN: 0000952 ... ..31 5.3: NMM-100 and **FMM-1** Wiring Diagrams

 lang:en **score:34** filesize: 2.77 M page\_count: 76 document date: 2022-07-28

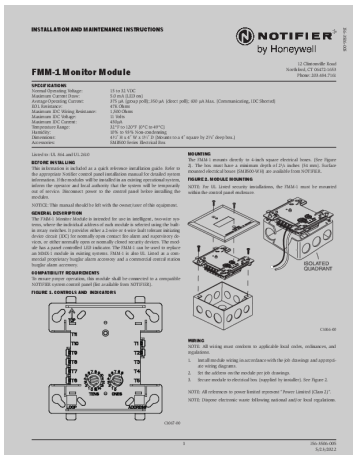


## [\[pdf\]](#) User Manual Installation Guide Instructions Specifications Dimension Guide Accessories

hbt fire I56 3506 005 false prod edam honeywell content dam en us documents manuals and guides installation |||

I56-3506-005 INSTALLATION AND MAINTENANCE INSTRUCTIONS **FMM-1** Monitor Module SPECIFICATIONS Normal Operating Voltage: Maximum Current Draw: Average Operating Current: EOL Resistance: Maximum IDC Wiring Resistance: Maximum IDC Voltage: Maximum IDC Current: Temperature Range: Humidity: Dimensions: A...

 lang:en **score:33** filesize: 662.17 K page\_count: 2 document date: 2022-08-18

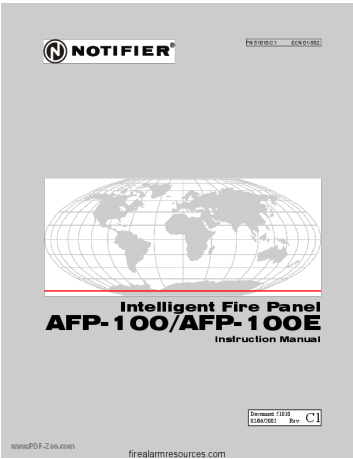

[pdf] User Manual Instructions Specifications Guide

Click here to Notifier AFP 300 400 Installation Programming User Manual Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstsv 1676713723 firealarmresources 23653 |||


PN 51010:C1 ECN 01-552 Intelligent Fire Panel AFP-100/AFP-100E Instruction Manual www.PDF-Zoo.com ... P 5 6 7 8 910 0 4 3 1 11 12 21 TENS 0 13 1514 2 56789 4 3 3 210 ONES 4 AADDDDRREESSSS **FMM-1**.cdr Monitor Modules - **FMM-1**, FZM-1 FDM-1 Addressable monitor modules for monitoring convent... lang:en **score:33** filesize: 3.05 M page\_count: 100 document date: 2022-02-19



[pdf] Instructions Specifications Datasheet


untitled e650889 Click here to Notifier Monitor Modules with FlashScan Data Sheet Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstsv 1676769004 firealarmresources 24397 |||

 **FMM-1 A , FMM-101 A , FZM-1 A FDM-1 A** Monitor Modules with FlashScan General Four different monitor modules are available for Notifier s intelligent control panels for a variety of applications. Monitor modules supervise a circuit of dry-contact input devices, such as conventional heat detectors... lang:en **score:33** filesize: 706.72 K page\_count: 4 document date: 2022-02-15

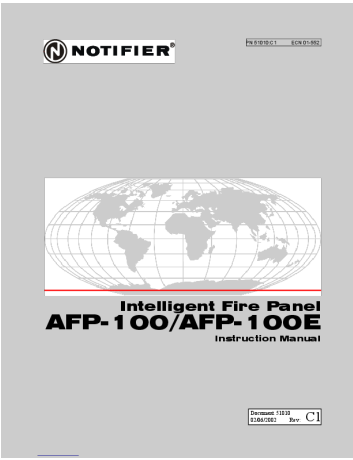


[NOTIFIER AFP-100/AFP-100E Intelligent Fire Panel Instruction Manual](#)

 Comprehensive instruction manual for the NOTIFIER AFP-100 and AFP-100E Intelligent Fire Alarm Control Panels (FACPs), covering installation, operation, programming, and technical specifications for fire protection systems. lang:en **score:33** filesize: 1.87 M page\_count: 100 document date: 2025-08-22

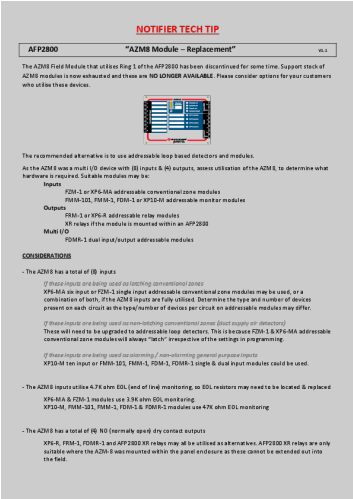

[pdf]


e306149 ba fire AFP2800 AZM8 Module Replacement V1 1 false prod edam honeywell content dam hbt en us documents manuals and guides reference notifier aus ||| NOTIFIER TECH TIP AFP2800 AZM8 Module Replacement V1.1 The AZM8 Field Module that utilises Ri ... is required. Suitable modules may be: Inputs FZM-1 or XP6-MA addressable conventional zone modules **FMM-101**, **FMM-1**, FDM-1 or XP10-M addressable monitor modules Outputs FRM-1 or XP6-R addressable relay... lang:en **score:33** filesize: 499.21 K page\_count: 3 document date: 2015-03-25

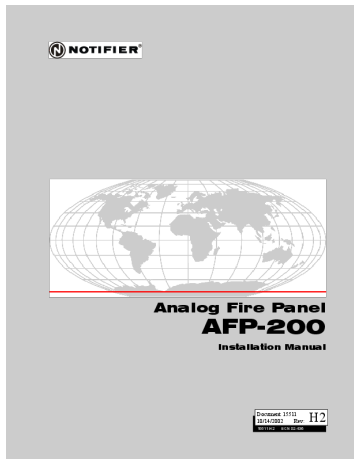 

### [NOTIFIER AFP-200 Analog Fire Panel Installation Manual](#)

This installation manual provides comprehensive guidance for the NOTIFIER AFP-200 Analog Fire Panel, covering system overview, component details, installation procedures, wiring requirements, programming instructions, and operational guidelines for fire safety professionals.

 lang:en **score:33** filesize: 3.74 M page\_count: 196 document date: 2025-08-18

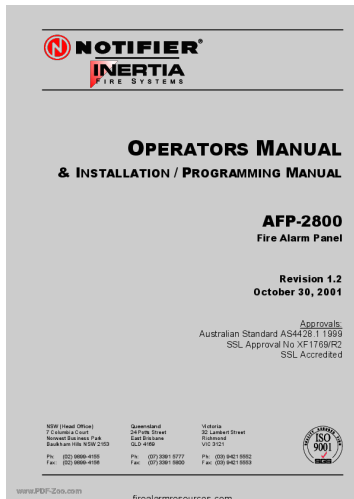


### [\[pdf\] User Manual Instructions Specifications Guide](#)

Click here to Notifier AFP 2800 Installation Programming User Manual Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676436899 firealarmresources 22987 |||

OPERATORS MANUAL INSTALLATION / PROGRAMMING MANUAL AFP-2800 Fire Alarm Panel Revision 1.2 October ... ..... 96  
5.14.5 FLASHSCAN MONITOR MODULE **FMM-1**

 lang:en **score:32** filesize: 2.51 M page\_count: 101 document date: 2022-02-19

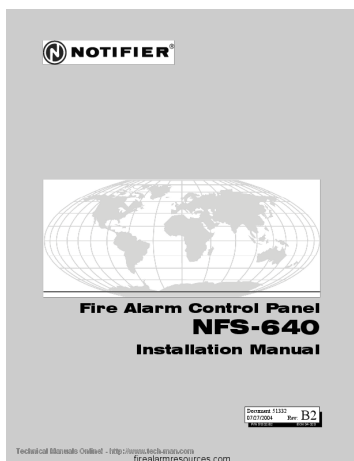


### [\[pdf\] User Manual Instructions Specifications Guide](#)

51332B02ManNFS 640 InsOEMEngl book E654326 Click here to Notifier NFS Installation Manual Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676728220 firealarmresources 22767 |||

Fire Alarm Control Panel NFS-640 Installation Manual B2 Document 51332 07/27/2004 Rev: P/N 51332:B ... notification and initiating devices, refer to the Device Compatibility Document. Monitor Modules - **FMM-1**, FZM-1 FDM-1. Addressable monitor modules for monitoring conventional initiating devices. Th...

 lang:en **score:32** filesize: 3.24 M page\_count: 88 document date: 2022-02-19

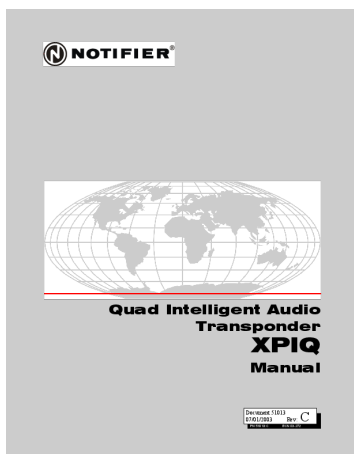


### [\[pdf\] User Manual Guide](#)

Notifier Quad Intelligent Audio Transponder XPIQ Manual Rev C Cindy! Go Now Techcommft blob core windows net View guide user manual Url techcommft fluidtopics integrations docs 51013 |||

 Quad Intelligent Audio Transponder XPIQ Manual C Document 51013 07/01/2003 Rev: PN 51013:C ECN 03 ... igure 2.22. The initiating devices that are compatible with degraded mode are the FSI-751, FSP-751, **FMM-1** and XP5-M. The **FMM-1** monitor modules must have terminals 3 and 4 jumpered and XP5-M ON ON O...  
lang:en **score:32** filesize: 1.57 M page\_count: 80 document date: 2005-11-14



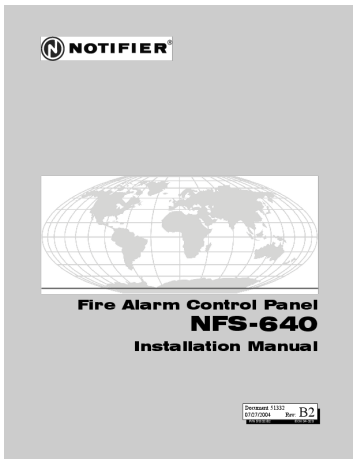

## [\[pdf\]](#) User Manual Documentation Guide

 
51332B02ManNFS 640 InsOEMEngl book Notifier NFS fire alarm control panel manual covering installation 2004 edition notifier facp nfs detection safety smoke detector suppression emergency systems building automation life documentation user guide programming operation technical reference E654326

Manuals 88 Free Downloads FACP Manuals v1 docs facpmanuals manuals |||

Fire Alarm Control Panel NFS-640 Installation Manual B2 Document 51332

07/27/2004 Rev: P/N 51332:B ... notification and initiating devices, refer to the Device Compatibility Document. Monitor Modules - **FMM-1**, FZM-1 FDM-1. Addressable monitor modules for monitoring conventional initiating devices. Th...

lang:en **score:31** filesize: 2.21 M page\_count: 88 document date: 2004-08-16

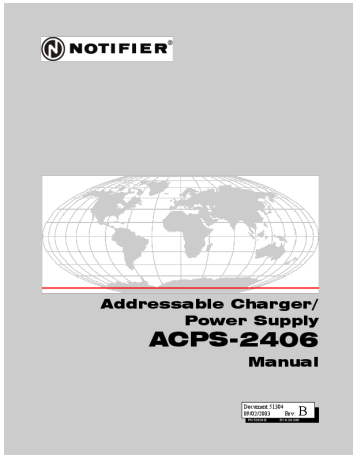

## [NOTIFIER ACPS-2406 Addressable Charger/Power Supply Manual](#)

Installation and operations manual for the NOTIFIER ACPS-2406, an addressable power supply and battery charger for fire alarm systems. Covers features, installation, configuration, applications, and technical specifications.

lang:en **score:31** filesize: 832.09 K page\_count: 40 document date: 2025-08-16



## [\[pdf\]](#) Instructions Specifications

untitled Click here to Notifier NFW 50X Intelligent Addressable FACP with Communicator Fire Alarm

Resources Free fire alarm manuals documents installation instructions and technical specifications tmstvt 1676675375 firealarmresources 22861 |||

NFW-50X Intelligent Addressable FACP with Communicator General The

FireWarden-50X NFW-50X is the ... h NEMA-4 rating. Watertight. Order FSP-851R, FSP-951R, or NP-100R separately. Addressable Modules **FMM-1**: Addressable Monitor Module for one zone of normally-open dry-contact initiating devices. Moun...

lang:en **score:31** filesize: 797.84 K page\_count: 4 document date: 2022-02-15



## [NOTIFIER NFS-320 Intelligent Addressable Fire Alarm Control Panel Datasheet](#)

Comprehensive details on the NOTIFIER NFS-320 Intelligent Addressable Fire Alarm Control Panel, part of the ONYX Series. Covers features, specifications, networking, compatible devices, and intelligent sensing capabilities for advanced fire alarm systems.

lang:en **score:30** filesize: 943.49 K page\_count: 7 document date: 2022-02-15

 




## Notifier NFS-320 Intelligent Addressable Fire Alarm System

Detailed specifications and features of the Notifier NFS-320 Intelligent Addressable Fire Alarm System, including its capabilities, intelligent sensing technology, and compatibility with various devices.

lang:en score:30 filesize: 1.13 M page\_count: 8 document date: 2022-02-19

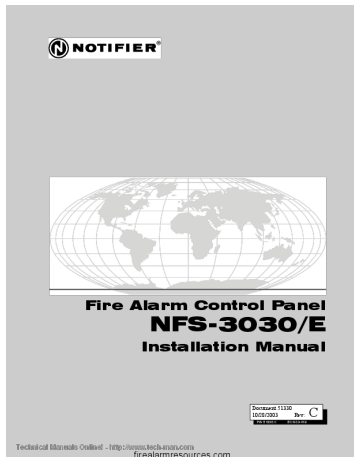

## [pdf] User Manual Instructions Specifications Guide

51330 c00 book Marys Click here to Notifier NFS 3030 Installation Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1675562292

firealarmresources 23875 |||

 
Fire Alarm Control Panel NFS-3030/E Installation Manual C Document 51330

10/28/2003 Rev: P/N 513 ... Fire Fighters Telephone FFT-7S Fire Fighters Telephone

FHS Fireman s Handset FTM-1 Telephone Module **FMM-1** Monitor Module **FMM-101**

Mini Monitor Module FSD-751P/RP/PL Duct Detectors FSI-751 Ion Detector...

lang:en score:30 filesize: 2.75 M page\_count: 68 document date: 2022-02-19

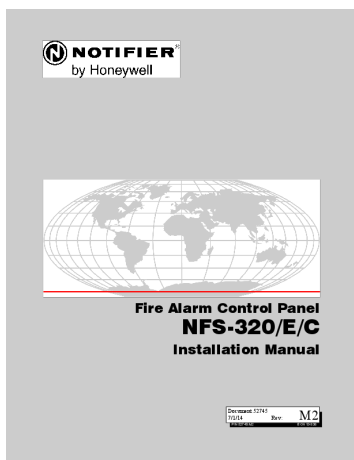

## [pdf] User Manual Documentation Guide

untitled Notifier NFS 320 fire alarm control panel manual covering installation 2014 edition notifier facp nfs 320e and 320c detection safety smoke detector suppression emergency systems building automation life documentation user guide programming operation technical reference Manuals 88 Free Downloads FACP Manuals v1 docs facpmanuals manuals |||

 
Fire Alarm Control Panel NFS-320/E/C Installation Manual Document 52745 7/1/14

Rev: P/N 52745:M2 ... Dual Monitor/Dual Relay FDU-80, FDU-80G Remote Fire

Annunciator FDX-551 Intelligent Thermal Sensor **FMM-1** Monitor Module **FMM-101**

Mini Monitor Module FRM-1 Relay Module FSA-8000 FAAST Intelligent Aspir...

lang:en score:30 filesize: 2.32 M page\_count: 64 document date: 2014-08-07

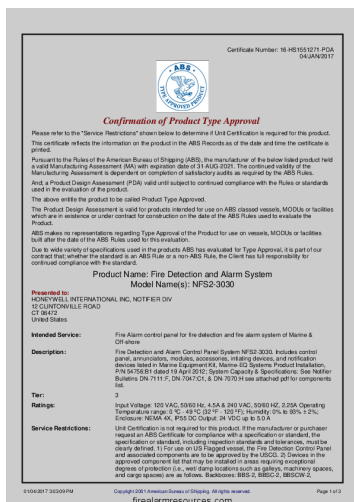

## [pdf] Instructions Specifications

Click here to Notifier ABS Confirmation of Product Type Approval NFS2 3030 Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676770119

firealarmresources 24027 |||

Certificate Number: 16-HS1551271-PDA 04/JAN/2017 Confirmation of Product Type


Approval Please refer ... : FCM-1, FDRM-1, XP6-C, XP6-R, and FCM-1-Rel. Relay

module: FRM-1 EOLR-1. Monitor modules: FDM-1, **FMM-1**, **FMM-101**, FMM-4-20,

XP10-M, and FZM-1. Loop fault isolator module: ISO-X. The Manufacturer has...

 lang:en score:30 filesize: 615.27 K page\_count: 3 document date: 2022-02-17



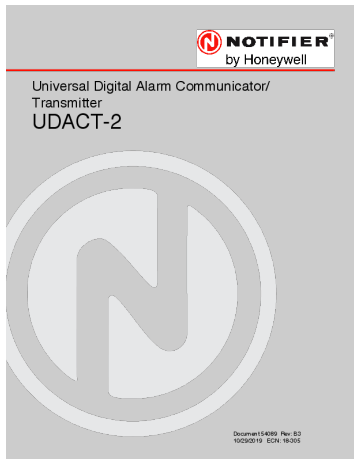

## [\[pdf\]](#) User Manual Documentation Guide

54089 UDACT 2 rev B3 book Notifier fire alarm control panel manual covering installation operations programming 2019 edition notifier facp udatc detection safety smoke detector suppression emergency systems building automation life documentation user guide operation Manuals 88 Free Downloads FACP Manuals v1 docs facpmanuals manuals |||

Universal Digital Alarm Communicator/ Transmitter UDACT-2 Document 54089 Rev: B3 10/29/2019 ECN: 18- ... it , the relay output is used to provide a UDACT-2 trouble input to the host control panel. Use an **FMM-1** module to supervise the relay closure refer to Figure 2.17 on page 21 . Program the custom la...

lang:en **score:30** filesize: 2.8 M page\_count: 52 document date: 2025-02-18




## [\[pdf\]](#) Instructions Specifications Datasheet

untitled Click here to Notifier NFS2 3030 Data Sheet Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676769100 firealarmresources 23045 |||

NFS2-3030 Intelligent Addressable Fire Alarm Control Panel General The NFS2-3030 is an intelligent ... A-485 FPTI-951 FSP-951 FST-951 FCO-951 ...etc. EIA-485 DEVICES NBG-12LX FWSG XP6/10 I/O Modules **FMM-1** FRM-1 Relay Contact IDC 3072 annunciator/control points CPU2-3030D display or CPU2-3030ND A...

 lang:en **score:30** filesize: 990.52 K page\_count: 8 document date: 2022-02-15

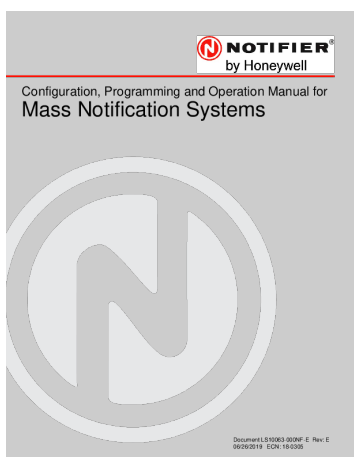

## [\[pdf\]](#) User Manual

LS10063 000NF E MNS book E650889 ba fire false prod edam honeywell content dam hbt en us documents manuals and guides installation notifier |||

Configuration, Programming and Operation Manual for Mass Notification Systems Document LS10063-000NF ... es Distribution Board and Amplifiers Manual DVC-RPU Listing Document AMPS-24 Manual ACPS-610 Manual **FMM-1** Monitor Module Installation Document **FMM-101** Mini Monitor Module Installation Document FDM-1 D...

lang:en **score:30** filesize: 975.02 K page\_count: 46 document date: 2019-06-27

[illegible][illegible][illegible]

[\[pdf\]](#) Instructions Specifications

untitled Click here to Notifier NFS2 640 Fire Alarm Resources Free fire alarm manuals documents

installation instructions and technical specifications tmstv 1676768634 firealarmresources 23811 |||

NFS2-640 Intelligent Addressable Fire Alarm System dn-7111:b A-13 General The NFS2-640 intelligen ... places B501BH. See DN-60054. B501BHT-2: Temporal tone sounder base. Replaces B501BHT. See DN-60054. **FMM-1**: FlashScan monitor module. See DN-6720. FDM-1: FlashScan dual monitor module. See DN-6720. FZM...

lang:en score:30 filesize: 1.18 M page count: 10 document date: 2022-02-19

[\[pdf\]](#) Instructions Specifications Datasheet

untitled Click here to Notifier PSE 6 10 Series Amp 24 Volt Power Supply Expanders Data Sheet Fire

Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications

tmstv 1676595551 firealarmresources 23541 |||

PSE-6/PSE-10 Series 6/10 Amp, 24 Volt Power Supply Expanders General The PS Series is a remote power supply module containing two isolated sets of Form-C contacts, which operate as a DPDT switch **FMM-1**: Addressable Monitor Module for one zone of normally open dry-contact initiating devices. Incl...

lang:en score:30 filesize: 740.98 K page count: 2 document date: 2022-02-15

[\[pdf\]](#) Instructions Specifications

[Click here to Notifier ABS Confirmation of Product Type Approval NFS 320 NFS2 640 Fire Alarm](#)

Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv

1676769636 firealarmresources 24005 |||  
 Certificate Number: 16-HS1551268-PDA 04/JAN/2017 Confirmation of Product Type  
 Approval Please refer ... / strobes: all. Control modules: FCM-1, and FCM-1-Rel.  
 Relay module: FRM-1. Monitor modules: FDM-1, **FMM-1**, 01/04/2017 3:05:15 PM  
 Copyright 2001 American Bureau of Shipping. All rights reserved. fire...

lang:en score:29 filesize: 614.83 K page count: 3 document date: 2022-02-17

 




## [pdf] Instructions Specifications Datasheet

untitled Click here to Notifier NSP 25 E Rev 2 Spartan Addressable FACP With Built in Communicator  
Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676770125 firealarmresources 23527 |||


NSP-25 E Rev 2 Spartan-25 Addressable FACP With Built-in Communicator DN-60703:A1 General The NOT ... test capable detector for use with DNR duct smoke detector housing. NMM-100P: Miniature version of **FMM-1**. Excludes LED and Style D option. Connects with wire pigtails. May mount in device backbox. NC...  
lang:en **score:29** filesize: 859.74 K page\_count: 4 document date: 2022-02-17

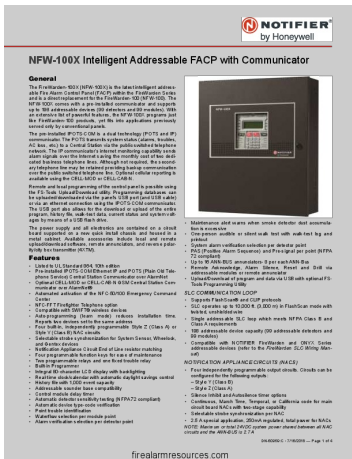

## Notifier NFW-100X Intelligent Addressable FACP with Communicator Datasheet

Datasheet for the Notifier NFW-100X Intelligent Addressable Fire Alarm Control Panel (FACP) with integrated communicator, detailing its features, specifications, and compatibility.

 
lang:en **score:29** filesize: 826.54 K page\_count: 4 document date: 2022-02-15

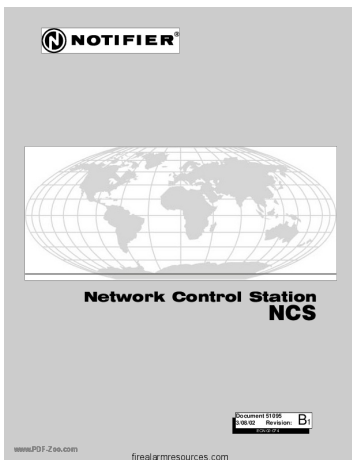

## [pdf] User Manual Instructions Specifications Guide

Click here to Notifier NCS Network Control Station 1 Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676620153 firealarmresources 22925 |||

 Network Control Station NCS www.PDF-Zoo.com B Document 51095 3/08/02  
Revision: 1 ECN 02-074 fi ... ilure Load Sharing Remote Sense - Remote Sense  
Remote Equalize 9 8 0 1 7 2 - 6 5 3 4 **FMM-1** Figure 1.6 NCS Computer UPS  
Supervision 12 www.PDF-Zoo.com firealarmresources.com NCS Manu...  
lang:en **score:29** filesize: 2.78 M page\_count: 88 document date: 2022-02-19

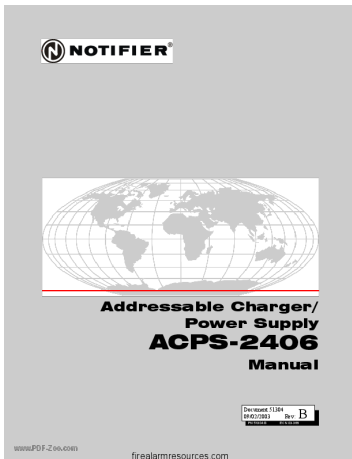

### [Notifier ACPS-2406 Addressable Charger/Power Supply Manual](#)

This manual provides detailed information on the Notifier ACPS-2406 Addressable Charger/Power Supply, covering its features, specifications, installation, configuration, applications, and power supply calculations for fire alarm systems.

 
lang:en score:29 filesize: 2.11 M page\_count: 40 document date: 2022-02-19



### [Notifier NFS-320 Intelligent Addressable Fire Alarm System Datasheet](#)

Comprehensive datasheet for the Notifier NFS-320 Intelligent Addressable Fire Alarm System, detailing its features, intelligent sensing capabilities, FlashScan protocol, system specifications, compatible devices, and agency approvals.

lang:en score:29 filesize: 1007.92 K page\_count: 6 document date: 2022-02-19

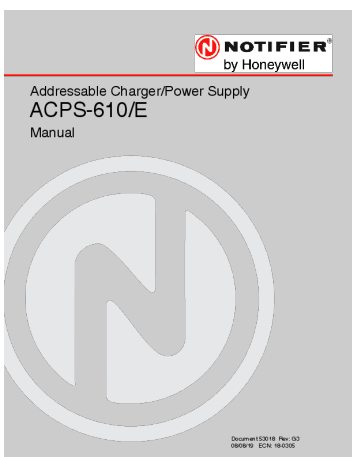

### [\[pdf\] User Manual](#)

 
53018 G3 book e451217 ACPS 610 E ba fire false prod edam honeywell content dam hbt en us

documents manuals and guides user notifier |||

Addressable Charger/Power Supply ACPS-610/E Manual Document 53018 Rev: G3 08/08/19 ECN: 18-0305 Fi ... ph.wmf Four-wire smoke detector SLC from last device SLC to next device Resettable 24 VDC power **FMM-1** \*If the SLC device does not match the one in this figure, refer to the SLC manual appendix, w...

lang:en score:29 filesize: 1.99 M page\_count: 48 document date: 2025-02-22



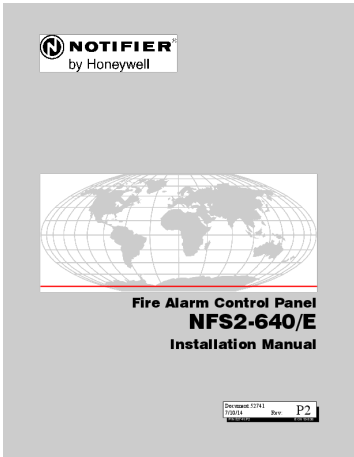

[\[pdf\]](#) User Manual Datasheet Documentation Guide

untitled Notifier NFS2 640 E fire alarm control panel manual covering installation 2014 edition notifier facp  
nfs2 e detection safety smoke detector suppression emergency systems building automation life  
documentation technical reference user guide programming Datasheet Manuals 88 Free Downloads  
FACP Manualsproxydocs facpmanuals manuals backup 2025 07 02T14 52 41 244Z |||  
Fire Alarm Control Panel NFS2-640/E Installation Manual Document 52741 7/10/14  
P/N 52741:P2 Rev: ... ay FDU-80, FDU-80G Remote Fire Annunciator FDX-551  
Intelligent Thermal Sensor FHS Fireman s Handset **FMM-1** Monitor Module **FMM-101**  
Mini Monitor Module FPJ Firefighter s Phone Jack FRM-1 Relay Module FWS...  
lang:en **score:28** filesize: 2.93 M page\_count: 78 document date: 2014-08-08




[\[pdf\]](#) Instructions Specifications

DN 60637 L fm E451217 Click here to Notifier NFS 320SYS E Intelligent Addressable Fire Alarm System  
Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv  
1676770511 firealarmresources 24427 |||  
NFS-320SYS E Intelligent Addressable Fire Alarm System DN-60637:L General The  
NFS-320SYS intellig ... IEW FSP-851 Photo FSI-851 Ion FST-851 Thermal FSA-  
8000 ...etc. FWSG NBG-12LX XP6/10 I/O Modules **FMM-1** IDC FCM-1 NAC FRM-1  
Relay Contact EIA-485 2048 annunciator/control points KDM-R2 display ...  
lang:en **score:28** filesize: 845.64 K page\_count: 6 document date: 2022-02-19



[\[pdf\]](#) Instructions Specifications

DN 62112 D mbean Click here to Notifier N16e x Fire Alarm Control Panel Resources Free fire alarm  
manuals documents installation instructions and technical specifications tmstv 1676767401  
firealarmresources 22865 |||  
N16e/x Fire Alarm Control Panel EFFICIENT, SCALABLE, CONNECTED General  
The NOTIFIER INSPIRE™ Seri ... low-frequency version of B200SR. See DN60054.  
B200SR-LF-IV: Ivory, low-frequency version of B200SR. **FMM-1**: FlashScan monitor  
module. See DN-6720. FDM-1: FlashScan dual monitor module. See DN-6720.  
FZM...  
lang:en **score:28** filesize: 4.93 M page\_count: 6 document date: 2022-02-15

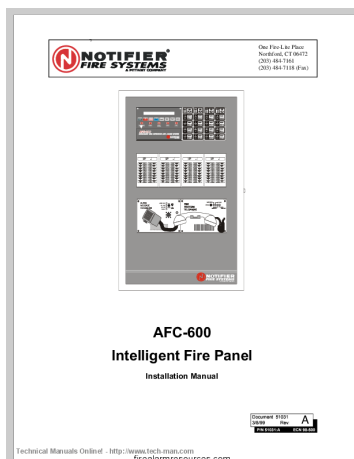 

## [\[pdf\]](#) User Manual Instructions Specifications

NOTAFC 600 INSTENGLA0 fm Click here to Notifier AFC Intelligent Fire Panel Installation Alarm

Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676668943 firealarmresources 22853 |||

7 3 2 : 5 , 5 / 5 0 35 / 50 : 5 1 , 1 \* 6 8 5 , 7 / 5 0 6 8 36 , \*519 , 6/ ... RU 00;

LQGLFDWHV FRPPXQLFDWLRLQ EHWZHHQ WKH PRGXOH DQG WKH

FRQWURO SDQHO 0RQLWRU 0RGXOH 00 =0 The **FMM-1** is similar to the MMX-1

and the FZM-1 is similar to the MMX-2 modules, except the ability to s...

lang:en **score:28** filesize: 8.06 M page\_count: 238 document date: 2022-02-17



## [\[pdf\]](#) Instructions Specifications

DN 7070 P fm E451217 Click here to Notifier NFS2 3030 Intelligent Addressable Fire Alarm System

Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676770338 firealarmresources 23095 |||


NFS2-3030 Intelligent Addressable Fire Alarm System DN-7070:P A-10 General The

NFS2-3030 is an in ... 51 FSL-751 FSP-851 FSA-8000 ...etc. SLC Intelligent Loop

DEVICES NBG-12LX FWSG XP6/10 I/O Modules **FMM-1** FRM-1 IDC Relay Contact

EIA-485 3072 annunciator/control points CPU2-3030D display or CPU2-...

 lang:en **score:28** filesize: 908.84 K page\_count: 8 document date: 2022-02-19

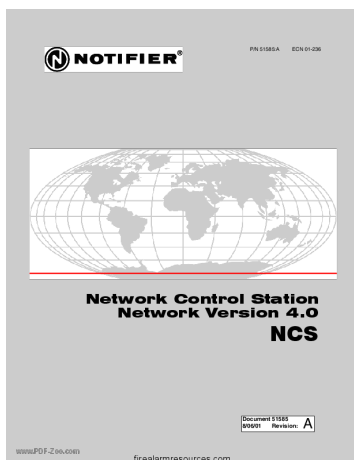

## [\[pdf\]](#) User Manual Instructions Specifications Guide

Click here to Notifier NCS Network Control Station v 4 Fire Alarm Resources Free fire alarm manuals documents installation instructions and technical specifications tmstv 1676769921 firealarmresources 23151 |||

P/N 51585:A ECN 01-236 Network Control Station Network Version 4.0 NCS

www.PDF-Zoo.com A Document ... haring Remote Sense - Remote Sense Remote

Equalize nrtupsfs.cdr 9 8 0 1 -7 6 5 2 3 4 **FMM-1** Figure 1.7 NCS Computer UPS

Supervision NCS Manual PN 51585:A 8/06/01 13 www.PDF-Zoo.com ...

lang:en **score:28** filesize: 5.91 M page\_count: 96 document date: 2022-02-19