

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› DICKIE TOYS: 24" Light and Sound Fire Brigade Vehicle (with Working Pump), Ladder Rotates by 350 Degrees, Battery Powered, for Ages 3 and up

DICKIE TOYS 203719003038

DICKIE TOYS 24" Light and Sound Fire Brigade Vehicle

Model: 203719003038 | Brand: DICKIE TOYS

1. SAFETY INFORMATION

Please read all instructions before operating the vehicle. This product is designed for children aged **36 months to 6 years**.

- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries from the toy.
- **Water Use:** Use only clean tap water in the water pump. Do not submerge the entire vehicle in water. Drain water after each use to prevent mold and damage.
- **Supervision:** Adult supervision is recommended during play, especially when using the water pump function.

2. PACKAGE CONTENTS

Your DICKIE TOYS Fire Brigade Vehicle package should include the following items:

- 1 x Fire Truck
- 3 x Fire Extinguishers (accessories)
- 4 x Traffic Cones (accessories)



Traffic cones stored on the truck.



Included fire extinguishers.

3. SETUP

3.1 Battery Installation

The Fire Brigade Vehicle requires **2 AA batteries** for its light and sound functions. The battery compartment is located on the underside of the vehicle.

1. Locate the battery compartment cover on the underside of the truck.
2. Using a screwdriver (not included), unscrew the small screw to open the battery compartment.
3. Insert 2 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.



Locate the battery compartment on the underside of the vehicle.

4. OPERATING INSTRUCTIONS

4.1 Lights and Sounds

Press the various buttons located on the side panel of the fire truck to activate different light and sound effects, simulating a real fire brigade vehicle.



The fire truck with its lights activated.

4.2 Water Pump Function

The vehicle features a working water pump for realistic play. To operate:

1. Locate the water reservoir at the rear of the truck.
2. Open the reservoir cover and fill it with clean tap water. Close the cover securely.
3. Position the ladder nozzle towards your target.
4. Press the designated button on the side panel to activate the pump and squirt water.



Water squirting from the ladder's nozzle.

4.3 Ladder Operation

The ladder can be manually extended and rotated for various rescue scenarios.

- **Extension:** Gently pull the ladder sections to extend them to the desired length.
- **Rotation:** The ladder can rotate by **350 degrees**. Manually turn the base of the ladder to position it as needed.



The fire truck with its ladder extended.

5. MAINTENANCE

- **Cleaning:** Wipe the vehicle with a damp cloth to clean. Do not use harsh chemicals or abrasive cleaners.
- **Water Drainage:** After each use of the water pump, ensure all water is drained from the reservoir and pump mechanism to prevent residue buildup and potential damage.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage. Store the vehicle in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No lights or sounds	Batteries are dead or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Water pump not squirting water	Water reservoir is empty or pump mechanism is clogged.	Fill the water reservoir with clean water. Check for any obstructions in the nozzle or hose.

Problem	Possible Cause	Solution
Ladder not moving smoothly	Obstruction or dirt in the ladder mechanism.	Inspect the ladder for any foreign objects or dirt. Clean the mechanism if necessary.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.09 x 27.17 x 10.04 inches
Item Weight	4.3 pounds
Country of Origin	China
Item Model Number	203719003038
Manufacturer Recommended Age	36 months - 6 years
Batteries Required	2 AA batteries
Manufacturer	Dickie (Imports)

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For detailed warranty terms, product support, or to purchase replacement parts, please visit the official DICKIE TOYS website or contact their customer service directly. You can also visit the [DICKIE TOYS Store on Amazon](#) for more information.

© 2024 DICKIE TOYS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question