

GoWISE USA GW22611

GoWISE USA 3.7-Quart Programmable 8-in-1 Air Fryer GW22611 User Manual

Model: GW22611

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your GoWISE USA 3.7-Quart Programmable 8-in-1 Air Fryer, model GW22611. Please read this manual thoroughly before first use and retain it for future reference. This appliance utilizes a Rapid Air Circulating System to cook food by circulating hot air, offering an alternative to traditional frying methods.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance features overheat protection, automatic switch-off, and automatic standby mode for enhanced safety.
- The GoWISE USA Air Fryer is ETL certified and complies with all standards regarding Electro-Magnetic fields.

3. PRODUCT OVERVIEW

The GoWISE USA Air Fryer GW22611 is designed for frying, grilling, roasting, and baking various foods. It features a digital control panel and a removable basket system.



Figure 1: Front view of the GoWISE USA 3.7-Quart Programmable 8-in-1 Air Fryer GW22611. This image displays the appliance's overall design, including the digital control panel and the handle for the cooking basket.

Components:

- Main Unit
- Removable Pan with Cool-to-Touch Handgrip
- Detachable Cooking Basket
- Digital Control Panel





Figure 2: The air fryer with its cooking basket pulled out, revealing the internal structure and the basket design. This illustrates how the basket is accessed for loading and unloading food.

Control Panel:



Figure 3: A detailed view of the digital control panel. It features a display for time and temperature, along with buttons for power, start/cancel, manual time/temperature adjustment, and 8 preset cooking functions.

- **Digital Display:** Shows cooking time and temperature.

- **Start/Cancel Button:** Initiates or stops the cooking process.
- **Temperature Control Buttons (+/-):** Adjusts cooking temperature (176°F - 392°F).
- **Time Control Buttons (+/-):** Adjusts cooking time (up to 30 minutes).
- **Preset Buttons:** 8 dedicated buttons for common food types: Warm-Up, Chips, Chicken, Steak, Shrimp, Meat, Cake, Fish.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage.
2. **Cleaning:** Before first use, clean the cooking basket and pan with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

General Operation:

1. Pull out the pan and basket assembly using the cool-to-touch handgrip.
2. Place ingredients into the cooking basket. Do not overfill.
3. Slide the pan and basket assembly back into the air fryer until it clicks into place.
4. Press the Power button to turn on the appliance.
5. **Manual Setting:** Use the Temperature (+/-) buttons to set the desired temperature (176°F - 392°F) and the Time (+/-) buttons to set the cooking duration (up to 30 minutes).
6. **Preset Setting:** Alternatively, select one of the 8 preset cooking functions.
7. Press the Start button to begin cooking.
8. During cooking, you can pull out the basket to shake or turn ingredients. The air fryer will pause and resume once the basket is reinserted.
9. Once the timer reaches zero, the air fryer will automatically switch off. Carefully remove the basket and transfer food to a serving dish.



Figure 4: The cooking basket filled with cooked French fries, demonstrating the appliance's capacity and the type of food it can prepare. The handle is visible for easy removal.

6. COOKING PRESETS

The GoWISE USA Air Fryer GW22611 includes 8 pre-programmed settings to simplify cooking for common food items:

- **Warm-Up:** For reheating or keeping food warm.
- **Chips:** Optimized for French fries and similar potato products.
- **Chicken:** Suitable for chicken pieces or small whole chickens.
- **Steak:** For cooking various cuts of steak.
- **Shrimp:** Ideal for preparing shrimp and other small seafood.
- **Meat:** General setting for various meat preparations.
- **Cake:** For baking small cakes or desserts.
- **Fish:** Designed for cooking fish fillets or other seafood.

Refer to the included recipe book for specific cooking times and temperatures for a wider range of foods.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely.
2. **Basket and Pan:** The removable pan and detachable basket are dishwasher safe. For manual cleaning, use warm water, dish soap, and a non-abrasive sponge. Ensure all food residue is removed.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your GoWISE USA Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill the basket. Shake or turn ingredients halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly after each use. For fatty foods, consider draining excess fat during cooking.
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before cooking. A light coating of oil can also help.

9. SPECIFICATIONS

- **Model:** GW22611
- **Brand:** GoWISE USA
- **Capacity:** 3.7 Quarts (approximately 3.5 Liters)
- **Wattage:** 1500 Watts
- **Temperature Control:** 176°F - 392°F (80°C - 200°C)
- **Timer:** Up to 30 minutes
- **Control Method:** Touch (Digital)
- **Material:** Plastic
- **Product Dimensions:** 24.13 x 22.86 x 30.48 cm
- **Item Weight:** 4.99 kg
- **Special Features:** Programmable, Overheat Protection, Automatic Switch-off, Automatic Standby Mode
- **Certifications:** ETL Certified

10. WARRANTY AND SUPPORT

For any questions regarding the GoWISE USA Air Fryer GW22611 and its operation, please contact GoWISE USA customer service. Refer to your product registration or packaging for specific warranty details and contact information.

© 2023 GoWISE USA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question