

JENSEN JMC-1250

Jensen® Bluetooth® 3 Speed Stereo Turntable 3 CD Changer Music System

INSTRUCTION MANUAL

Introduction

The Jensen JMC-1250 is a versatile music system designed to play various audio formats, including vinyl records, CDs, and cassette tapes. It also features Bluetooth connectivity for streaming audio from compatible devices and an AM/FM radio tuner. This manual provides detailed instructions for setting up, operating, and maintaining your music system.



Figure 1: The Jensen JMC-1250 Bluetooth 3-Speed Stereo Turntable 3 CD Changer Music System with Dual Cassette Deck and Remote Control.

Safety Information

Please read all safety and operating instructions carefully before using this product. Retain these instructions for future reference.

- **Power Source:** Connect the unit only to the power supply indicated in the operating instructions or as marked on the appliance.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Water and Moisture:** Do not use this apparatus near water or in damp environments.
- **Heat:** Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning.
- **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

What's in the Box

Upon opening the packaging, please verify that all components are present and in good condition:

- Jensen JMC-1250 Music System Unit
- Remote Control (requires 2 AAA batteries, not included)
- Instruction Manual
- Detachable Speakers (2)

Setup

Follow these steps for initial setup of your Jensen JMC-1250 music system:

1. **Placement:** Place the main unit on a stable, flat surface. Ensure there is adequate space around the unit for ventilation.
2. **Speaker Connection:** Connect the left and right speakers to the corresponding speaker terminals on the back of the main unit. Ensure correct polarity (+ to + and - to -).
3. **Antenna Connection:** Extend the FM wire antenna for optimal FM reception. For AM reception, adjust the position of the unit for best signal.
4. **Power Connection:** Plug the AC power cord into a standard wall outlet (AC 120V ~ 60Hz).
5. **Remote Control Batteries:** Open the battery compartment on the remote control and insert 2 AAA batteries, observing the correct polarity.



Figure 2: Proper placement of the Jensen JMC-1250 system for optimal sound and ventilation.

Operating Instructions

General Controls

Familiarize yourself with the main control panel:



Figure 3: Close-up view of the Jensen JMC-1250's main control panel, showing buttons for power, mode selection, volume, EQ, and playback controls.

- **POWER Button:** Press to turn the unit ON or OFF.
- **FUNCTION/MODE Button:** Press to switch between PHONO, CD, TAPE, FM, AM, and BLUETOOTH modes.
- **VOLUME Control:** Rotate the knob to adjust the overall volume level.
- **EQ Button:** Press to cycle through preset equalizer modes (e.g., Flat, Rock, Pop, Classic, Jazz).

Turntable Operation

1. Lift the dust cover.
2. Place a record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the SPEED selector switch.
4. Move the tone arm to the desired position on the record. The turntable will start automatically.
5. At the end of the record, the turntable will stop automatically. Return the tone arm to its rest.

CD Player Operation

The unit features a 3-CD rotary changer compatible with Audio CDs, MP3 CDs, and CD-R/RW discs.



Figure 4: The 3-compact disc rotary changer system, allowing multiple CDs to be loaded for continuous playback.

1. Press the CD button to select CD mode.
2. Press the OPEN/CLOSE button to open the CD tray.
3. Place up to three CDs on the disc trays, label side up.
4. Press the OPEN/CLOSE button again to close the CD tray.
5. Playback will begin automatically. Use the SKIP/SEARCH buttons to navigate tracks and the PLAY/PAUSE button to control playback.

Cassette Deck Operation

The unit includes a dual cassette deck with auto-stop function.



Figure 5: The dual cassette deck with Deck 1 for recording/playback and Deck 2 for playback only.

1. Press the TAPE button to select Tape mode.
2. Press the EJECT button for Deck 1 or Deck 2 to open the cassette door.
3. Insert a cassette tape with the exposed tape facing downwards.
4. Close the cassette door.
5. Press the PLAY button (►) to begin playback. Use the FAST FORWARD (►►) and REWIND (◀◀) buttons to navigate.
6. To record, insert a blank tape into Deck 1. Select the desired source (CD, Phono, Radio, or AUX). Press the RECORD button (●) on Deck 1.

Bluetooth Operation

1. Press the BLUETOOTH button to select Bluetooth mode. The Bluetooth indicator will flash.
2. Enable Bluetooth on your mobile device and search for "JMC-1250".
3. Select "JMC-1250" from the list of available devices to pair. Once paired, the indicator will stop flashing and remain

solid.

4. You can now stream audio from your device to the music system.

AM/FM Radio Operation

1. Press the FM or AM button to select the desired radio band.
2. Press the TUNING UP/DOWN buttons to manually tune to a station.
3. Press and hold the TUNING UP/DOWN buttons for automatic scanning to the next available station.
4. To preset stations, tune to the desired station, then press the PROGRAM button. Use the SKIP/SEARCH buttons to select a preset number, then press PROGRAM again to save.

Maintenance

Proper care and maintenance will ensure the longevity of your music system.

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Turntable Stylus Care:** Gently clean the stylus periodically with a soft brush, brushing from back to front. Replace the stylus when sound quality deteriorates.
- **Cassette Deck Care:** Clean the tape heads, capstan, and pinch roller after every 10-20 hours of operation using a cotton swab lightly moistened with isopropyl alcohol.
- **CD Lens Care:** Do not touch the CD lens. If the CD player experiences reading errors, a CD lens cleaner disc may be used.
- **Dust Cover:** Keep the dust cover closed when the turntable is not in use to prevent dust accumulation.

Troubleshooting

Problem	Possible Cause	Solution
No Power	Power cord not securely plugged in.	Check power cord connection to the unit and wall outlet.
No Sound	Volume too low; Speakers not connected; Incorrect function mode.	Increase volume; Check speaker connections; Select correct function mode.
Turntable not spinning / No sound from record	Speed setting incorrect; Tone arm not placed on record; Stylus damaged.	Adjust speed; Place tone arm on record; Inspect/replace stylus.
CD Player not reading disc	Disc inserted incorrectly; Disc dirty or scratched; Lens dirty.	Insert disc correctly; Clean or replace disc; Use CD lens cleaner.
Cassette tape not playing / eating tape	Tape tangled; Tape heads dirty; Pinch roller worn.	Check tape condition; Clean tape heads and pinch roller.
Bluetooth pairing failed	Device too far; Bluetooth not enabled on device; Unit not in pairing mode.	Move device closer; Enable Bluetooth; Ensure unit is in Bluetooth mode and flashing.

Specifications

- **Model Name:** JMC-1250
- **Product Dimensions:** 15.04 x 12 x 16.14 inches
- **Item Weight:** 27.5 pounds
- **Power Source:** AC 120V ~ 60Hz

- **Turntable Speeds:** 33 1/3, 45, 78 RPM
- **CD Compatibility:** CD, CD-R/RW, MP3 CD
- **Cassette Deck:** Dual, Auto Stop
- **Bluetooth Version:** 3.0 (Supports A2DP, HFP)
- **Radio Tuner:** AM/FM PLL Digital Tuning
- **Included Components:** Music System, Remote Control, Instruction Manual


Warranty and Support

This Jensen product is covered by a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or service inquiries, please visit the official Jensen website or contact their customer service department.

An electronic version of this user manual is available for download:[Jensen JMC-1250 User Manual \(PDF\)](#)

© 2024 JENSEN. All rights reserved. Model: JMC-1250.


Documents - JENSEN – JMC-1250

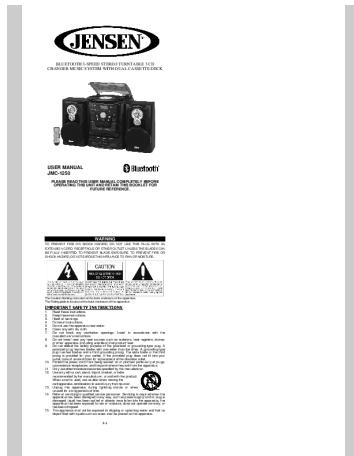

[Jensen JMC-1250 Bluetooth 3-Speed Stereo Turntable System User Manual](#)

Comprehensive user manual for the Jensen JMC-1250 Bluetooth 3-Speed Stereo Turntable Music System with Dual Cassette Deck. Learn about setup, operation, features, safety instructions, and troubleshooting.

lang:en score:42 filesize: 1.84 M page_count: 12 document date: 2019-07-23

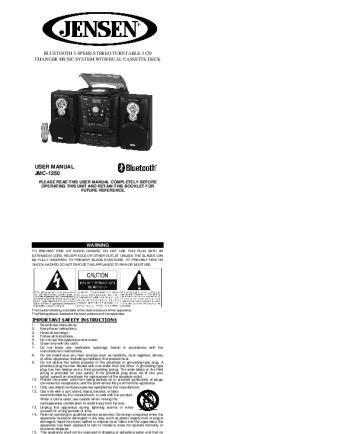

[\[pdf\] User Manual Installation Guide Instructions](#)

JMC 1250 English UM USA 0514 Miriam USER MANUAL 1250USER 1250A198lo3hIKLm media amazon images | A198lo3hIKL ref dp product quick view |||

BLUETOOTH 3-SPEED STEREO TURNTABLE 3 CD CHANGER MUSIC SYSTEM WITH DUAL CASSETTE DECK USER MANUAL **JMC-1250** PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE. WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION C...

lang:en score:32 filesize: 1.82 M page_count: 12 document date: 2017-08-07



BLUETOOTH 3-SPEED STEREO TURNTABLE 3 CD
CHANGER MUSIC SYSTEM WITH DUAL CASSETTE DECK



USER MANUAL
JMC-1250

Bluetooth®

PLEASE READ THIS USER MANUAL, OWNERS' GUIDE AND OWNER'S MANUAL
FOR FUTURE REFERENCE.

WARNING

CAUTION

DISPOSAL SAFETY INSTRUCTIONS

DISPOSAL SAFETY INSTRUCTIONS



BLUETOOTH 3-SPEED STEREO TURNTABLE 3 CD
CHANGER MUSIC SYSTEM WITH DUAL CASSETTE DECK



USER MANUAL
JMC-1250

Bluetooth®

PLEASE READ THIS USER MANUAL, OWNERS' GUIDE AND OWNER'S MANUAL
FOR FUTURE REFERENCE.

WARNING

CAUTION

DISPOSAL SAFETY INSTRUCTIONS

DISPOSAL SAFETY INSTRUCTIONS

[JENSEN JMC-1250 Bluetooth Stereo Turntable System User Manual](#)

Comprehensive user manual for the JENSEN JMC-1250 Bluetooth 3-Speed Stereo Turntable, 3 CD Changer Music System with Dual Cassette Deck. Includes setup, operation, safety, troubleshooting, and specifications.

lang:en score:32 filesize: 1.82 M page_count: 12 document date: 2017-08-07

[Jensen JMC-1250 Bluetooth Stereo Turntable System User Manual](#)

Comprehensive user manual for the Jensen JMC-1250 Bluetooth 3-speed stereo turntable and 3 CD changer music system with dual cassette deck. Includes setup, operation, safety, maintenance, and troubleshooting.

lang:en score:29 filesize: 1.81 M page_count: 12 document date: 2015-03-17


Goldsound HF-638PB (Aus)
Rating label
Date: 10/05/2014
Date: 10/05/2014
Date: 10/05/2014



[Goldsound HF-638PB/HF-638PBT Stereo Turntable System: Specifications and Label Information](#)

Detailed specifications, rating label information, and back plate details for the Goldsound HF-638PB/HF-638PBT stereo turntable music system, including compliance and connectivity.


lang:en score:26 filesize: 1.26 M page_count: 2 document date: 2014-05-23

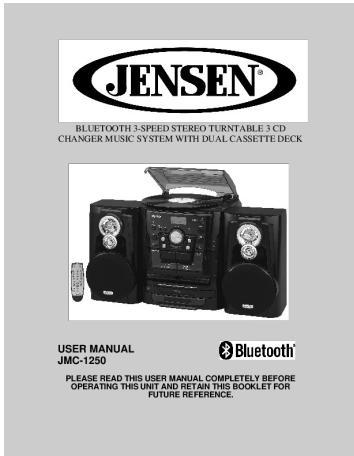

[Jensen JMC-1250 Bluetooth 3-Speed Stereo Turntable User Manual](#)

Comprehensive user manual for the Jensen JMC-1250 Bluetooth 3-Speed Stereo Turntable with CD Changer and Dual Cassette Deck. Learn about setup, operation, features, safety, and troubleshooting.

lang:en score:25 filesize: 3.19 M page_count: 24 document date: 2014-05-18

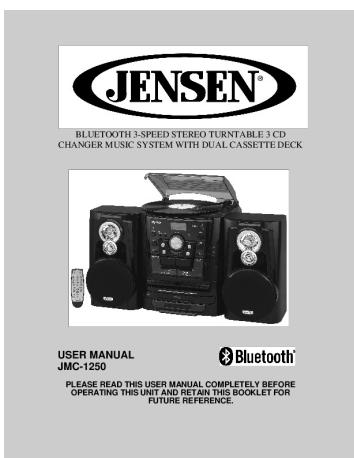


[\[pdf\] User Manual Installation Guide Instructions](#)

Microsoft Word JMC 1250 English UM USA 0514 Clement USER MANUAL Spectra Merchandising TO PREVENT FIRE OR SHOCK HAZARD DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OTHER OUTLET UNLESS THE BLADES CAN 23 Battery shall not be exposed to excessive heat such as sunshine fire or the like 24 Excessive sound pressure from earphones and headphone can cause user manual jmc please read this completely before operating unit retain booklet for future reference e 1 warning prevent shock hazard do use plug with an extension cord receptacle other outlet unless blades fully inserted blade exposure E1B bcb4a9c2 ceef 407d b439 561421b135f0 spectraintl images stories jn teledynamics tresources

BLUETOOTH 3-SPEED STEREO TURNTABLE 3 CD CHANGER MUSIC SYSTEM WITH DUAL CASSETTE DECK USER MANUAL JMC-1250 PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE. WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION...

lang:en score:25 filesize: 3.65 M page_count: 23 document date: 2014-07-16

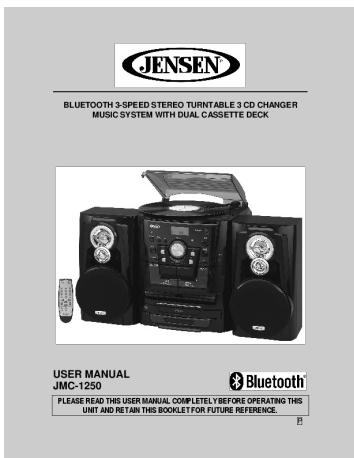

[\[pdf\] User Manual Installation Guide Instructions](#)

Microsoft Word JMC 1250P English UM USA 0416 CWL USER MANUAL 1250 Spectra Merchandising Please read this user manual completely before operating unit and retain booklet for future reference PLEASE READ THIS COMPLETELY BEFORE OPERATING UNIT AND RETAIN BOOKLET FOR FUTURE REFERENCE E1B spectraintl images stories jn

BLUETOOTH 3-SPEED STEREO TURNTABLE 3 CD CHANGER MUSIC SYSTEM WITH DUAL CASSETTE DECK USER MANUAL JMC-1250 PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE. P WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSI...

lang:en score:24 filesize: 3.09 M page_count: 26 document date: 2016-04-13



[pdf] Test Report

14031435HKG 001 allenw Test Report Goldsound Electronic Limited HF638BPT 3 CD Changer Hi Fi

RQU RQUHF638BPT hf638bpt

Intertek Valued Quality. Delivered. Issuing Laboratory: Intertek Testing Services Hong Kong Limited ... k B, C, Tanghuanling Industrial Park, Chashan Town, Dongguan, China. Goldsound / Jensen HF-638PBT / **JMC-1250** Transceiver 3 CD Changer Hi Fi N/A RQU-HF638BPT March 31, 2014 March 31, 2014 to April 30, ...

lang:en score:10 filesize: 381.93 K page_count: 22 document date: 2014-06-12

TEST REPORT
Report No.: 14031435HKG-001
Goldsound Electronic Limited

Application
For
Certification
(Digital Grant)
(FCC ID: RQU-HF638BPT)
Transceiver

Prepared and Checked by: Approved by:

Wong Kaik Young, Ronalds
Lead Engineer

Chan Ching, Tony
Supervisor
Date: June 12, 2014

Intertek Testing Services Hong Kong Limited
14031435HKG-001 allenw Test Report Goldsound Electronic Limited HF638BPT 3 CD Changer Hi Fi
RQU RQUHF638BPT hf638bpt