

Accutime US9483

Accutime US Polo Assn. Sport US9483 Men's Sport Watch

USER MANUAL

Model: US9483

1. INTRODUCTION

Thank you for choosing the Accutime US Polo Assn. Sport US9483 Men's Sport Watch. This manual will guide you through the features, setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure proper use and longevity of your watch.

Important Safety Note: This watch is NOT water resistant. Avoid exposure to water, including rain, splashes, and submersion, to prevent damage.

2. PRODUCT OVERVIEW

The US Polo Assn. Sport US9483 watch features a robust design with both analog and digital time displays, offering versatility and functionality. It includes a black multi-function round dial, double-sided silver pushers, and a comfortable orange silicone strap.

2.1 Watch Components

- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, and other functions.
- **Pushers:** Buttons on the side for operating digital functions.
- **Crown:** Used for setting analog time.
- **Silicone Strap:** Durable and comfortable for daily wear.



Figure 2.1: Front view of the Accutime US Polo Assn. Sport US9483 watch, showcasing its black multi-function dial, orange silicone strap, and silver pushers.



Figure 2.2: Rear view of the watch, showing the stainless steel case back and the attachment of the orange silicone strap.



Figure 2.3: Side profile of the watch, highlighting the oversized 49mm case and the placement of the control pushers and crown.

3. SETUP

3.1 Setting Analog Time

1. Pull the crown out to the first position.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to its original position to start the analog movement.

3.2 Setting Digital Time and Date

The digital display typically has multiple modes (Time, Date, Alarm, Chronograph, Dual Time). Use the 'MODE' button (usually bottom-left pusher) to cycle through these modes.

1. Press the 'MODE' button until the digital time display flashes or enters setting mode.
2. Use the 'RESET' button (usually bottom-right pusher) to select the digit or setting you wish to adjust (e.g., hours,

minutes, month, day).

3. Use the 'ST/SP' button (usually top-right pusher) to increase the value.
4. Once all settings are adjusted, press the 'MODE' button again to exit the setting mode.

3.3 Battery Information

The watch comes with one product-specific battery included. When the digital display dims or stops functioning, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to avoid damaging the watch's internal components.

4. OPERATING DIGITAL FUNCTIONS

Your watch is equipped with several digital functions accessible via the pushers.

- **LIGHT:** Press the 'LIGHT' button (usually top-left pusher) to illuminate the digital display for a few seconds.
- **CHRONO (Stopwatch):**
 - a. Enter Chrono mode using the 'MODE' button.
 - b. Press 'ST/SP' to start/stop the stopwatch.
 - c. Press 'RESET' to reset the stopwatch to zero.
- **ALARM:**
 - a. Enter Alarm mode using the 'MODE' button.
 - b. Use 'RESET' to select the hour/minute to set.
 - c. Use 'ST/SP' to adjust the alarm time.
 - d. Press 'MODE' to confirm and exit.
 - e. To turn the alarm ON/OFF, typically press 'ST/SP' while in Alarm mode.
- **DUAL TIME:** This function allows you to set and display a second time zone. Follow similar steps as setting the main digital time, but within the Dual Time mode.

5. MAINTENANCE

5.1 Cleaning

To keep your watch looking its best, wipe the case and strap regularly with a soft, dry cloth. For the silicone strap, a slightly damp cloth can be used, but ensure no moisture enters the watch case. Do not use chemical cleaners or abrasive materials.

5.2 Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.





Figure 5.1: The Accutime US Polo Assn. Sport watch stored within its original protective box.

6. TROUBLESHOOTING

- **Digital Display is Blank or Dim:** The battery may be low or depleted. Refer to Section 3.3 for battery information.
- **Analog Hands Not Moving:** Check if the crown is pushed all the way in. If it is, the battery for the analog movement might be depleted.

- **Time is Inaccurate:** Ensure the watch has not been exposed to strong magnetic fields. Reset both analog and digital times as per Section 3.
- **Watch Damaged by Water:** As stated, this watch is NOT water resistant. Any water exposure will likely cause irreparable damage. This is not covered under warranty.

If problems persist, please contact the manufacturer's customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Accutime / U.S. Polo Assn. Sport
Model Number	US9483
Movement	Quartz (Analog and Digital Display)
Case Material	Alloy
Strap Material	Silicone
Case Diameter	49 mm (Oversized)
Crystal Material	Glass
Water Resistance	None (Not water resistant)
Product Dimensions (L x W x H)	9.9 x 8.1 x 7.4 cm
Item Weight	328 grams
Battery(ies)	1 Product-specific (included)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official U.S. Polo Assn. Sport website. Keep your proof of purchase for any warranty claims. Spare parts availability information is not provided by the manufacturer for this product.

© 2024 Accutime. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question